 




2 Tray

Acrylic Bakery Display Case

Assembly Instructions

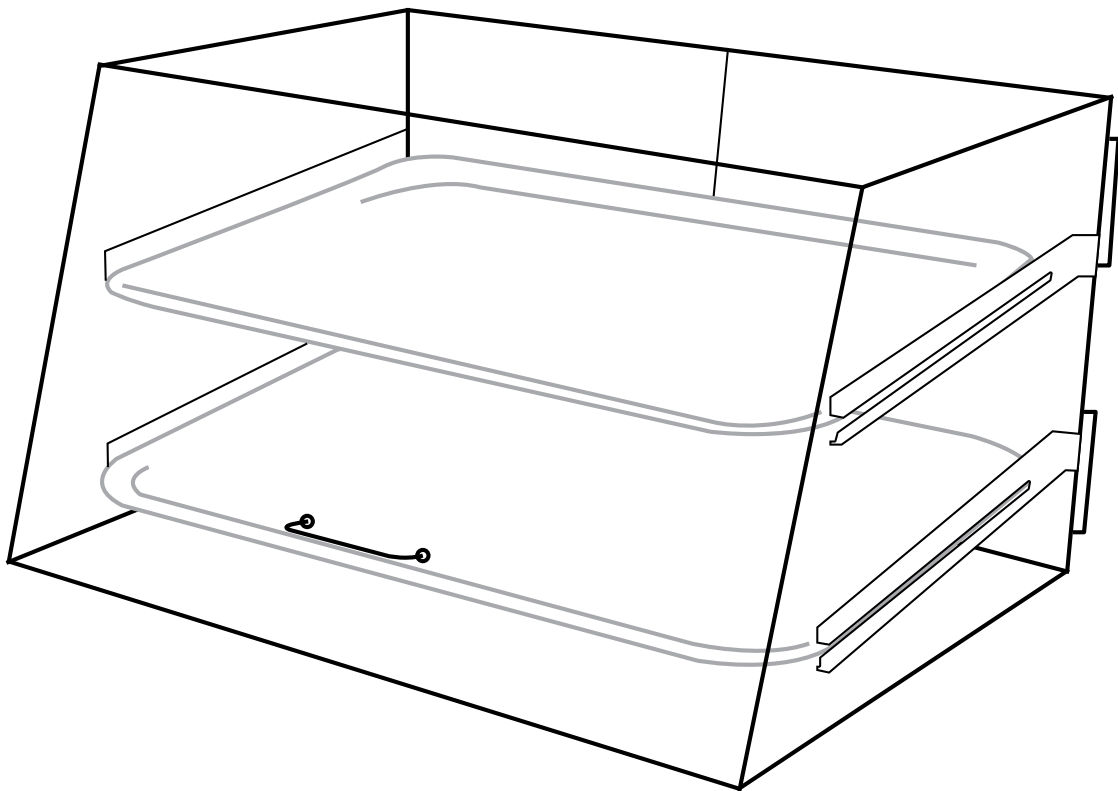

#176BDC2

A. Parts


(Please check all pieces before assembly)

- A** (12) Locking Nuts
- B** (12) Spring Washers (Big)
- C** (12) Screws (Big)
- D** (6) Screws
- E** (6) Washers
- F** (3) Plastic White Handles
- G** (2) Screws (Small)
- H** (2) Spring Washers (Small)
- I** (1) Magnet



B. Separate Sections

- A** (2) Side Sections with Hinged Doors
- B** (1) Short Bent Section (Top of Case)
- C** (1) Long Bent Section (Bottom of Case)
- D** (1) Front Section
- E** (2) Choice Trays

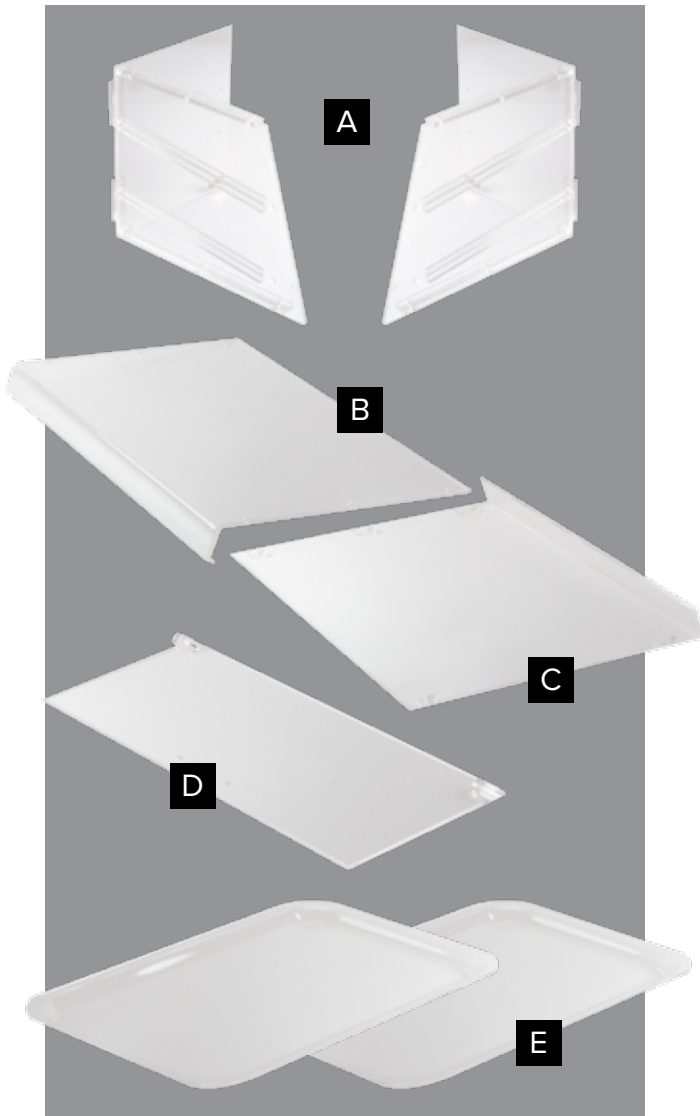

C. Assembly Steps

1. Assemble magnet and 3 handles on display doors.



2. Place the 2 side sections with hinged doors upside down. Fasten the long bent section (bottom of the case) to the side sections using 6 big screws, locking nuts and the washers.



3. Flip back over. Hold the back of the short bent section (top of the case) in place using 4 big screws, locking nuts and washers. Do not fasten yet.

4. Attach the front door with one handle.

5. Add 2 more big screws, locking nuts and washers to the top of the case. Fasten the top of the case using all 12 screws, locking nuts and washers. Check that all parts are correctly aligned.



6. Slide the 2 Choice trays into the grooves inside the display

