




# **3 Tray**

## **Acrylic Bakery Display Case**

### Assembly Instructions

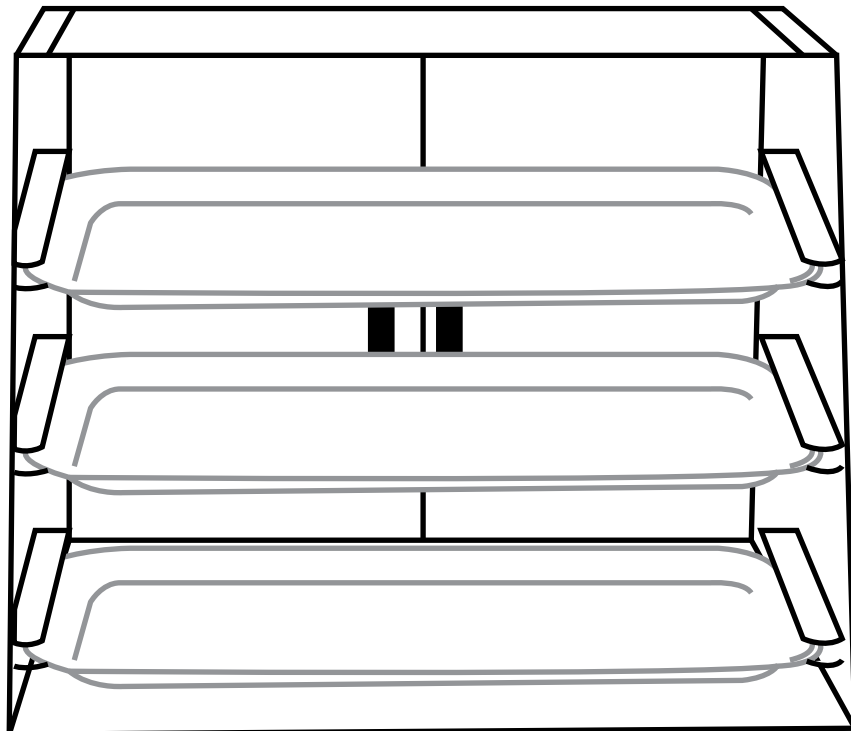


#176BDC3

## A. Parts


(Please check all pieces before assembly)

- A** (16) Locking Nuts
- B** (16) Spring Washers (Big)
- C** (16) Screws (Big)
- D** (4) Screws
- E** (4) Washers
- F** (2) Plastic White Handles
- G** (2) Screws (Small)
- H** (2) Spring Washers (Small)
- I** (1) Magnet

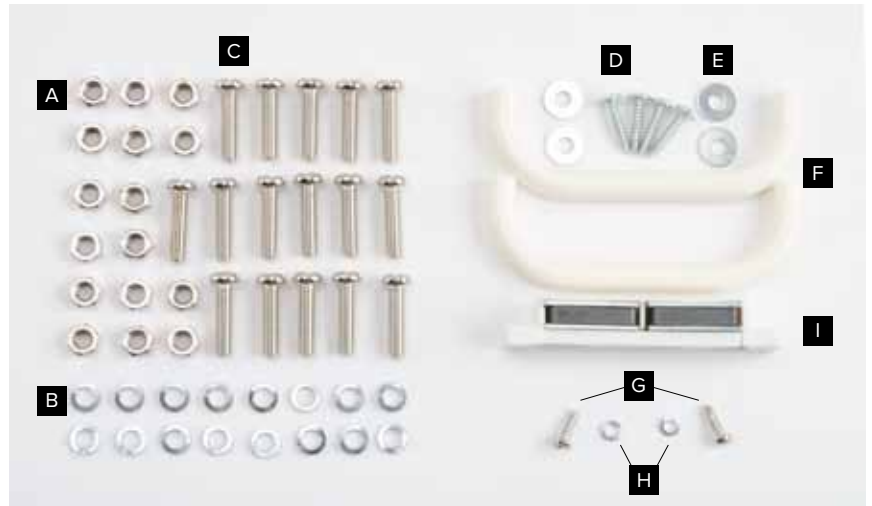

## B. Separate Sections

- A** (2) Side Sections with Hinged Doors
- B** (1) Short Bent Section (Top of Case)
- C** (1) Long Bent Section (Bottom of Case)
- D** (1) Front Section
- E** (3) Choice Trays

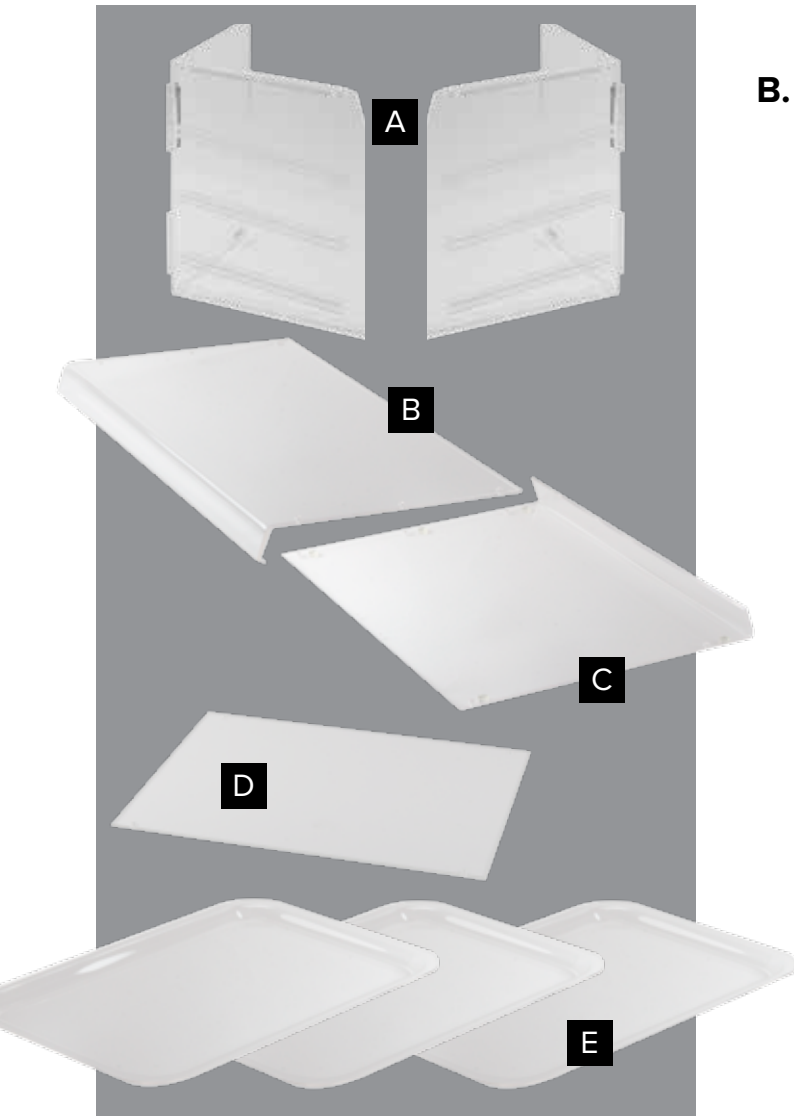


## C. Assembly Steps

1. Assemble magnet and 2 handles on display doors.



2. Place the 2 side sections with hinged doors upside down. Fasten the long bent section (bottom of the case) to the side sections using 6 big screws, locking nuts and the washers.

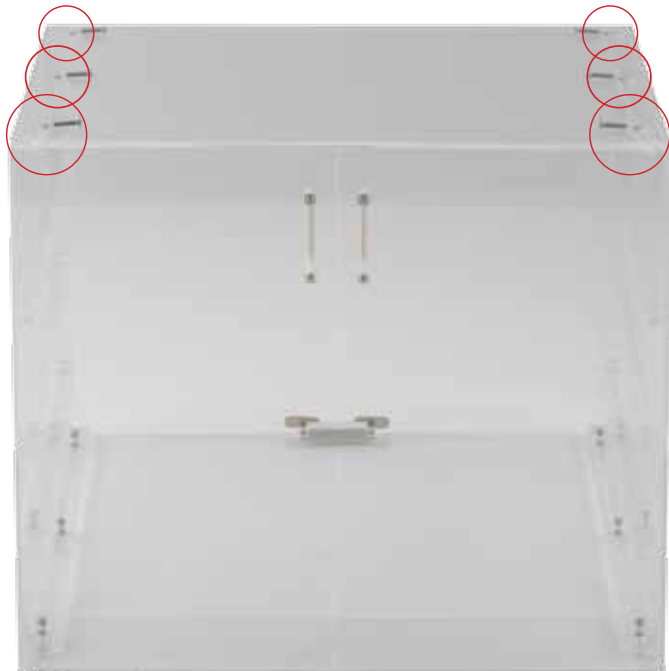

3. Flip back over. Fasten the short bent section (top of the case) using 6 big screws, locking nuts and washers, and then attach the front section.

5. Slide the 3 Choice trays into the grooves inside the display

