

BACKYARD PRO

DOUBLE BURNER OUTDOOR PATIO/STOVE

554BP2D12



THIS INSTRUCTION MANUAL CONTAINS INFORMATION NECESSARY FOR SAFETY, ASSEMBLY AND USE OF THIS APPLIANCE. DO NOT USE THE APPLIANCE UNTIL YOU HAVE READ THIS MANUAL.

KEEP THIS MANUAL FOR FUTURE REFERENCE.

BACKYARD PRO

Contents

1. Assembly Instructions
2. Pre-Cooking Precautions
3. Lighting Instructions
4. Storage Instructions
5. Important Reminders



**FOLLOW ALL INSTRUCTIONS IN THIS MANUAL
FOR SAFE AND EFFECTIVE OPERATION.**

**FAILURE TO FOLLOW INSTRUCTIONS MAY
RESULT IN PROPERTY DAMAGE, GREASE FIRE,
PERSONAL INJURY OR DEATH.**

**VENDOR AND RETAILER ARE NOT RESPONSIBLE
FOR MISUSE OF THIS PRODUCT.**

1. ASSEMBLY INSTRUCTIONS

You will need:

1. An adjustable wrench
2. A Phillips head screwdriver



1. Remove all components from the box and individual packaging.
2. Turn base frame upside down.
3. **Leg Attachment:**
 - a. Align the leg holes with the corresponding frame holes to achieve desired height (12" or 25").
 - b. Attach *long* bolts, washers and nuts.
 - c. Tighten with wrench.
4. **Shelf Attachment:**
 - a. Align holes in shelf with guide slots on frame.
 - b. Insert a *short* bolt through the shelf and frame on the front of the unit, and one through the shelf and frame on the back of the unit.
 - c. Attach washer and nut.
 - d. Tighten with wrench; be careful not to over-tighten so that shelf may slide.
 - e. Repeat Steps A through D for second shelf.
5. **Hose to Burner Attachment:**
 - a. If the air shutter is not already attached to the burner with screws, align the air control disc over the end of the burner.
 - b. Burner's screws may need tightening; be careful not to over-tighten.
 - c. Attach each burner to dual gas connector by inserting threaded end into burner's faceplate and turn clockwise to tighten.
 - d. Insert brass hose connector into dual gas connector.
 - e. Turn hose connector clockwise with wrench until snug; be careful not to over-tighten.
6. **Burner Attachment:**
 - a. Remove nuts and washers from each burner's bottom.
 - b. Align each burner's bolt to the corresponding hole in the crossbar.
 - c. Insert the burner's bolt into the crossbar
 - d. Attach washer and nut.
 - e. Tighten with wrench.
7. Return base frame upright.

2. PRE-COOKING PRECAUTIONS



**FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN
PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.**



DO NOT OPERATE THIS APPLIANCE UNDER THE INFLUENCE OF DRUGS OR ALCOHOL.

1. Test your propane tank for gas leaks.
 - a. Attach the hose and regulator to the propane tank.
 - b. Close the regulator control valve on the hose to shut off gas flow.
 - c. Open LP cylinder valve by 1/8 to 1/4 turn.
 - d. Apply a soapy, non-abrasive liquid to all regulator and tank connections.
 - e. If any bubbles appear, there is a gas leak.

DO NOT PROCEED WITH COOKING IF THERE IS A GAS LEAK
2. If you smell gas, **immediately** shut off the supply at the tank, hose and regulator.
 - a. Extinguish any and all open flames appropriately.
 - b. **If odor continues, avoid appliance and call local fire department.**
3. Keep a BC or ABC fire extinguisher on hand at all times for emergencies.
4. **Never** place dry cookware on this burner.
5. Follow all lighting instructions in this manual.
6. **Never** leave this cooker unattended.
7. Maintain 10 feet of clearance on all sides and 25 feet between fryer and other fuels.
8. **Never** touch used cookware until liquids have cooled to 115 degrees Fahrenheit or less.
9. **In the event of wildfire**, leave appliance, call fire department and **DO NOT** attempt to extinguish fire with water.
10. In the event of precipitation, cover cooking pot, turn off fuel supply and unhook equipment.
 - a. **Do not attempt to move the equipment.**
11. **Do not** operate this appliance underneath an overhead obstruction or on a deck.
12. Thoroughly inspect and clean all equipment before cooking.
13. **Always use heat protective gloves when using this appliance.**
14. Do not cook in bare feet or sandals.
15. **Never move this appliance when it is in use.**
16. **KEEP AWAY FROM CHILDREN AND PETS.**

USE COMMON SENSE WHEN OPERATING THIS APPLIANCE.

3. LIGHTING INSTRUCTIONS

1. After inspecting all applicable utilities for leaks, close tank and hose regulator valves.
2. Reopen tank valve fully.
3. Turn burner's air control shutter so that it's almost closed.
4. Hold a lit match or long-nose lighter over the burner and slowly open regulator valve until burner ignites.
 - a. **Keep hands and face away from cooker top.**
5. Adjust air shutter on burner for a blue flame.
6. Adjust regulator control valve for desired flame height.
7. During first use, you may smell burning paint. This is normal.

4. STORAGE INSTRUCTIONS

1. Store all cleaned, maintained equipment in a cool, dry area.
2. Store propane tank away from other cooking equipment in an open area.
3. Unless repainted, the cooker will eventually rust.

5. IMPORTANT REMINDERS

1. Only adults who have read this manual may operate this appliance.
2. Never fill propane tanks over 80% full.
3. Never allow oil to exceed 350 degrees Fahrenheit.
4. Always use heat protective gloves.
5. Never operate underneath an overhead obstruction or on a deck.
6. Use common sense!
7. **Misuse of this product may result in injury, property damage or death.**