

MERRYCHEF CHEMCODB-C DIRT BUSTER III FOAMING OVEN CLEANER  
**INSTRUCTIONS FOR USE**

1. Make sure the oven is OFF and cool.
2. Remove any spills from inside the oven using paper towels.
3. Use a dry, clean brush to remove food particles from between the oven floor and the inside of the front door.
4. Wearing protective rubber gloves and protective glasses, spray Dirt Buster III foaming oven cleaner onto all internal oven surfaces EXCEPT the door seal. **Please note: do not spray this product directly into the fan opening at the rear inside of the oven.**
5. For spots of baked on food or other difficult areas, allow the product to soak for 10 minutes. Leave the oven door open during this time.
6. Use a non-abrasive nylon scrub pad to clean the oven cavity, roof, and the inside of the door. **DO NOT scrub the door seal or use metallic scouring pads.**
7. Wash off cleaner using a clean cloth and generous amounts of clean, warm water. Dry using a fresh clean cloth or paper towels.
8. Replace cleaned oven components and wipe down the outside of the oven with a damp cloth.

**IMPORTANT! DO NOT RESUME USE OF THE OVEN WITHOUT A CLEAN AIR FILTER IN PLACE.**