Pro-Max® SPLIT LID TABLE TOP TWO SIDED GRILL

MODEL CG14SPT, CG14STE, CG14SPTI, CG14SPTIG GR14SPTA, GR14SPTC, GR14STE GR14SPTK, GR14SPTI, GR14SPTIP

> Installation and Operation Instructions

> > 2M-Z5818 Rev. N 6/10/2010



GR14SPT





These symbols are intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE NOTICE

Using any part other than genuine Star factory supplied parts relieves the manufacturer of all liability.

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.


Due to periodic changes in designs, methods, procedures, policies and regulations, the specifications contained in this sheet are subject to change without notice. While Star Manufacturing exercises good faith efforts to provide information that is accurate, we are not responsible for errors or omissions in information provided or conclusions reached as a result of using the specifications. By using the information provided, the user assumes all risks in connection with such use.


MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance. Please record the model number, serial number, voltage and purchase date in the area below and have it ready when you call to ensure a faster service.

Model No.		Service Agent e listing provided with the unit				
Serial No.	or					
Voltage	for an update	ed listing go to:				
Purchase Date	Website: www.star-mfg.cor E-mail Service@star-mfg Telephone: (800) 807-9054					
	Service Help Desk					
	Business Hours:	8:00 am to 4:30 p.m. Central Standard Time				
	Telephone:	(800) 807-9054 Local (314) 781-2777				
	Fax:	(800) 396-2677 Local (314) 781-2714				
	E-mail	Parts@star-mfg.com Service@star-mfg.com Warranty@star-mfg.com				
	Website:	www.star-mfg.com				
	Mailing Address:	Star International Holdings Inc., Company 10 Sunnen Drive St. Louis, MO 63143 U.S.A				

GENERAL SPECIFICATIONS

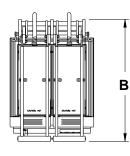


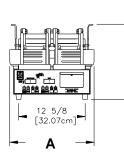


Å

С

Ą

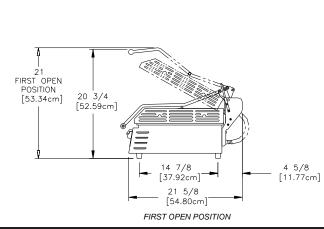

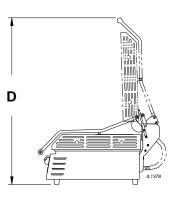

FULL OPEN POSITION

		(A) Width	(B) Depth							Approxim	ate Weight			
Model No	Grill Surface	Inches	Inches	(C) Closed Inches (cm)	(D) Open Inches (cm)	Voltage	Wattage	Amps	NEMA Plug	Shipping	Installed			
		(cm)	(cm)	(cm)	(CIII)					lbs. (kg)	lbs. (kg)			
CG14SPT-120C				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-30P					
CG14SPT-120V	Aluminum			14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					
CG14SPT-230V				14 1/4" (36.3)	31 5/8" (80.3)	230	2,112	9.2	IEC 320					
CG14SPT-240V				14 1/4" (36.3)	31 5/8" (80.3)	240	2,300	9.6	6-15P					
CG14SPTI-240				17 1/4" (43.8)	34 5/8" (87.9)	240	3,550	14.8	6-20P					
CG14SPTI-ARB	Iron			17 1/4" (43.8)	34 5/8" (87.9)	240	3,550	14.8	6-20P					
CG14SPTID240				17 1/4" (43.8)	34 5/8" (87.9)	240	3,550	14.8	6-20P					
CG14SPTIG240				17 1/4" (43.8)	34 5/8" (87.9)	240	3,550	14.8	6-20P					
CG14SPTK-120						14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P			
CG14SPTK120C				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-30P					
CG14SPTK240				14 1/4" (36.3)	31 5/8" (80.3)	240	2,300	9.6	6-15P	81 (37.8)	68 (30.9)			
CG14STKE-120				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					
GR14SPTA-120				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					
GR14SPTA120C]		23 1/8″	14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-30P					
GR14SPTA-240).6) (58.7)	14 1/4" (36.3)	31 5/8" (80.3)	240	2,300	9.6	6-15P					
GR14SPTA-CE				14 1/4" (36.3)	31 5/8" (80.3)	230	2,110	9.2	IEC 320					
GR14SPTC-120	Chromo			17 1/4" (43.8)	34 5/8" (87.9)	120	2,300	19.2	5-20P					
GR14SPTC-240		Chrome			17 1/4" (43.8)	34 5/8" (87.9)	240	2,300	9.6	6-15P				
GR14SPTI-240	Iron			17 1/4" (43.8)	34 5/8" (87.9)	240	3,550	14.8	6-20P					
GR14SPTIP240		Iron	iion				17 1/4" (43.8)	34 5/8" (87.9)	240	3,220	14.8	6-20P	6-20P	
GR14SPTK-120	Aluminum			14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					
GR14SPTK120C				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-30P					
GR14SPTK-240		minum		14 1/4" (36.3)	31 5/8" (80.3)	240	2,300	9.6	6-15P					
GR14STE-120				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					
GR14STE-120V				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					
GR14STKE-120				14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					
GR14SPTG-240				14 1/4" (36.3)	31 5/8" (80.3)	240	2,300	9.6	6-15P					
GR14SPTG-120]			14 1/4" (36.3)	31 5/8" (80.3)	120	2,300	19.2	5-20P					

GENERAL INSTALLATION DATA



This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations.

Before using your new equipment, read and understand all the instructions & labels associated with the unit prior to putting it into operation. Make sure all people associated with its use understand the units operation & safety before they use the unit.

All shipping containers should be checked for freight damage both visible and concealed. This unit has been tested and carefully packaged to insure delivery of your unit in perfect condition. If equipment is received in damaged condition, either apparent or concealed, a claim must be made with the delivering carrier.

Concealed damage or loss - if damage or loss is not apparent until after equipment is unpacked, a request for inspection of concealed damage must be made with carrier within 15 days. Be certain to retain all contents plus external and internal packaging materials for inspection. The carrier will make an inspection and will supply necessary claim forms.

INSTALLATION

- 1. This two sided grill is equipped for the voltage shown on the nameplate. It will operate on alternating current only, however the specified voltage must be applied.
- 2. 120 volt units **must** be plugged into a dedicated 120 VAC line with a 20 Amp receptacle. 230-240 volt units do not require a dedicated 240 VAC circuit with a 15 Amp receptacle.

DO NOT CONNECT THE UNIT TO ANY TYPE OF VOLTAGE OTHER THAN THAT ON THE NAMEPLATE. DOING SO WILL DAMAGE THE UNIT AND VOID THE WARRANTY.

INITIAL START UP

WARNING Level unit using the adjustable feet under the unit (approximately 1/2" adjustment).

Before using the unit for the first time, wipe down the exterior and toasting area with a damp cloth. Take to a well ventilated area and heat for approximately 30 minutes. The grill may emit a small amount of smoke as the cooking surfaces reach 450°F (232°C). Do not be alarmed, as the smoke is caused by oils associated with the manufacturing process and will stop when the burn off is complete. Brush off any debris from the toasting surface.

SEASONING THE COOKING SURFACES (NON CHROME SURFACES) FIRST TIME SEASONING

Follow your company/corporate guidelines for seasoning cooking surfaces. or

- 1. Bring the grill to 300°F (149°C) and leave it on while doing the next two steps.
- 2. Brush the cooking surfaces with a SALT-FREE release agent. If using an aerosol agent, first apply into a cup and then brush onto cooking surface.
- 3. Let sit for 20 minutes, and then wipe clean using a warm damp cloth.

DAILY SEASONING

The grill should not require much seasoning while in use. In most cases, brush a light coating of a **SALT-FREE** baking release agent in the morning and occasionally throughout the day will be enough to prevent any sticking. It is not necessary to brush before grilling each item.

PRESET TIME AND TEMPERATURE

If adjustments are required, please refer to the time or temperature programming section in this manual.

°F/°C CONVERSION

To change the temperature display from °F to °C or from °C to °F, hold the TEMP button while the unit is turned off. While holding the TEMP button, turn the unit on. The display will be the changed temperature mode. To change back, repeat the procedure.



OPERATING INSTRUCTIONS

- 1. Turn unit on by placing switch in "ON" position. The "Heat On" indicator, program number and display will flash indicating unit is heating. When the preset temperature is reached, the heating light, display and program light indicator will stop flashing followed by 3 beeps. (Initial startup heating time is approximately 30 minutes).
- 2. Place product on the bottom cooking surface of the unit and close the lids.
- 3. Press program button and let displayed time count down to "0" at which time unit will beep. To turn off the beeper, press program button again.
- 4. Raise lids until it engages into first indent and remove food. Using spatula, scrape residue into grease catcher tray.

Note: Metal utensils with rounded corners may be used, however, using nonmetal utensils will prolong the life of the cooking surface.

5. Turn the unit off when not in use.

TEMPERATURE/TIMER CONTROLLER OPERATION SPECIFICATIONS

Startup:

- 1. The preset time will flash until preset temperature is reached.
- 2. When the control reaches preset temperature, time display, "Heat On" indicator and program indicator will stop flashing and the alarm will beep three times.

Temperature:

1. To view the actual temperature, press and hold "Temp Button." Display will read "Lo F" if temperature is below 273°F (134°C) and "Hi F" if temperature is above 573°F (301°C).

To Program Time and Temperature:

- 1. Press and hold "TEMP" (actual temperature displays).
- 2. While holding "TEMP," press and hold any program button on the Left one second, the LED above the program number light and the display reads "____." Enter the four-digit security code sequence, 4, 3, 2, 1. The security code will not show on the display. Once the correct sequence has been entered, the preset time will be displayed and the LED for that program will begin to flash.
- 3. Set the time with the "+ or -" buttons.
- 4. Press the "TEMP" button to save the time.
- 5. The preset temperature will now be displayed.
- 6. Set the desired temperature for this program using the "+ or -" buttons.
- 7. Press the "TEMP" button to save temperature and to exit programming mode for this program. The LED will stop flashing but will remain lit.
- 8. Press any other program button within 15 seconds to continue programming without re-entering the security code.
- 9. While programming a program (LED is flashing), if no input is received for 15 seconds, the unit will revert to normal operation and the security code must be re-entered.

Note: Temperature settings are done with the left side buttons only. The time settings programmed on the Left buttons will also be programmed onto the *right side*. See below to make time changes to the *right side* only. *Each programming change must be saved by pressing the "TEMP" button!*

Right Side (Timer only):

- 1. To Change the time on the right side, press and hold the "TEMP" button, and press and hold any program button on the right for one second. The LED above the program button will light and the Right Display will read "____." Enter the four-digit security code sequence, 4, 3, 2, 1. The security code will not show on the display. Once the correct sequence has been entered, the preset time will be displayed and the LED for that program will begin to flash.
- 2. Set the time with the "+ or -" buttons.
- 3. Press the "TEMP" button to save the time.
- 4. The LED will stop flashing but will remain lit.
- 5. Press any other program button within 15 seconds to continue programming without re-entering the security code.
- 6. While programming a program (LED is flashing), if no input is received for 15 seconds, the unit will revert to normal operation and the security code must be re-entered.

Operation:

- Pressing any program button (1-4) will start the timer countdown and display the preset time remaining. The LED for the appropriate program will be lit during countdown and remain lit until another program is selected.
- 2. When the display reaches "00:00", the buzzer will sound and the digits will flash.
- 3. Press the program button to silence the buzzer and return the readout to programmed time.
- 4. The right and left sides will operate independently of each other. Both timers can be in operation at the same time. The "00:00" display will show which side is timed out.

MONTHLY INSPECTION

Check all bolts/screws and tighten if necessary.

CLEANING (NON-CHROME SURFACES)

Begin cleaning procedure by using the operating procedures within your organization, or follow the steps below:

1. If particles adhere to the cooking surface during the day, scrape them off with a spatula.

NOTE: It is best not to let food residue onto the grill, as food build-up on the grill will increase sticking and smoking. In addition, carbon may build up on the grill surface and reduce the cooking efficiency.

CARBON BUILDUP: A black matter that forms on or near the cooking surface. Generally this is a combination of: releasing agents, oils, food particles etc. that has cooked itself to the surface. After a period of time without cleaning, this will reduce performance and material may start flaking off. When that happens, follow the "Carbon Cleaning" procedures.

2. At the end of the day, wipe down all surfaces with a warm, damp cloth and mild detergent, then dry.

CARBON CLEANING

When carbon build up occurs, use a carbon removal agent (safe for aluminum & chrome surfaces) according to the instructions provided with the cleaner. When this process is complete, you must reseason the grill according to your company/corporate guidelines, or the seasoning instructions in this manual.



DO NOT IMMERSE OR LET THE UNIT STAND IN WATER. DO NOT HOSE DOWN THE UNIT. KEEP THE UNIT AWAY FROM RUNNING WATER.

CAUTION DO NOT SPLASH THE CONTROL HOUSING! DO NOT SPLASH THE CONDUIT CONNECTING THE TOP AND BOTTOM OF THE GRILL!



DO NOT USE ICE ON COOKING SURFACE!

BEFORE CLEANING ALL OTHER UNITS MAKE SURE POWER IS TURNED OFF AND UNIT IS UNPLUGGED.

To remove burned on grease or food residue use the following mixture:

1 Tablespoon liquid dish detergent

1 Cup of warm water

While holding top lid with one hand, apply this mixture to cold or warm top cooking surface with a sponge or plastic scrubbing pad. Wipe with clean sponge or towel until it is clean.

Empty and clean grease catcher tray as required using detergent and water after removing tray from unit.

CLEANING (CHROME SURFACES)

It takes very little time and effort to keep this Industrial Chromium griddle surface sparkling clean and performing at top efficiency. **DO NOT** allow grease to accumulate as it will carbonize and become difficult to remove. To prevent this condition the following cleaning suggestions should be followed:

- 1. Remove excess grease and food regularly with a 4" (100mm) wide Razor Sharp type scraper with rounded corners and wipe surface with a damp cloth if desired.
- 2. Following the scraping, for end of the day cleaning, a damp cloth and a non-silicated, non-abrasive, non-chlorinated cleaner such as Bon-Ami may be used to wipe surface clean, followed by wiping with a clean wet cloth.
- 3. Use a clean cloth and good non-abrasive cleaner to clean the (NON COOKING SURFACES) stainless steel body of the griddle. Wipe the control panel front with a soft cloth.
- 4. At least once a day, remove the waste drawer and wash in the same way as an ordinary cooking utensil. The drawer is removed by pulling forward and out.



- 1. Never use pumice, griddle stones, or abrasives on a chromium surface.
- 2. Never strike a chromium griddle surface with a sharp instrument or spatula edge.
- 3. Never use steel wool.
 - 4. Never use commercial liquid grill cleaner on the griddle surface.
 - 5. Abusing surface voids the warranty.



CHROME SURFACE LIMITED WARRANTY EXCLUSIONS

Your Chrome Two Sided Grill has been designed to give you many years of cooking reliability and requires minimum maintenance to keep the chrome surface in its original condition. All Chrome surfaces are warranted for a period of 1 years against manufacturing defects to the original owner from the date of installation. This limited warranty is void if it is determined by Star Manufacturing International Incorporated or one of its authorized representatives that the chrome surface has been misused or abused or subjected to the following situations:

- 1. Improperly installed.
- 2. Incorrect voltage applied to electric Pro-Max units allowing the surface to overheat and discolor.
- 3. The misuse of any instrument or tool which scratches or makes indentations in the surface which could cause the surface to peel, flake, or chip off.
- 4. The use of any chemical or abrasive cleaning solution, griddle brick, stone, screen or other cleaning products which could damage and affect the performance of the chrome surface.
- 5. The neglect of daily routine maintenance to the chromium surface.

Visit our Website at: <u>www.star-mfg.com</u>

Email: service@star-mfg.com

THOROUGHLY INSPECT YOUR UNIT ON ARRIVAL

This unit has been tested for proper operation before leaving our plant to insure delivery of your unit in perfect condition. However, there are instances in which the unit may be damaged in transit. In the event you discover any type of damage to your product upon receipt, you must immediately contact the transportation company who delivered the item to you and initiate your claim with same. If this procedure is not followed, it may affect the warranty status of the unit.

LIMITED EQUIPMENT WARRANTY

All workmanship and material in Star products have a one (1) year limited warranty on parts & labor in the United States and Canada. Such warranty is limited to the original purchaser only and shall be effective from the date the equipment is placed in service. Star's obligation under this warranty is limited to the repair of defects without charge, by the factory authorized service agency or one of its sub-agencies. Models that are considered portable (*see below*) should be taken to the closest Star service agency, transportation prepaid.

- > Star will not assume any responsibility for loss of revenue.
- > On all shipments outside the United States and Canada, see International Warranty.
- * The warranty period for the JetStar six (6) ounce & Super JetStar eight (8) ounce series popcorn machines is two (2) years.
- * The warranty period for the Chrome-Max Griddles is five (5) years on the griddle surface. See detailed warranty provided with unit.
- * The warranty period for Teflon/Dura-Tec coatings is one year under normal use and reasonable care. This warranty does not apply if damage occurs to Teflon/Dura-Tec coatings from improper cleaning, maintenance, use of metallic utensils, or abrasive cleaners. This warranty does not apply to the "non-stick" properties of such materials.
- > This warranty does not apply to "Special Products" but to regular catalog items only. Star's warranty on "Special Products" is six (6) months on parts and ninety (90) days on labor.
- > This warranty does not apply to any item that is disassembled or tampered with for any purpose other than repair by a Star Authorized Service Center or the Service Center's sub-agency.
- > This warranty does not apply if damage occurs from improper installation, misuse, wrong voltage, wrong gas or operated contrary to the Installation and Operating instructions.
- > This warranty is not valid on Conveyor Ovens unless a "start-up/check-out" has been performed by a Factory Authorized Technician.

PARTS WARRANTY

Parts that are sold to repair out of warranty equipment are warranted for ninety (90) days. The part only is warranted. Labor to replace the part is chargeable to the customer.

SERVICES NOT COVERED BY WARRANTY

- 1. Travel time and mileage rendered beyond the 50 mile radius limit
- 2. Mileage and travel time on portable equipment (see below)
- 3. Labor to replace such items that can be replaced easily during a daily cleaning routine, ie; removable kettles on fryers, knobs, grease drawers on griddles, etc.
- 4. Installation of equipment
- 5. Damages due to improper installation
- 6. Damages from abuse or misuse
- 7. Operated contrary to the Operating and Installation Instructions
- 8. Cleaning of equipment
- 9. Seasoning of griddle plates

10. Voltage conversions

- 11. Gas conversions
- 12. Pilot light adjustment
- 13. Miscellaneous adjustments
- 14. Thermostat calibration and by-pass adjustment
- 15. Resetting of circuit breakers or safety controls or reset buttons

ALL:

- 16. Replacement of bulbs
- 17. Replacement of fuses
- Repair of damage created during transit, delivery, & installation OR created by acts of God

PORTABLE EQUIPMENT


Star will not honor service bills that include travel time and mileage charges for servicing any products considered "Portable" including items listed below. These products should be taken to the Service Agency for repair:

* The Model 510FD Fryer. * Pop-Up Toasters * The Model J4R, 4 oz. Popcorn Machine. * Butter Dispensers * The Model 518CMA & 526CMA Cheese Melter. * Pretzel Merchandisers * The Model 12MC & 15MC & 18MCP Hot Food Merchandisers. * Pastry Display Cabinets * The Model 12NCPW & 15NCPW Nacho Chip/Popcorn Warmer. * Nacho Chip Merchandisers * All Hot Dog Equipment except Roller Grills & Drawer Bun Warmers. * Accessories of any kind All Nacho Cheese Warmers except Model 11WLA Series Nacho Cheese Warmer. * Sneeze Guards * All Condiment Dispensers except the Model HPDE, & SPDE Series Dispenser. * Pizza Ovens * All Specialty Food Warmers except Model 130R, 11RW Series, and 11WSA Series. * Heat Lamps * All QCS/RCS Series Toasters except Model QCS3 & RCS3 Series. * Pumps

The foregoing warranty is in lieu of any and all other warranties expressed or implied and constitutes the entire warranty.

FOR ASSISTANCE

Should you need any assistance regarding the Operation or Maintenance of any Star equipment; write, phone, fax or email our Service Department. In all correspondence mention the Model number and the Serial number of your unit, and the voltage or type of gas you are using.

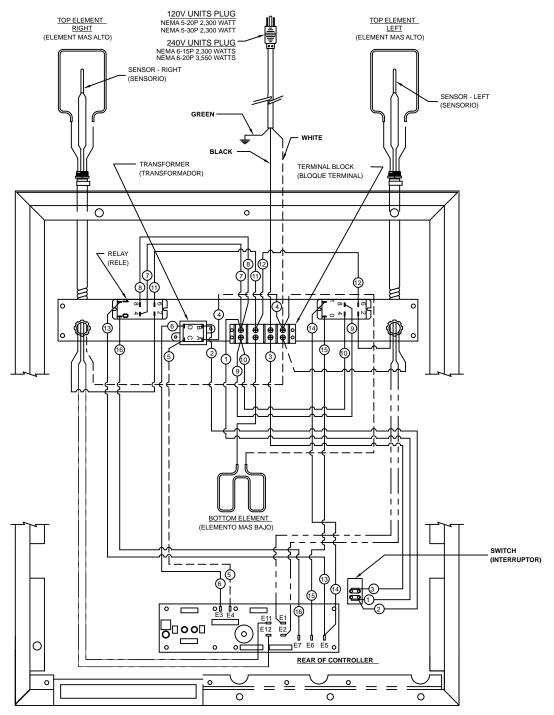

FOR REFERENCE WIRING DIAGRAM IS SHOWN AS UNIT IS ASSEMBLED WITH THE BOTTOM PLATE REMOVED. THE TOP DESCRIPTIONS ARE THEIR POSITIONS WHEN UPRIGHT.

SOME ITEMS ARE INCLUDED FOR ILLUSTRATIVE PURPOSES ONLY AND IN CERTAIN INSTANCES MAY NOT BE AVAILABLE


MODEL CG14SPT-120V CG14SPT-240V CG14SPTI-240V GR14SPTA-120V GR14SPTA-240V GR14SPTK-120C GR14SPTI-240V

WIRE DIAGRAM

120V/240V, 2300 WATT 240V, 3550 WATT (2J-Z6323 CONTROLLER ONLY)



STAR MANUFACTURING INTERNATIONAL, INC.SK2078REV. A12/28/06

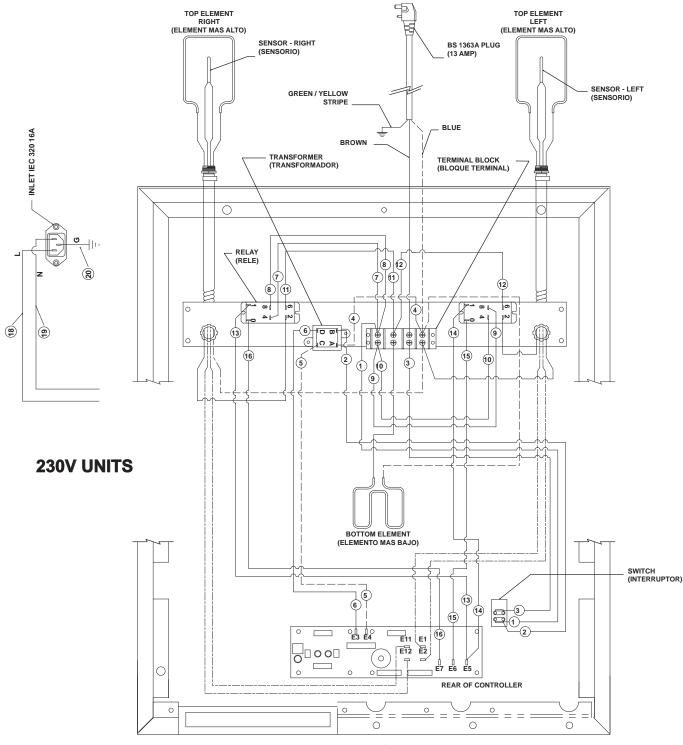

FOR REFERENCE WIRING DIAGRAM IS SHOWN AS UNIT IS ASSEMBLED WITH THE BOTTOM PLATE REMOVED. THE TOP DESCRIPTIONS ARE THEIR POSITIONS WHEN UPRIGHT.


WIRE DIAGRAM, 230V, 2300 WATT (2J-Z6323 CONTROLLER ONLY)

SOME ITEMS ARE INCLUDED FOR ILLUSTRATIVE PURPOSES ONLY AND IN CERTAIN INSTANCES MAY NOT BE AVAILABLE



THIS DRAWING CONTAINS INFORMATION CONFIDENTIAL TO STAR MFG. INT'L. INC. NO REPRODUCTION OR DISCLOSURE OF ITS CONTENTS IS PERMITTED.

STAR MANUFACTURING INTERNATIONAL INC. SK2017 Rev A 08/10/2004

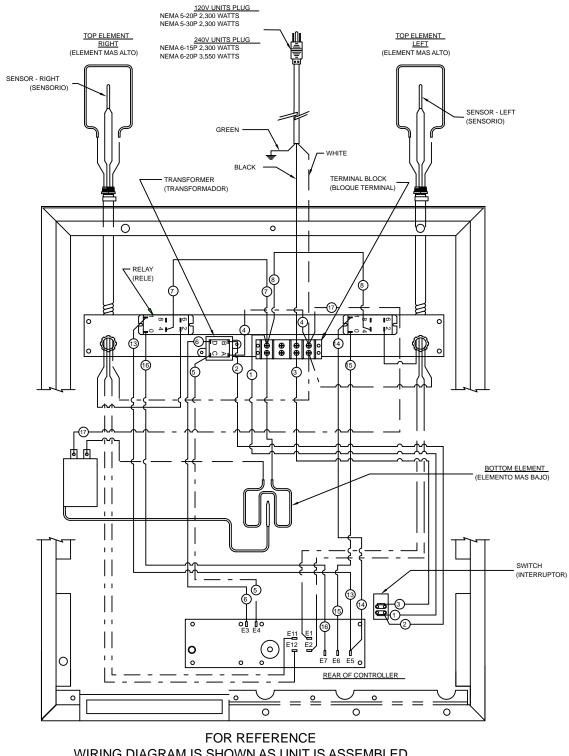


FOR REFERENCE WIRING DIAGRAM IS SHOWN AS UNIT IS ASSEMBLED WITH THE BOTTOM PLATE REMOVED. THE TOP DESCRIPTIONS ARE THEIR POSITIONS WHEN UPRIGHT.

WIRE DIAGRAM

SOME ITEMS ARE INCLUDED FOR ILLUSTRATIVE PURPOSES ONLY AND IN CERTAIN INSTANCES MAY NOT BE AVAILABLE



STAR MANUFACTURING INTERNATIONAL, INC. SK2336 REV. - 12/7/07

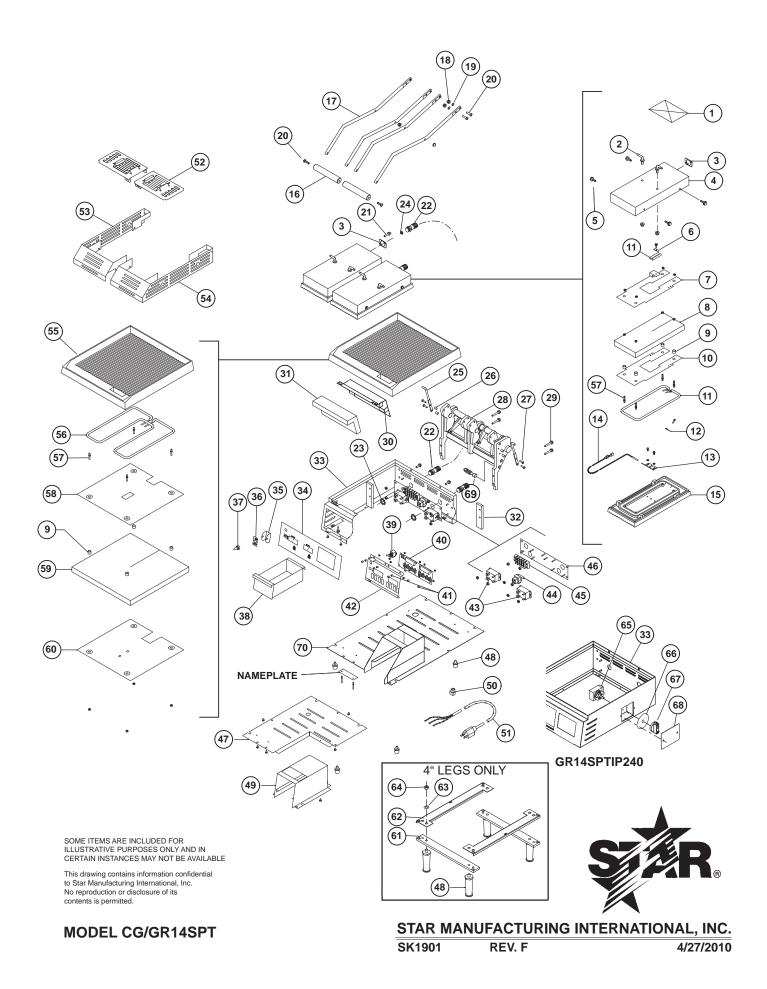

CG14SPT, CG14SPTIG-120V, 120C, 230V & 240V, CG/GR14STE GR14SPTA, GR14SPTC, GR14SPTK-120V, 120C, 230V & 240V MODEL CG/GR14SPTI-240V, GR14SPTIP240 Split Lid Table Top Grill

ltem No	Part No	Qty	Description	Application
1	2M-Z2620	2	LABEL CAUTION, BI-LINGUAL	
2	2C-Z3200	4	PIN - TOP HOUSING	
3	2A-Z3827	2	PLATE, STAMPING CONDUIT	
	D9-GR0181	2	TOP HOUSING & CONDUIT ASSEMBLY	
4	D9-Z11716		TOP HOUSING, LT SPLT	CG14STKE-120, GR14STB, GR14STE,
	D9-Z11717	1	TOP HOUSING, RT SPLT	GR14STKE120C
5	2C-Z5883	8	10-24 X 1/2" FZA SCREW, TOP HOUSING	
6	B9-04-WB-0046	2	CLAMP WIRE SUPPORT	
7	D9-GR0182	2	TOP RETAINING PLATE ASSEMBLY	
8	D9-Z2133	2	INSULATION FIBERGLASS TOP	
	2A-Z6604			
9	2A-Z9514	12	SPACER - INSULATION PLATE	SPTC, SPTI
	D9-Z3902			
10	D9-Z9513	2	PLATE - TOP ELEMENT RETAINING	SPTC, SPTI
	PS-Z9325		ELEMENT, HEATING, TOP 500W	120V
11	PS-Z9326	2	ELEMENT, HEATING, TOP 500W 230/240V	SPT, SPTA, SPTC, SPTA, SPTG 230/240V
	PS-Z9521	2	ELEMENT, HEATING, TOP 700W	SPTI
12	2C-Z3350	2	HALF CLAMP188 DIAMETER	
13	D9-Z3903	2	BRACKET, PROBE MOUNT	
13	2E-Z3278	2	RTD PROBE - 48" LONG WIRE - THERMISTOR	
14	PS-GR0356	Z	KIT, 2F-Z3237 CASTING REPLACMENT	SMOOTH - ALUM
	PS-GR0355		KIT, 2F-Z5257 CASTING REPLACMENT	GROOVED - ALUM
	PS-GR0505 PS-GR0504		KIT, 2F-Z5615 COATED CASTING REPLACIMENT	GROOVED - ALUM
15	2F-Z9651	2		
			CASTING - TOP SMOOTH, CHROME	
	2F-Z8349		CASTING - TOP SMOOTH, IRON	
1/	2F-Z7967		CASTING - TOP GROOVE, IRON	
16	2V-Z3152	2	HANDLE	
	2B-Z3336		14" CG14SPT ARM	
	2B-Z9515	4	ARM	SPTC, SPTI
	2B-Z10355		ARM	CG14SPTK-120/240V
17	2B-Z12554	2	ARM, LEFT ST	CG14STKE-120, GR14STB, GR14STE, GR14STKE120C
	2B-Z12555	2	ARM, RIGHT ST	CG14STKE-120, GR14STB, GR14STE, GR14STKE120C
18	2C-08-07-0040	12	ACORN NUT, 1/4-20 ACHD STL NP	
19	2C-08-07-0262	8	WASHER 1/4 INT STL NP	
20	2C-Z2992	12	BOLT 1/4-20X1 PHP STL NP	
21	2C-Z3917	4	RIVET, POP,	
22	2E-Z2898	2	CONDUIT ASSEMBLY	
23	2E-Z3768	2	LOCKNUT, CONDUIT 1/2"	
24	2C-Z3780	4	RETAINER, CONDUIT	
25	2V-Z3252	2	TOP HOUSING LATCH ROD	l
26	24-Y6142	4	SLEEVE HANDLE	
20	2C-1516	4	SCREW 10-24 X 1" STL RH NP, LATCH ROD	
	I I	· ·	RING, SPECIFY VOLTAGE OR TYPE GAS D	ESIRED PAGE

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER PAGE <u>1</u> OF <u>4</u>

Some items are included for illustrative purposes only and in certain instances may not be available.



June 10, 2010, Rev N

CG14SPT, CG14SPTIG-120V, 120C, 230V & 240V GR14SPTA, GR14SPTC, GR14SPTK-120V, 120C, 230V & 240V MODEL CG/GR14SPTI-240V, GR14SPTIP240 Split Lid Table Top Grill

ltem No	Part No	Qty	Description	Application
28	2R-Z3345	1	COUNTER BALANCE - SPLIT TOP	
29	2C-Z2593	4	SCREW - 10-24X1 1/2 SL HX/W NP	
30	D9-Z11677	1	INSULATION BAFFLE ASSEMBLY	
31	D9-Z3826	1	INSULATION - BAFFLE	
32	2A-Z6484	2	PLATE (COUNTER BALANCE MOUNT)	
	D9-GR0152			
	D9-GR0393		BODY ASSEMBLY	CG14SPTK-120/240V
33	D9-GR0394	1		GR14SPTIP
	D9-GR0507		BODY ASSY - 14" CG/CG14	GR14STE
	D9-GR0461		BODY ASSY 14" SPT	GR14STB
	2M-Z5817		OVERLAY-STANDARD	CG14SPT, CG14SPTI, GR14SPTA, GR14SPTC, GR14SPTI, GR14SPB, GR14SPE
34	2M-Z3337	1		GR14SPT-120/240V & CUL
34	2M-Z10851	I		CG14SPTK-120/240V
	2M-Z11984		OVERLAY	GR14STE-120
	2M-Z11983			GR14STE-120V
35	Z1-70-07-0343	1	SWITCH GUARD	
36	2M-12-07-0038	1	LABEL ON & OFF	
37	21-05-07-0013	1	BOOT SWITCH	
38	D9-GR0518 D9-GR0517	1	GREASE DRAWER ASSEMBLY	CG14SPTK GR14SPTKG120
39	2E-Z3808	1	SWITCH TOGGLE	
	2J-Z6323		TIME/TEMPERATURE CONTROL	
40	D9-GR0387	1	CONTROL PROGRAMMING	CG14SPTK-120/120C/240V
10	D9-GR0380	1 .	CONTROL PROGRAMMING	GR14SPTK-120/120C, GR14SPTKM120
41	2K-Z1971	14	SPACER	
	D9-GR0151		FACEPLATE ASSEMBLY	
42	D9-GR0382	1	FACEPLATE ASSEMBLY	CG14SPTK
43	2E-Z3335	2	RELAY DOUBLE POLE-SINGLE THROW	
	2E-05-07-0350		TRANSFORMER 230V/10V 6VA	
44	2E-05-07-0351	1	TRANSFORMER 115/10V 6VA	
45	2E-Z2894	1	TERMINAL BLOCK (304)	
46	D9-GR0156	1	REAR PLATE ASSEMBLY	
47	D9-Z3259 D9-Z10086	1	BASE BOTTOM	CG14SPTID240, GR14SPTA-CE
	2A-Z11500		4" NON SKID FOOT BASE	SPTC, SPTI
48	2A-Z11500	4	FOOT 1" SOLID RUBBER	CG14SPTK, GR14SPTG
	D9-GR0150			CG14SPTID240
49	D9-GR0130	- 1	GREASE CABINET ASSEMBLY	GR14SPTA-CE
50	2K-Y6764	1	BUSHING 90 SR 17-2	

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 2 OF _ 4

Some items are included for illustrative purposes only and in certain instances may not be available.



June 10, 2010, Rev N

CG14SPT, CG14SPTIG-120V, 120C, 230V & 240V GR14SPTA, GR14SPTC, GR14SPTK-120V, 120C, 230V & 240V MODEL CG/GR14SPTI-240V, GR14SPTIP240 Split Lid Table Top Grill

Item No	Part No	Qty	Description	Application
	2E-Z4119		CORD POWER	120V
	D9-GR0193		CORD POWER	120C
51	D9-GR0194	1		240V
51	D9-GR0194	1	CORD POWER	CG14SPT-230V between 1-15-01 thru 8-16-04
	2E-Y9251		CORD SET CONT EUR 16AMP	CG14SPT-230V
	2E-Z2905		CORD POWER	SPTI- 240V
52	D9-GR0189	2	TOP BURN GUARD ASSEMBLY	
	D9-GR0177		BURN GUARD ASSEMBLY - LEFT	
53	D9-GR0501	1	BURN GUARD, LT WELD ASSY	CG14STKE-120, GR14STB, GR14STE, GR14STKE120C
	D9-GR0335	1		CG14SPTI-230
	D9-GR0176		BURN GUARD ASSEMBLY - RIGHT	
54	D9-GR0500	1	BURN GUARD, RT WELD ASSY	CG14STKE-120, GR14STB, GR14STE, GR14STKE120C
	D9-GR0334			CG14SPTI-230
	PS-GR0361		KIT, 2F-Z1945, CASTING SM REPLACMENT	GR SERIES (NON-SPTI)
	PS-GR0362	- - - 1 -	KIT, 2F-Z1947, CASTING GR REPLACMENT	CG SERIES (NON-SPTI)
	PS-GR0503		KIT, 2F-Z1947, COATED CASTING GR REPL	CG SERIES (NON-SPTI)
55	2F-Z9653		CASTING - SMOOTH BOTTOM, CHROME	SPTC
	PS-GR0363		KIT, 2F-Z1949, CSTNG - BOTTOM, IRON	GR14SPTI
	PS-GR0364		KIT, 2F-Z1951, CSTNG - GROOVE, IRON	CG14SPTI
	2N-Z9324	1	ELEMENT, HEATING, BTM	120V
56	2N-Z9327		ELEMENT, HEATING, BTM 1300 W	230V-240V (NON-SPTI)
00	2N-Z9520		ELEMENT, HEATING, BTM 2150 W	SPTI 230/240V
	2N-Z11709	2	ELEMENT, 650 WATT, 120V	CG14STKE, GR14STE, GR14STKE
57	2C-08-07-0285	12	SCREW 10-24 x 3/4 x 3/8	
	D9-Z2618		BOTTOM ELEMENT RETAINING PLATE	
58	D9-Z9701	1	BOTTOM ELEMENT RETAINING PLATE	SPTC
59	D9-Z2888	1	INSULATION - 14"	
60	D9-Z2619	1	BOTTOM INSULATION RETAINING PLATE	
61	2V-Z3027	2	CROSS SUPPORT	SPTC, SPTI
62	D9-Z9516	2	SUPPORT BRACKET, LEGS	SPTC, SPTI
63	2C-08-07-0262	4	WASHER 1/4 INT STL NP	SPTC, SPTI
64	2C-Z2992	4	BOLT 1/4-20X1 PHP STL NP	SPTC, SPTI
65	2T-6447	1	THERMOSTAT 118V-236V	SPTIP
66	2M-Z11301	1	LABEL - DIAL	SPTIP
67	2R-Z4621	1	KNOB, 1-3/4250"D"HOLE	SPTIP
68	D9-Z11304	1	PLATE, COVER	SPTIP
69	PS-GR134	AR	KIT, BEARING ASSY, COUNTER BALANCE	

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER

PAGE 3 OF <u>4</u>

Some items are included for illustrative purposes only and in certain instances may not be available.



June 10, 2010, Rev N CG14SPT, CG14SPTIG-120V, 120C, 230V & 240V GR14SPTA, GR14SPTC, GR14SPTK-120V, 120C, 230V & 240V MODEL CG/GR14SPTI-240V, GR14SPTIP240 Split Lid Table Top Grill

ltem No	Part No	Qty	Description	Application
70	D9-GR0520	1	BASE ASSY / GREASE CABINET	CG14SPT, CG14SPTI, CG14SPTIG, GR14SPTA, GR14SPTC, GR14SPTI, GR14SPTIP, GR14STB, GR14SPTE
	D9-GR0522			CG14SPTK, CG14STKE, GR14SPTK, GR14SPTKM120, GR14STKE
NI	D9-Z11977	1	PLATE, BASE CONDUIT	CG142TB, CG14B, CG14E, CG14IB, CG14IGTB, CG14ITB, CG14ITGTB, CG14ITLB, CG14ITSC, CG14TB, GR14B, GR14E, GR14E, GR14IB, GR14ITB, GR14SNB, GR14TB, CG14STKE, GR14STB, GR14STE, GR14STKE

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED INCLUDE MODEL AND SERIAL NUMBER



Some items are included for illustrative purposes only and in certain instances may not be available.

