

Diagram for cleaning cotton candy head

*** PLEASE REFER TO YOUR SPIN MAGIC 5 OWNER'S MANUAL (page 7) FOR ROUTINE CLEANING INSTRUCTIONS ***

Steps 3 and 4

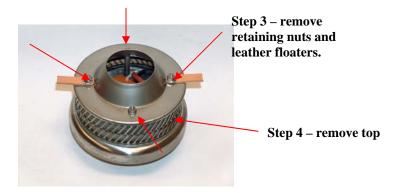

Step 5

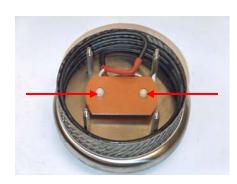

Step 5 – remove slinger plate by loosening the 2 nylon acorn nuts.

Step 6



Step 6 – disconnect the two heater lead terminations by removing 2 nuts..

Steps 7 and 8



Step 7 – screen assembly removed from spinning head.