



## Black Soup Kettle Warmer, 11 Quart

**Model:** S30 120

4/2015

***Please read and keep these instructions. Indoor use only.***

## Specifications

Model: S30 120

Capacity: 11qt

Electrical: 120V, 60 Hz; 400W



 ***Read and understand all instructions before using this appliance. CAUTION! HOT SURFACE!***

## Warnings

- This appliance is designed for commercial use only.
- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- Never immerse the appliance in water.
- Do not operate the kettle while it is empty.
- Do not overfill the appliance with water.
- Never move or carry the kettle when it is “ON” or if it is full of hot liquids.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a qualified service agent.
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

## Operation

***Carefully unpack the soup kettle warmer and inspect it for damage.***

- Place the warmer on a solid, level surface.
- Use with wet heat only. Add 20 oz. (.6 liters) of water to the kettle before placing the bain marie insert into the warmer. Never over-fill with water. Under no circumstances should the bain marie float, even when empty. Remove any excess water immediately.
- Turn the warmer on. The indicator light will glow, showing that the unit is on. Adjust the temperature control dial to the correct setting:
  - a: *Settings 8-12 are designed for initial warm-up*
  - b: *Normal control settings range from 1-8*
  - c: *Once the kettle has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food-safe serving temperatures be used.*

**Note: This soup kettle warmer is not designed to cook soups or sauces, nor is it designed to rethermalize cold or frozen products.**

- Always keep the hinged lid attached and closed when not serving.

## Cleaning and Maintenance

***Regular cleaning will help prolong the soup kettle's life and preserve its appearance.***

- Always unplug the kettle when not in use, when filling, or when cleaning.
- Spilled food should be removed immediately from painted exterior surfaces and the top collar, with a damp soapy cloth. Do not use harsh or abrasive chemicals or scouring agents.
- The bain marie and lid are dishwasher-safe.
- Never immerse the appliance in water.