


SET UP Requirements*

10 inches behind washer or dryer

26.5 inches across

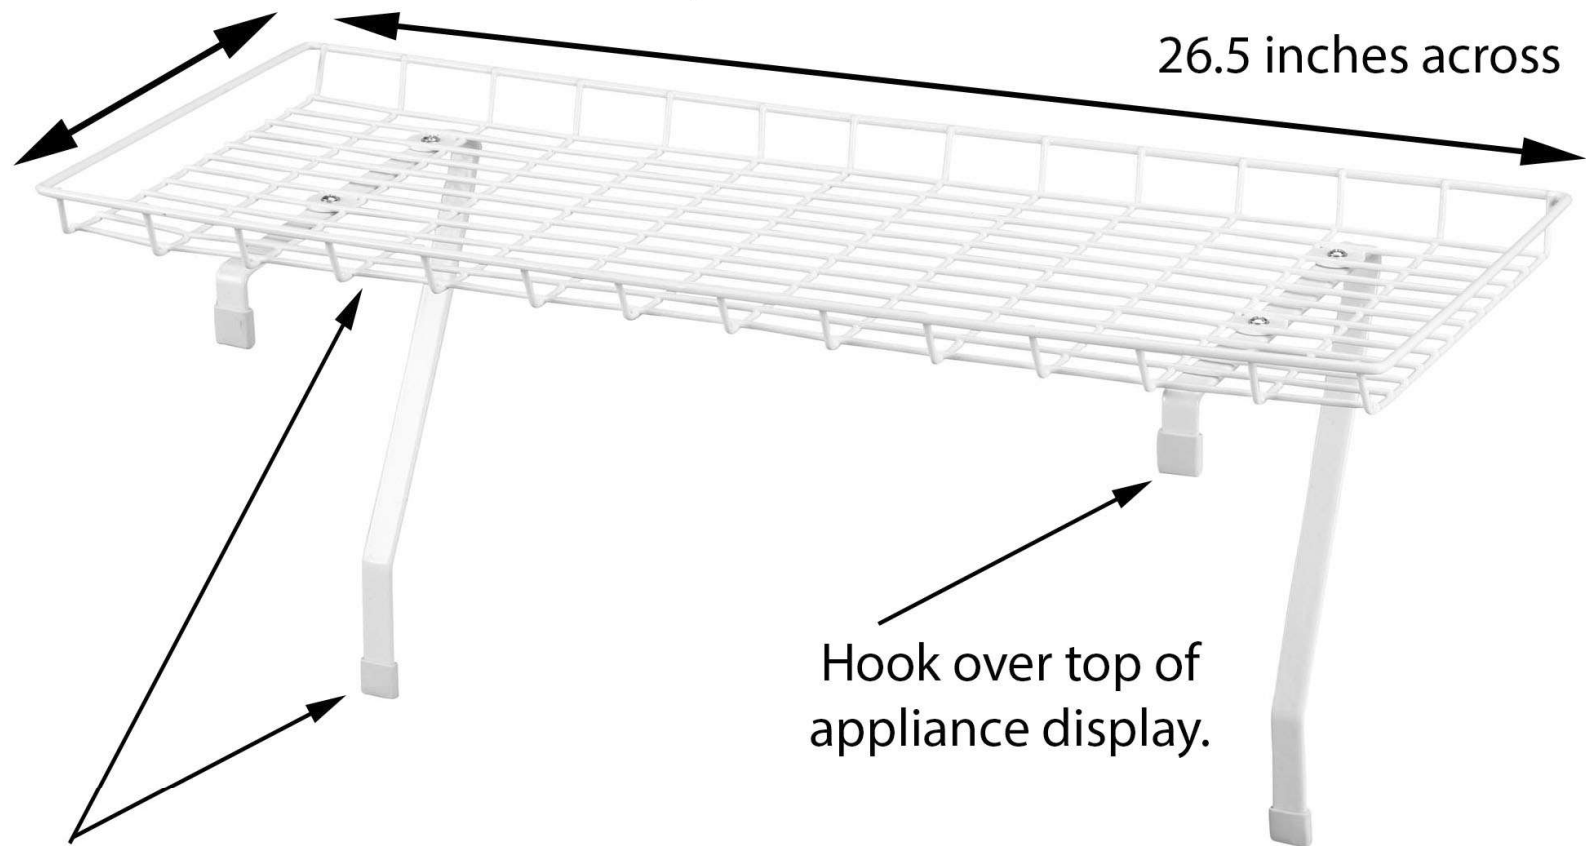

Hook over top of
appliance display.

Bend bracket to brace
lower end on the back
of appliance.

*Will NOT fit all washers / dryers. Requires appliances with rear display panels and 10" clearance behind them. Brackets hook onto panel and brace against back of appliance.