





French Fry Warmer/Dump Station

Models: 177FFDS1

02/2020

Please read and keep these instructions. Indoor use only.



Index

Introduction	3
Requirements and Safety Instructions	3
Operation	4
Cleaning	4
Parts Diagram	5
Limited Warranty	6



Introduction, Requirements and Safety

Introduction

- 1. Please read instructions before using this appliance.
- 2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
- 3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.

Safety Instructions



WARNING!

All power must be disconnected at power source before any service procedure is performed.

- 1. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
- 2. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.
- 3. Always unplug appliance when not in use and before cleaning, adjusting or maintaining this machine. To disconnect appliance, turn switch off and remove plug from power source.
- 4. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, has been dropped or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment or repair.
- 5. Do not use outdoors. This appliance is not intended for wet or moist locations. Never locate appliance where it may fall into water.
- 6. Connect to properly grounded outlets only. Avoid the use of extension cords. Do not run cord under carpeting, runners or the like. Arrange cord away from traffic area and where it will not create a tripping hazard.
- 7. This appliance is equipped with a power cord with a three blade plug. Plug ONLY into a matching three blade outlet. DO NOT cut or break off the third blade or attempt to use with a two blade extension cord.
- 8. To prevent a possible fire, it is recommended that the unit is placed on a non-combustible surface.
- 9. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.



Overview

Preparation

- 1. Set the unit on a flat, dry surface near a grounded 120V outlet.
- 2. Using a phillips head screw driver, attached the 2 metal posts to the base. Line up the 4 holes on each post with the threaded holes in the base.
- 3. Once posts are secured to the base, place the strip heater on top of the posts. Line up the holes and insert 4 screws into each post.
- 4. Place the food pan in the base.

MODEL#	POWER SUPPLY		OVERALL DIMENSIONS	FOOD PAN	NET WEIGHT	PLUG
177FFDS1	120V	1000W	22.5"L x 13"W x 19.5"H	2"D	25 lbs.	NEMA 5-15P

Operation


- 1. Plug cord into grounded electrical outlet of the correct voltage. Electrical shock can occur if appliance is not grounded.
- 2. Flip both the heat and light switches to the on position. Use of the light is optional and operates independently from the heating elements.
- 3. Place food products in the pan, located directly under the elements for best results.
- 4. Turn unit off when not in use.
- 5. To disconnect appliance, turn switches off and remove plug from power source.

Cleaning

- 1. Unplug the cord and let warmer cool before cleaning or moving.
- 2. This unit can be cleaned with a damp sponge and mild soap. Rinse with clean water and wipe dry.
- 3. Do not immerse in water or other liquid.



Parts Diagram

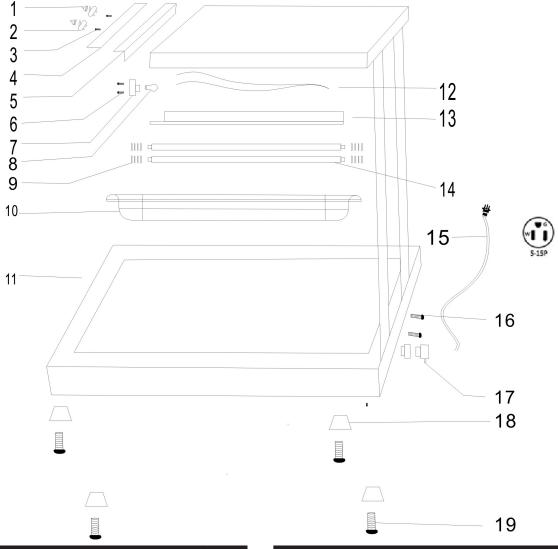

#	DESCRIPTION	ITEM #	QTY.
1	Waterproof Switch Cover		2
2	On/Off Rocker Switch	177PFFDSWTCH	2
3	Switch Screws		2
4	PVC Panel		1
5	Front Panel		1
6	Bulb Socket Screws		2
7	Bulb Socket		1
8	Warmer Bulb	177PFFDSLAMP	1
9	Element Nut		4
10	Food Pan		1

#	DESCRIPTION	QTY.	QTY.
11	Stainless Steel Base		1
12	Wiring Harness		1
13	Reflex Housing		1
14	Calrod Heating Element	177PFFDSELEM	1
15	Power Cord		1
16	Base Screw		8
17	Power Relay		1
18	Feet		4
19	Foot Screws		4



Equipment Limited Warranty

Avantco warrants its equipment to be free from defects in material and workmanship for a period of 1 year. This is the sole and exclusive warranty made by Avantco covering your Avantco brand equipment. A claim under this warranty must be made within 1 year from the date of purchase of the equipment. Only the equipment's original purchaser may make a claim under this warranty. Avantco reserves the right to approve or deny the repair or replacement of any part or repair request. The warranty is not transferable. Avantco Equipment installed in/on a food truck or trailer will be limited to a period of 30 days from the original date of purchase.

To Make a Warranty Claim:

For Warranty Inquiries contact the location where you purchased the product:

- WebstaurantStore.com: Contact help@webstaurantstore.com. Please have your order number ready.
- The Restaurant Store: If you purchased this unit from your local store, please contact your store directly.
- TheRestaurantStore.com: Online purchases, call 717-392-7261. Please have your order number ready.

Failure to contact the designated location prior to obtaining equipment service may void your warranty.

Avantco makes no other warranties, express or implied, statutory or otherwise, and HEREBY DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

This Limited Warranty does not cover:

- Equipment sold or used outside the Continental United States
- Use of unfiltered water (if applicable)
- Avantco has the sole discretion on wearable parts not covered under warranty
- Equipment not purchased directly from an authorized dealer
- Equipment used for residential or other non-commercial purposes
- Equipment that has been altered, modified, or repaired by anyone other than an authorized service agency
- Equipment where the serial number plate has been removed or altered.
- Damage or failure due to improper installation, improper utility connection or supply, and issues resulting from improper ventilation or airflow.
- Defects and damage due to improper maintenance, wear and tear, misuse, abuse, vandalism, or Act of God.

Any action for breach of this warranty must be commenced within 1 year of the date on which the breach occurred. No modification of this warranty, or waiver of its terms, shall be effective unless approved in a writing signed by the parties. The laws of the Commonwealth of Pennsylvania shall govern this warranty and the parties' rights and duties under it. Avantco shall not under any circumstances be liable for incidental or consequential damages of any kind, including but not limited to loss of profits.