



## French Fry Warmer/ Dump Station



CONFORMS TO NSF/ANSI STD. 4  
CONFORMS TO CAN/CSA-C22.2 NO. 109  
CONFORMS TO UL STD. UL-197

**Models:** 177FFDS1

02/2024

***Please read and keep these instructions. Indoor use only.***

## Index

Introduction ..... 3

Safety Instructions ..... 3

Operation ..... 4

Cleaning ..... 4

Parts Diagram..... 5

## Introduction and Safety

### *Introduction*

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury.
3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.

### *Safety Instructions*



#### **WARNING!**

All power must be disconnected at power source before any service procedure is performed.

1. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
2. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.
3. Always unplug appliance when not in use and before cleaning, adjusting, or maintaining this machine. To disconnect appliance, turn switch off and remove plug from power source.
4. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been dropped or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
5. Do not use outdoors. This appliance is not intended for wet or moist locations. Never locate appliance where it may fall into water.
6. Connect to properly grounded outlets only. Avoid the use of extension cords. Do not run cord under carpeting, runners, or the like. Arrange cord away from traffic area and where it will not create a tripping hazard.
7. This appliance is equipped with a power cord with a three blade plug. Plug ONLY into a matching three blade outlet. DO NOT cut or break off the third blade or attempt to use with a two blade extension cord.
8. To prevent a possible fire, it is recommended that the unit is placed on a non-combustible surface.
9. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

## Overview

### Preparation

1. Set the unit on a flat, dry surface near a grounded 120V outlet.
2. Using a phillips head screw driver, attach the 2 metal posts to the base. Line up the 4 holes on each post with the threaded holes in the base.
3. Once posts are secured to the base, place the strip heater on top of the posts. Line up the holes and insert 4 screws into each post.
4. Place the food pan in the base.

MODEL #	POWER SUPPLY		OVERALL DIMENSIONS	FOOD PAN	NET WEIGHT	PLUG
177FFDS1	120V	1000W	22.5"L x 13"W x 19.5"H	2"D	25 lb.	NEMA 5-15P


### Operation

1. Plug cord into grounded electrical outlet of the correct voltage. Electrical shock can occur if appliance is not grounded.
2. Flip both the heat and light switches to the on position. Use of the light is optional and operates independently from the heating elements.
3. Place food products in the pan located directly under the elements for best results.
4. Turn unit off when not in use.
5. To disconnect appliance, turn switches off and remove plug from power source.

### Cleaning

1. Unplug the cord and let warmer cool before cleaning or moving.
2. This unit can be cleaned with a damp sponge and mild soap. Rinse with clean water and wipe dry.
3. Do not immerse in water or other liquid.

## Parts Diagram

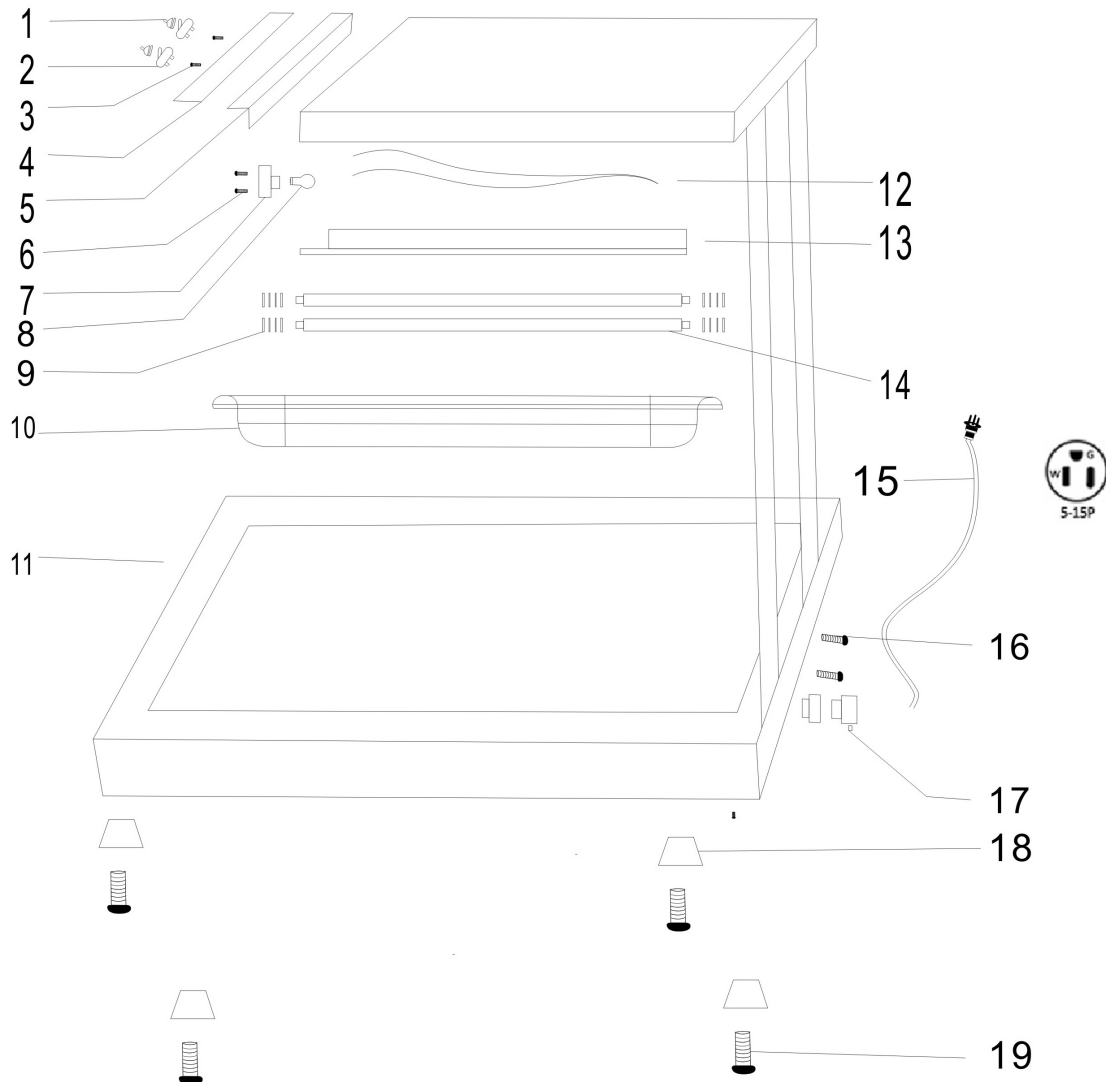

#	DESCRIPTION	ITEM #	QTY.
1	Waterproof Switch Cover		2
2	On/Off Rocker Switch	177PFFDSWCH	2
3	Switch Screws		2
4	PVC Panel		1
5	Front Panel		1
6	Bulb Socket Screws		2
7	Bulb Socket		1
8	Warmer Bulb	177PFFDSLAMP	1
9	Element Nut		4
10	Food Pan		1

#	DESCRIPTION	QTY.	QTY.
11	Stainless Steel Base		1
12	Wiring Harness		1
13	Reflex Housing		1
14	Calrod Heating Element	177PFFDSELEM	1
15	Power Cord		1
16	Base Screw		8
17	Power Relay		1
18	Feet		4
19	Foot Screws		4