



Pasta Cookers



-
- #177FPC11NL** 11 Gallon • Single Tank • 70,000 BTU
#177FPC22NL 22 Gallon • Double Tank • 140,000 BTU
-

Warning:

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment. If installing the pasta cooker with propane (LP) gas, a commercially approved regulator **MUST** be installed on the pasta cooker in addition to the tank regulator. Units installed without an external appliance regulator will cause damage to parts and will void the warranty.

For Your Safety:

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

Note:

Please read and keep these instructions. Indoor use only.


Pasta Cooker

Parts List

Key #	Description	Item #	Quantity per Model	
			177FPC11NL	177FPC22NL
1	HOUSING ASSEMBLY	–	1	1
2	TANK ASSEMBLY	–	1	2
3	HEAT SHIELD	–	1	2
4	BURNER ASSEMBLY	–	1	2
5	WATER INLET ASSEMBLY	–	1	2
6	DRAINAGE ASSEMBLY	–	1	2
7	LEFT HAND BASKET	17701108164L	3	6
8	RIGHT HAND BASKET	17701108173L	3	6

Pasta Cooker

Parts Diagram

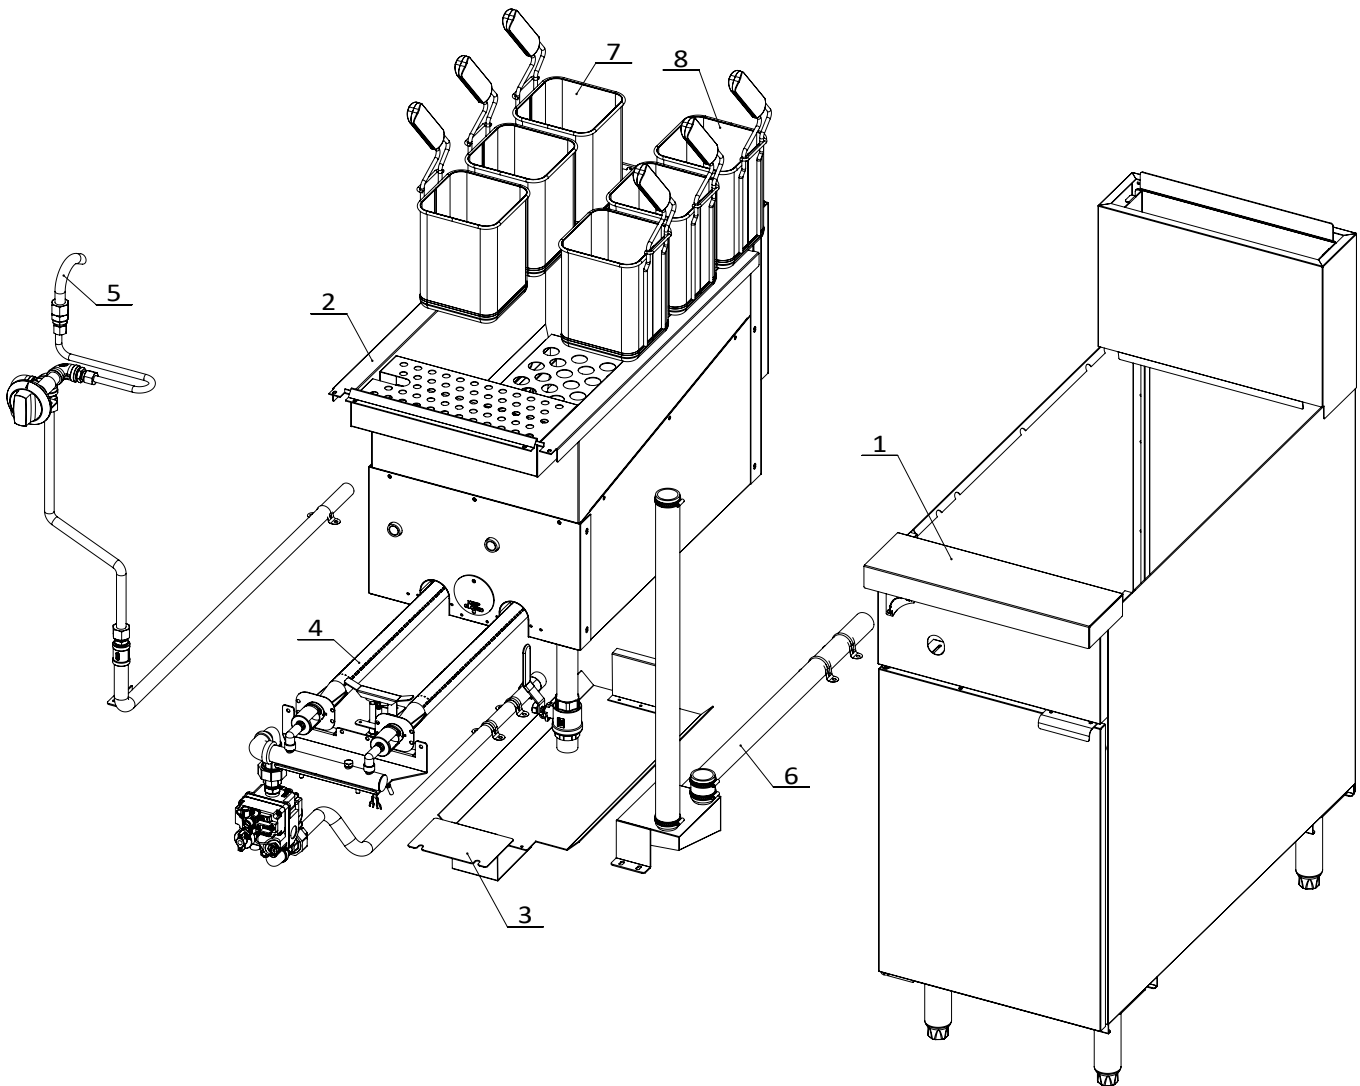


Housing Assembly

Parts List

Key #	Description	Item #	Quantity per Model	
			177FPC11NL	177FPC22NL
1	LEFT SIDE PANEL	—	1	2
2	RIGHT SIDE PANEL	—	1	2
3	BOTTOM CONNECTING PLATE	—	1	1
4	BACK CONNECTING PLATE	—	1	1
5	TOP FRONT CONNECTING PLATE	—	1	2
6	BACK TOP CONNECTING PLATE	—	1	2
7	BACK PLATE	—	1	1
8	FRONT CONTROL PANEL	—	1	1
9(A)	LEFT DOOR	177031008021	1	1
9(B)	RIGHT DOOR - DOUBLE TANK ONLY	177031009005	—	1
10(A)	LEFT DOOR BOTTOM HINGE	177031002029	1	1
10(B)	RIGHT DOOR UPPER HINGE - DOUBLE TANK ONLY	177031007004	—	1
11(A)	LEFT DOOR BOTTOM HINGE	177031002030	1	1
11(B)	RIGHT DOOR BOTTOM HINGE - DOUBLE TANK ONLY	177031007005	—	1
12	FRONT TOP PANEL	—	1	1
13	INNER CHIMNEY ASSEMBLY	—	1	2
14	OUTER CHIMNEY COVER ASSEMBLY	—	1	1
15	THERMOSTAT BRACKET	—	1	2
16	HIGH LIMIT	17700302291L	1	2
17	THERMOSTAT	17700302219L	1	2
18	THERMOSTAT DIAL STICKER	—	1	2
19	THERMOSTAT KNOB	17710110023	1	2
20	WATER STICKER	—	1	2
21	MAGNET	—	1	2
22	DOOR BUMPER	—	1	2
23	ADJUSTABLE LEG	17720090009	4	6

Housing Assembly

Parts Diagram

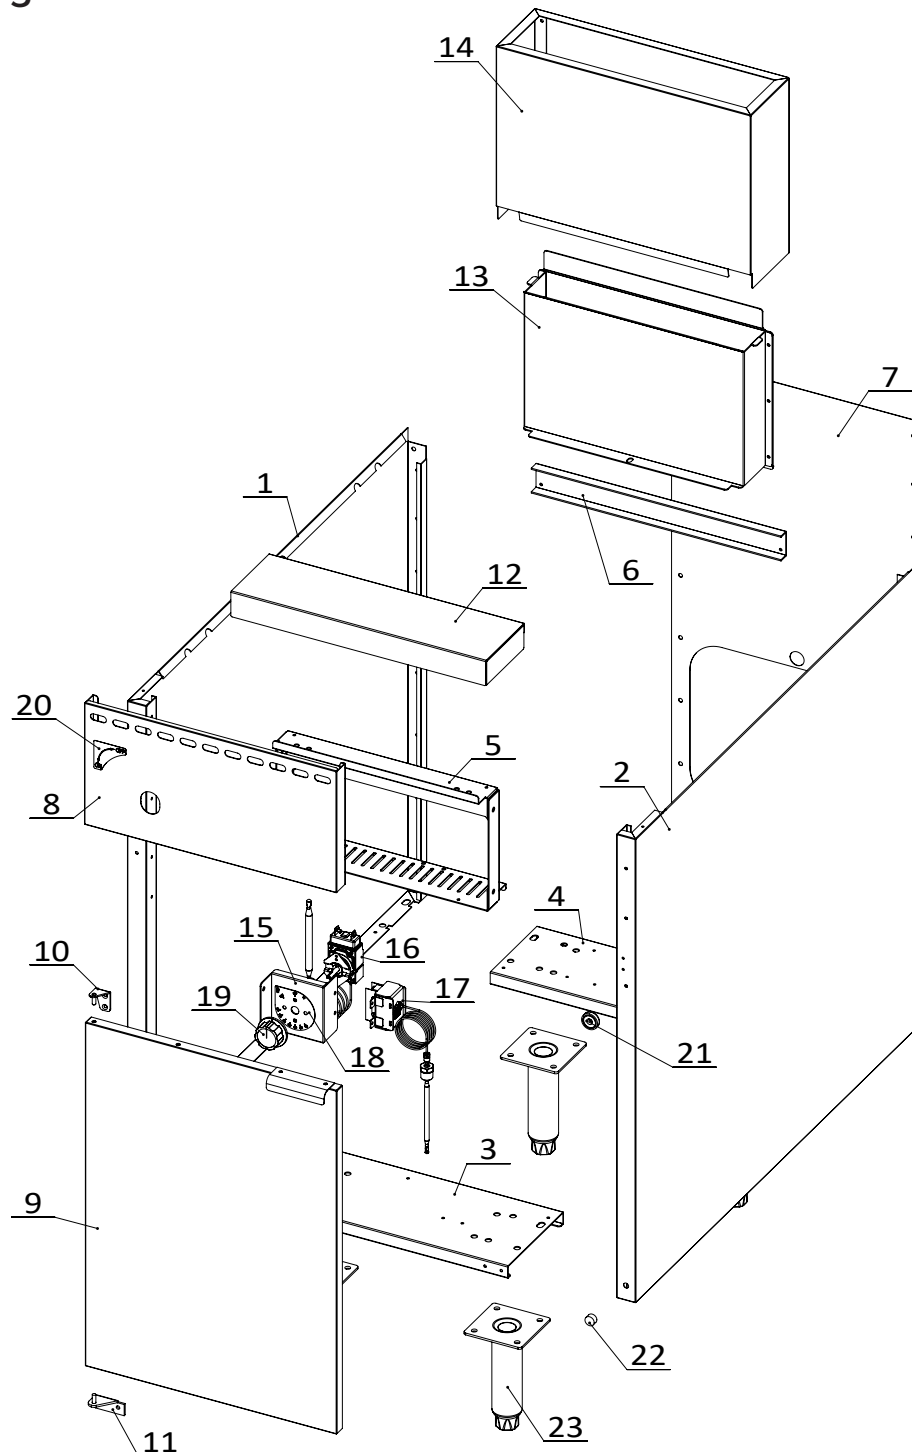


Tank Assembly

Parts List

Key #	Description	Item #	Quantity per Model	
			177FPC11NL	177FPC22NL
1	TANK ASSEMBLY	—	1	2
2	WATER DRAIN VALVE	17720050076	1	2
3	DRAIN PIPE	17700606282L	1	2
4	FRONT STRAINER PLATE	177031008031	1	2
5	BASKET SUPPORT	177031008063	1	2
6	OVERFLOW STRAINER MESH	177031002026	1	2
7	DRAIN STRAINER MESH	177031008014	1	2
8	PROBE COVER	—	1	2
9	HIGH LIMIT COVER	—	1	2
10	HEAT ABSORBING PLATE	—	1	2
11	FRONT INSULATION COVER	—	1	2
12	PILOT HOLE COVER	—	1	2
13	LEFT INSULATION COVER	—	1	2
14	RIGHT INSULATION COVER	—	1	2
15	BURNER SUPPORTING BRACKET	—	1	2
16	BURNER BOTTOM SHIELD PLATE	—	1	2
17	BURNER BOTTOM SHIELD SUPPORTING PLATE	—	1	2
18	FLUE CONNECTING PLATE	—	1	2
19	BACK INSULATION PLATE	—	1	1
20	FLUE ASSEMBLY	—	1	2

Tank Assembly Parts Diagram

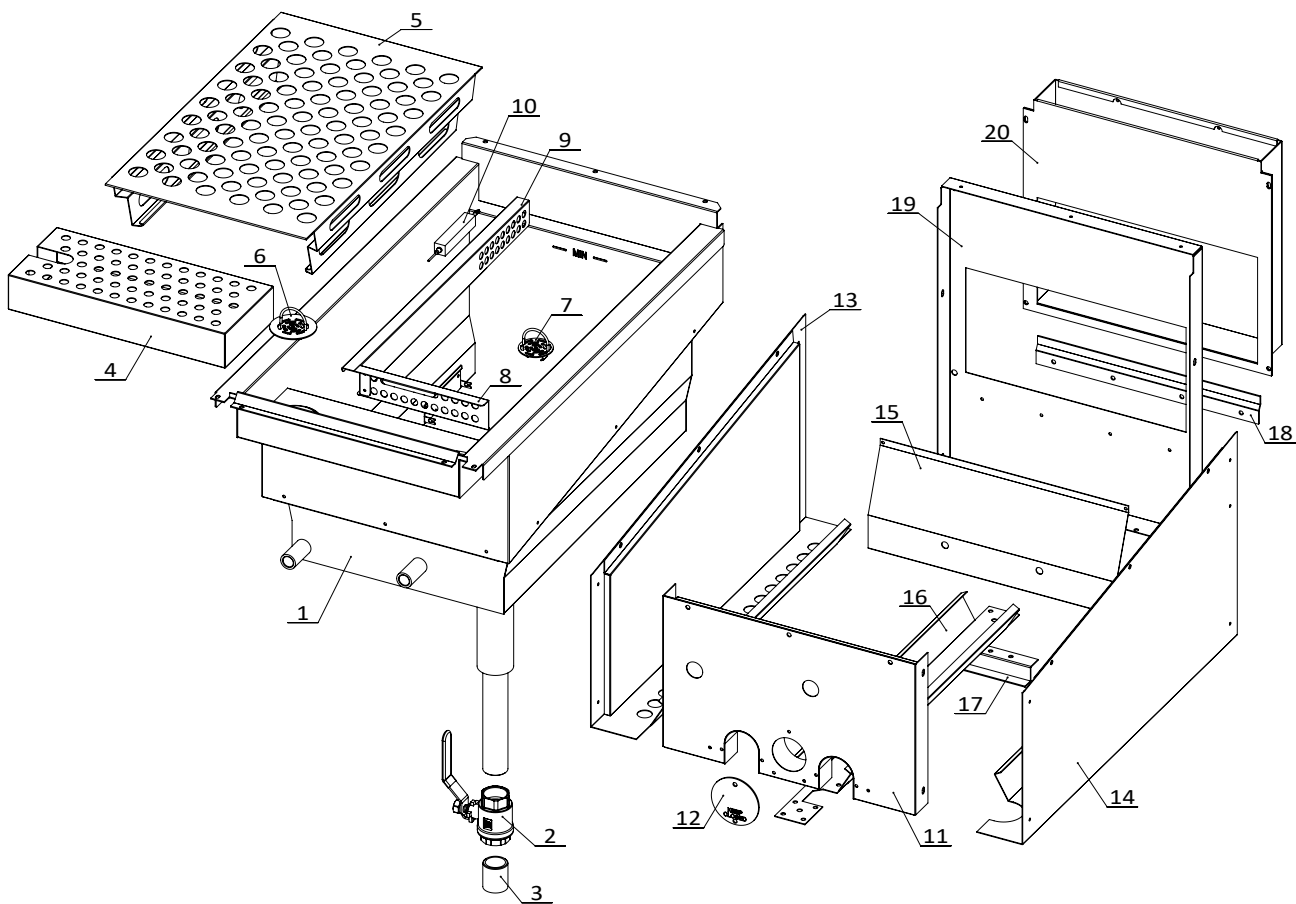


Burner Assembly

Parts List

Key #	Description	Item #	Quantity per Model	
			177FPC11NL	177FPC22NL
1	MANIFOLD PIPE BRACKET	—	1	2
2	PILOT BRACKET	—	1	2
3	FLAME TRANSFER COVER	—	1	2
4	GAS BURNER	177031008010	2	4
5(A)	NATURAL GAS PILOT	17720130208	1	2
5(B)	LP PILOT	17720130209	1	2
6	THERMOPILE	17720170027	1	2
7	PILOT PIPE	17720190079	1	2
8	MANIFOLD PIPE	—	1	2
9	ORIFICE ELBOW	17702010455	2	4
10(A)	NG ORIFICE #35	177201501328	2	4
10(B)	LP ORIFICE #50	17701501328	2	4
11	PRESSURE TEST PLUG	—	1	2
12	1/2 TO 3/4 ELBLOW	—	1	2
13	1/2 MALE/FEMALE NPT ELBOW	—	2	4
14	1/2 MALE THREAD CONNECTOR	—	3	6
15	1/2 UNION CONNECTOR	—	2	4
16(A)	NATURAL GAS VALVE	17702201437L	1	2
16(B)	LIQUID PROPANE GAS VALVE	17720050072	1	2
17	GAS PIPE	—	1	2
18	1/2 TO 3/4 ADAPTER	—	1	2
19	1/2 STRAP CLAMP	—	1	4

Burner Assembly

Parts Diagram

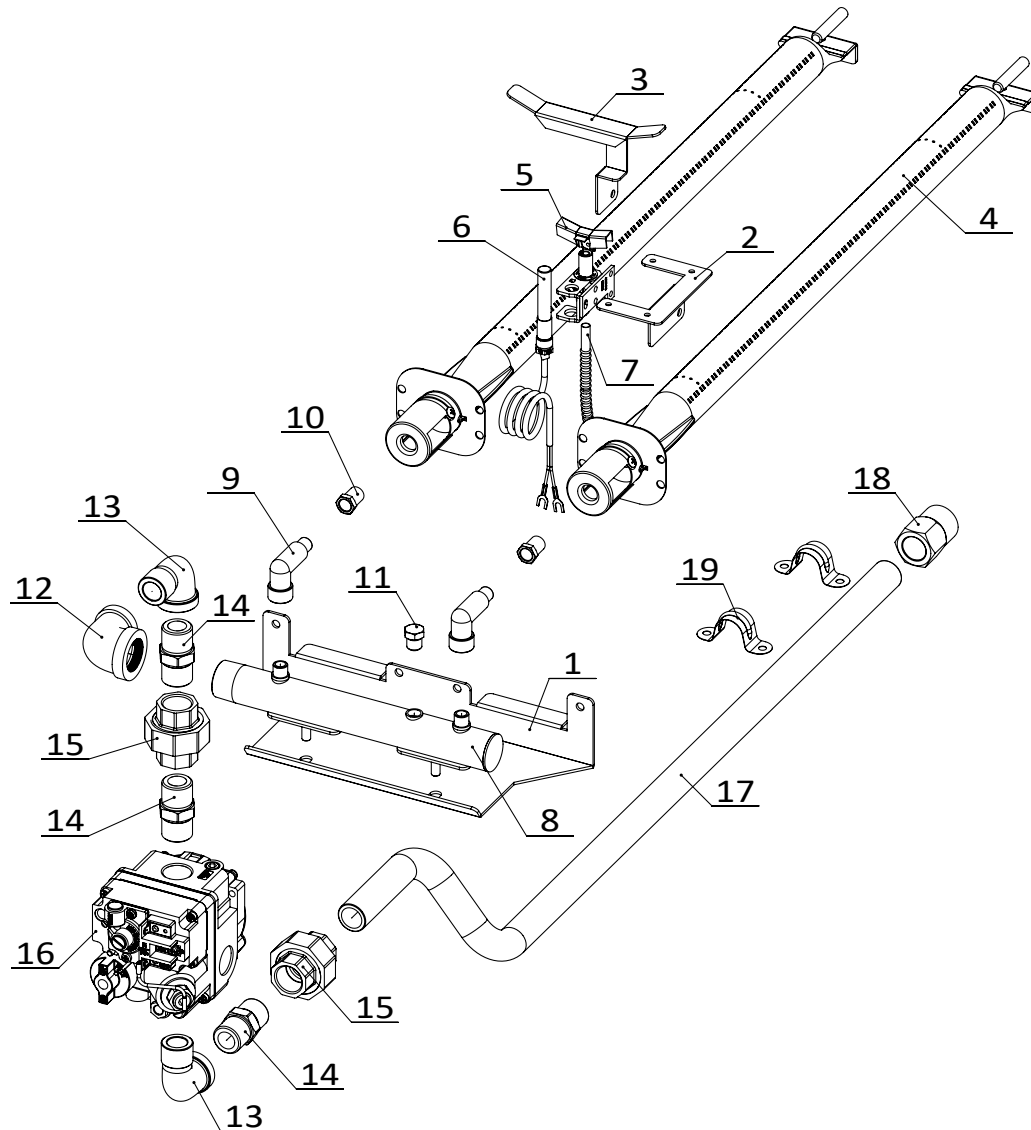


Water Inlet Assembly

Parts List

Key #	Description	Item #	Quantity per Model	
			177FPC11NL	177FPC22NL
1	WATER INLET PIPE	—	1	2
2	1/2 STRAP CLAMP	—	1	2
3	1/2 FEMALE THREAD SOCKET	—	1	2
4	1/2 REDUCER CONNECTOR	—	2	4
5	COMPRESSION FITTING FERRULE	—	2	4
6	FLEX PIPE	—	1	2
7	1/2 STREET ELBOW	—	3	6
8	WATER INLET PIPE WITH LOCATING HARDWARE	—	1	2
9	WATER FILL VALVE	17700500991L	1	2
10	EXTENSION SHAFT FOR WATER KNOB	1772024064L	1	2
11	M5 FASTENING NUT	—	1	2
12	WATER KNOB WITH KNOB INSERT	177101103882	1	2
13	1/2 REDUCER CONNECTOR	—	1	4
14	COMPRESSION FITTING FERRULE	—	2	4
15	FLEX PIPE	—	1	2
16	WATER TAP BASE CONNECTING NUT	—	1	2
17	WATER TAP BASE LOCKING NUT	—	1	2
18	WATER TAP BASE	—	1	2
19	WATER TAP CONNECTING NUT	—	1	2
20	O SEAL	—	2	4
21	WATER OUTLET BENT PIPE	—	1	2

Water Inlet Assembly

Parts Diagram

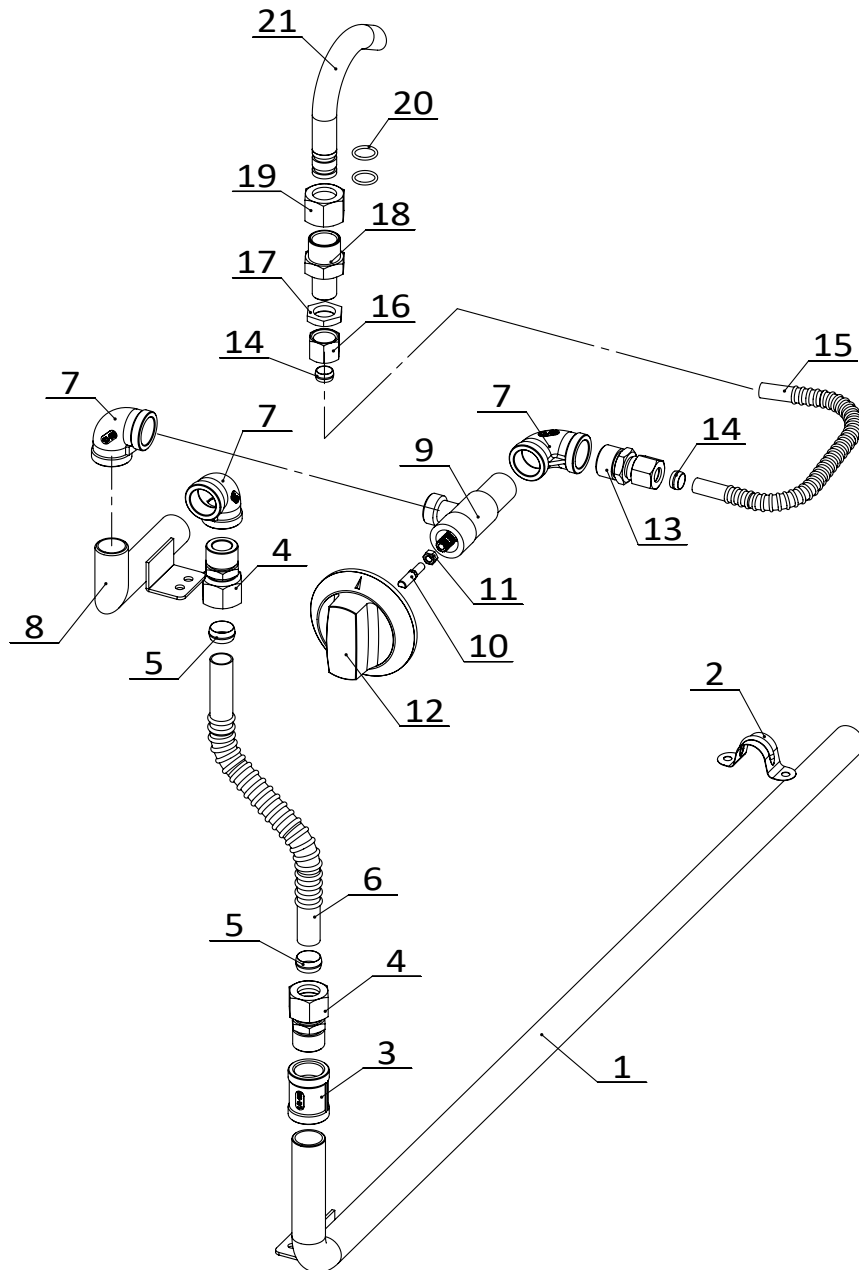

Overflow and Drain Pipe Assembly

Parts List

Key #	Description	Item #	Quantity per Model	
			177FPC11NL	177FPC22NL
1	WATER OUTLET BENT PIPE	—	1	2
2	OVERFLOW PIPE	17702301519L	2	4
3	DRAIN PIPE	17700606282L	1	2
4	OVERFLOW PIPE	17702301519L	1	2
5	PIPE CLAMP	17701904882L	6	12
6	1 INCH STRAP CLAMP	—	2	4

Overflow and Drain Pipe Assembly

Parts Diagram

