



## **Knife Sharpener**

*Model: 177KNIFESHRP*

10/2020

*Please read the manual thoroughly prior to equipment set-up, operation and maintenance.*

## Safety Precautions

***When using the appliance be sure to follow the procedures listed below***

- Check to make sure your home voltage conforms to the rated voltage of the appliance.
- Always place the appliance on a table or sturdy surface.
- Store the appliance out of reach of children to avoid any potential accidents.
- Store the appliance in a dry space away from any humidity.
- Clean the appliance after each use.

## Warning

- **DO NOT** sharpen any blades that do not fit within the appliance in order to avoid damage to the appliance and/or blade.
- **DO NOT** leave the appliance running unattended.
- **DO NOT** place the appliance in water or any other liquid.
- **DO NOT** use tough cleaning materials in order to avoid damages.
- **DO NOT** allow the power cord to hang over any hot surfaces.
- **DO NOT** use the appliance if the power cord or any part has been damaged. Damages should be fixed by a technician in order to avoid potential accidents.
- **DO NOT** use the appliance for anything outside of its intended purpose. Doing so will void the warranty.

## Operating

1. Place the appliance on a table or sturdy surface.
2. Turn the appliance "ON" by hitting the ON/OFF switch.
3. Place the end of the knife in the first stage and slowly pull the knife towards you.
4. Be sure to sharpen on both sides.
5. Place the knife in the second stage to hone and polish the blade.