



92 Cup Rice Warmer



Model: 177RW90

12/2018

Please read and keep these instructions. Indoor use only.

NOTE: Save these instructions for future reference.

Index

Specifications	2
Keep Warm	2
Safeguards	3
Parts	4
Cautions	4
How to Use	5
Cleaning	5
Warranty	6

Specifications



Model No	177RW90
Power Rating	105W
Voltage	120V ~ / 60Hz
Capacity	92 cups
Weight	24.3 lb.
Dimensions	18 ³ / ₄ "D x 13 ⁷ / ₈ "H


Keep Warm

1. This rice warmer will automatically keep rice warm provided the power cord remains plugged in.
2. For safety reasons, always disconnect the power cord from the wall outlet when the warmer is not being used, or when removing the inner pot from the outer pot.
3. For best results, do not exceed a warming period of 12 hours.
4. Store leftover rice in the refrigerator and re-heat in the warmer with water to prevent the rice from drying out.
5. To prevent electrical shock hazards, do not immerse the warmer, except the inner pan and inner lid, into water or any other liquid.

Important Safeguards

1. Read all instructions carefully.
2. Do not touch hot surfaces. Use handles.
3. To prevent electric hazards, do not immerse cord, plug, or rice warmer heating plate in water or other liquid.
4. Close supervision is necessary when children are present.
5. Unplug appliance from wall outlet when not in use and before cleaning. Allow appliance to cool completely before putting on or taking off pot.
6. Do not operate appliance if cord has been damaged, or if appliance malfunctions or suffers serious damage. If this does occur, contact manufacturer for repair or adjustment.
7. Never put water or any liquid into the outer pot. Water should be placed only in the inner pot.
8. Never plug in the power cord without the inner pot inside the warmer.
9. The use of parts or accessory attachments is not recommended and may cause hazards.
10. Only use the inner pot provided.
11. The burn-proof pad shall be placed on the inner pot. Do not put it on top of the electric heat plate, otherwise it will cause damage to this warmer.
12. Do not let cord hang over edge of table or counter, or allow it to touch hot surfaces.
13. Do not place appliance on or near gas or electric burner, or in heated oven.
14. Use extreme caution when moving appliances containing hot oil or other hot liquids.
15. Always plug cord into a wall outlet. To disconnect, remove by plug, not cord.
16. Always place the unit on a flat, level surface.
17. Only use the unit indoors in ambient temperatures less than 77 degrees Fahrenheit.
18. Do not connect or disconnect the power cord with wet hands.
19. Never place the unit into your refrigerator or freezer.
20. Do not use this appliance for anything other than its intended use.
21. **CAUTION:** Risk of fire or burn hazard. Do not store combustible material in container. To reduce the risk of electric shock, cook only in removable container. Risk of fire or electric shock. Only operate this appliance with the removable container in place.
22. **WARNING:** To reduce the risk of electric shock, do not remove or open bottom cover. No user-serviceable parts inside. Refer servicing to qualified personnel.
23. Any maintenance servicing should be performed by an authorized service representative.
24. **FOR COMMERCIAL & INDOOR USE ONLY.**

Parts Identification

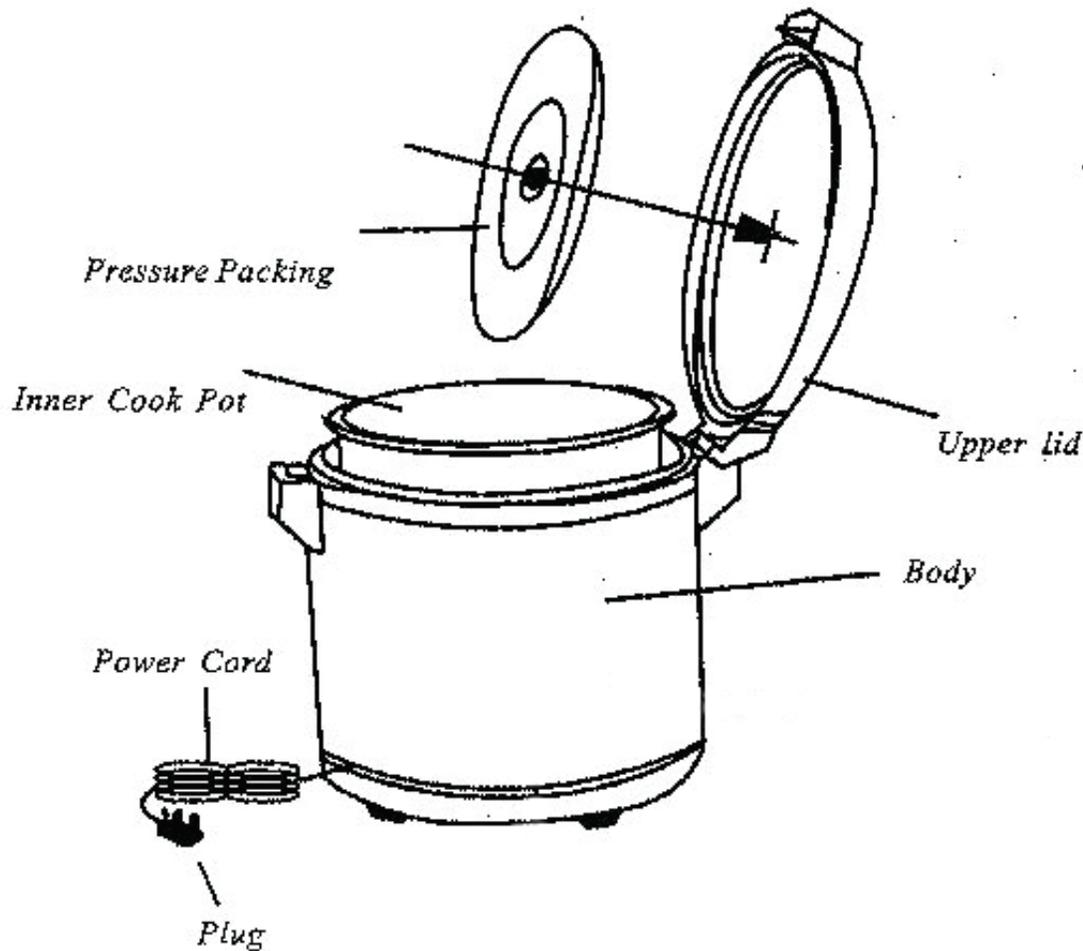

Cautions

1. Use only an electrical outlet with proper voltage.
2. Do not share the electrical outlet with other kitchen appliances while using your rice warmer.

NOTE: Only use the inner pot provided. Using other brands may cause damage and void the warranty.

How to Use

1. Use the cover to cover the warmer.
2. Plug the cord into the power outlet.
3. Stir rice before serving.

Using an Extension Cord

1. A short power cord is provided to reduce tripping hazards.
2. Longer extension cords are forbidden.

Cleaning

1. Un-plug the power cord from the wall before cleaning.
2. DO NOT immerse any part of the outer body into water. Wipe clean with a dish cloth.
3. To clean the inner pot, soak in hot sudsy water then gently clean the bottom of the pot with a dish cloth. BE CAREFUL not to press down too hard, or drop anything on the bottom of the pot, as this can cause warping and inhibit the proper functioning of the rice warmer.
4. Wipe the warmer body and warming pot dry before storing.

Limited Warranty

All equipment, which is sold under Avantco trademark and used for commercial purpose is warranted against defects in materials and workmanship. The warranty runs for six months from the time of purchase and is for the benefit of the original purchaser only. All other Warranties, Expressed or Implied, Statutory or Otherwise, including Without Limitation any implied Warranty of Merchantability or Fitness for Purposes are excluded. The Seller shall in no event be liable for direct, indirect or consequential damages in connection with Avantco commercial products.

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, supervision when required or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty. The use of unfiltered water in this unit will void the warranty.

This warranty does not apply to, and Avantco is not responsible for any warranty claims on products sold or used outside of the continental United States.