



## Black Soup Kettle Warmer, 11 Quart

**Model:** S30 120

04/2018

***Please read and keep these instructions. Indoor use only.***

## Specifications

Model: S30 120

Capacity: 11qt

Electrical: 120V, 60 Hz; 400W



 **Read and understand all instructions before using this appliance. CAUTION! HOT SURFACE!**

## Warnings

- This appliance is designed for commercial use only.
- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- Never immerse the appliance in water.
- Do not operate the kettle while it is empty.
- Do not overfill the appliance with water.
- Never move or carry the kettle when it is “ON” or if it is full of hot liquids.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a qualified service agent.
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

## Operation

**Carefully unpack the soup kettle warmer and inspect it for damage.**

- Place the warmer on a solid, level surface.
- Use with wet heat only. Add 20 oz. (.6 liters) of water to the kettle before placing the bain marie insert into the warmer. Never over-fill with water. Under no circumstances should the bain marie float, even when empty. Remove any excess water immediately.
- Turn the warmer on. The indicator light will glow, showing that the unit is on. Adjust the temperature control dial to the correct setting:
  - a: *Settings 8-12 are designed for initial warm-up*
  - b: *Normal control settings range from 1-8*
  - c: *Once the kettle has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food-safe serving temperatures be used.*

**Note: This soup kettle warmer is not designed to cook soups or sauces, nor is it designed to rethermalize cold or frozen products.**

- Always keep the hinged lid attached and closed when not serving.

## Cleaning and Maintenance

***Regular cleaning will help prolong the soup kettle's life and preserve its appearance.***

- Always unplug the kettle when not in use, when filling, or when cleaning.
- Spilled food should be removed immediately from painted exterior surfaces and the top collar, with a damp soapy cloth. Do not use harsh or abrasive chemicals or scouring agents.
- The bain marie and lid are dishwasher-safe.
- Never immerse the appliance in water.

## Limited Warranty

All equipment, which is sold under Avantco trademark and used for commercial purpose is warranted against defects in materials and workmanship. The warranty runs for six months from the time of purchase and is for the benefit of the original purchaser only. All other Warranties, Expressed or Implied, Statutory or Otherwise, including Without Limitation any implied Warranty of Merchantability or Fitness for Purposes are excluded. The Seller shall in no event be liable for direct, indirect or consequential damages in connection with Avantco commercial products.

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set – up, supervision when required or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty. The use of unfiltered water in this unit will void the warranty.

This warranty does not apply to, and Avantco is not responsible for any warranty claims on products sold or used outside of the contiguous United States.

This equipment is intended for commercial use only. Warranty is void if equipment is installed in anything other than commercial applications.