



# 181GW

## Quick Setup Instructions




800-854-6417


**WARNING:** Electrical and plumbing connections need to be made by a qualified service person who will comply with all available Federal, State and Local Health, Electrical, Plumbing and Safety codes.

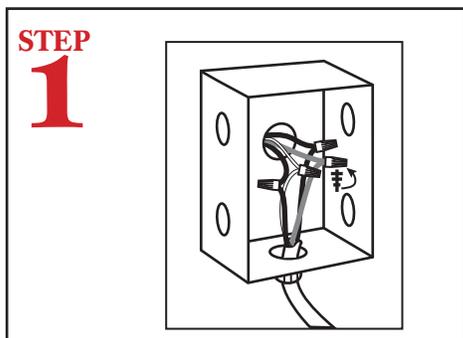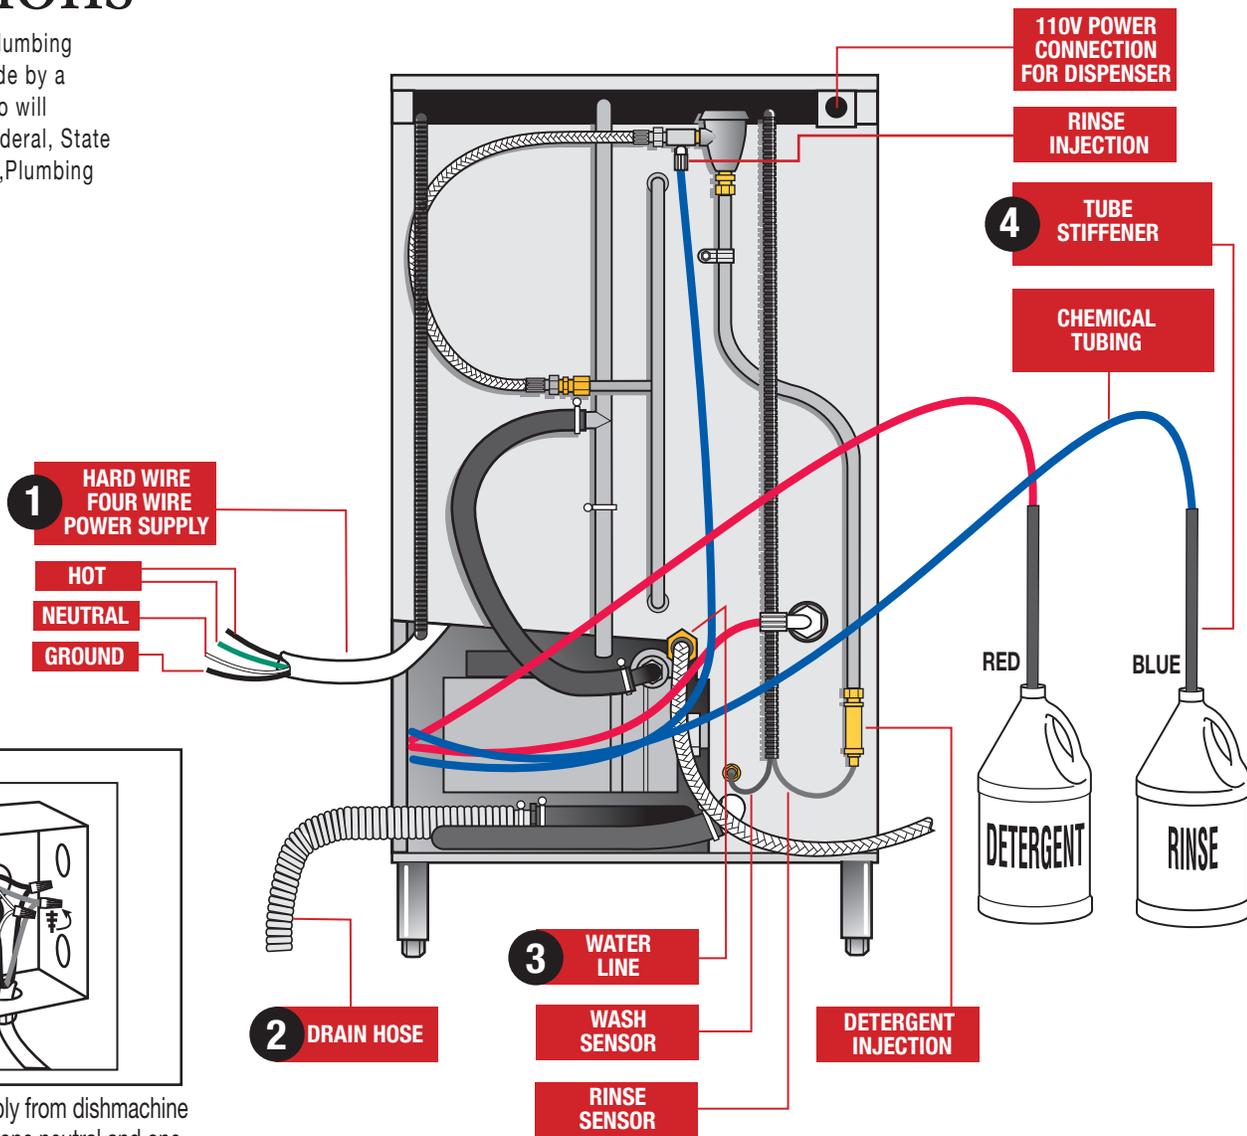


Connect hard wire power supply from dishmachine to power box. (Two hot wires, one neutral and one ground.)

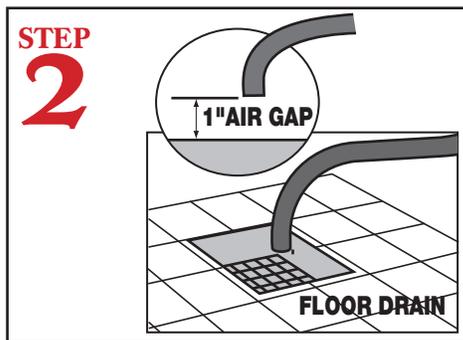

Connect the drain hose to floor drain. The floor drain must have a 1 inch air gap between drain hose and floor drain.

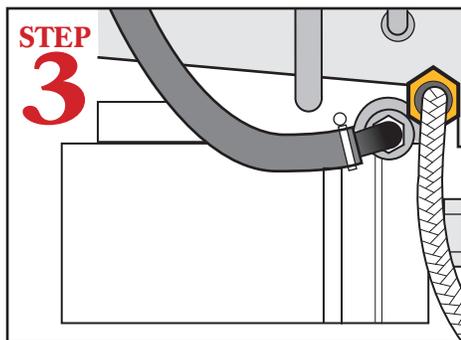

Connect dishmachine to hot water source 120°F - 140°F. Minimum temperature will remain in wash cycle until booster heater temperature reaches 180°F, then it will advance into rinse cycle.

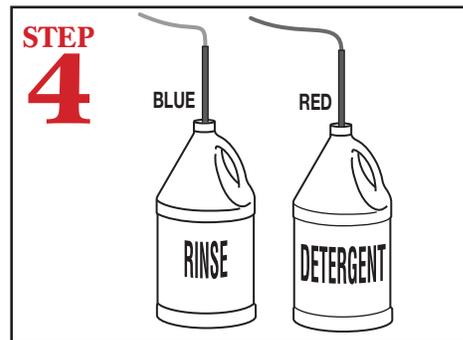

Insert tube stiffener with chemical tubing into corresponding chemical dispensers.





# 181GW

## Quick Setup Instructions



800-854-6417


**WARNING:** Electrical and plumbing connections need to be made by a qualified service person who will comply with all available Federal, State and Local Health, Electrical, Plumbing and Safety codes.

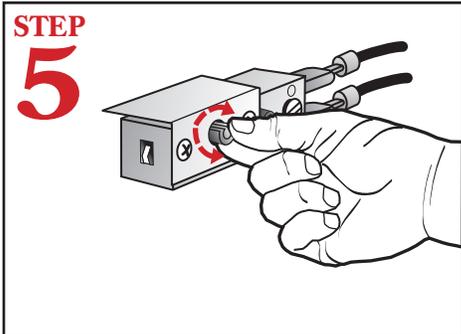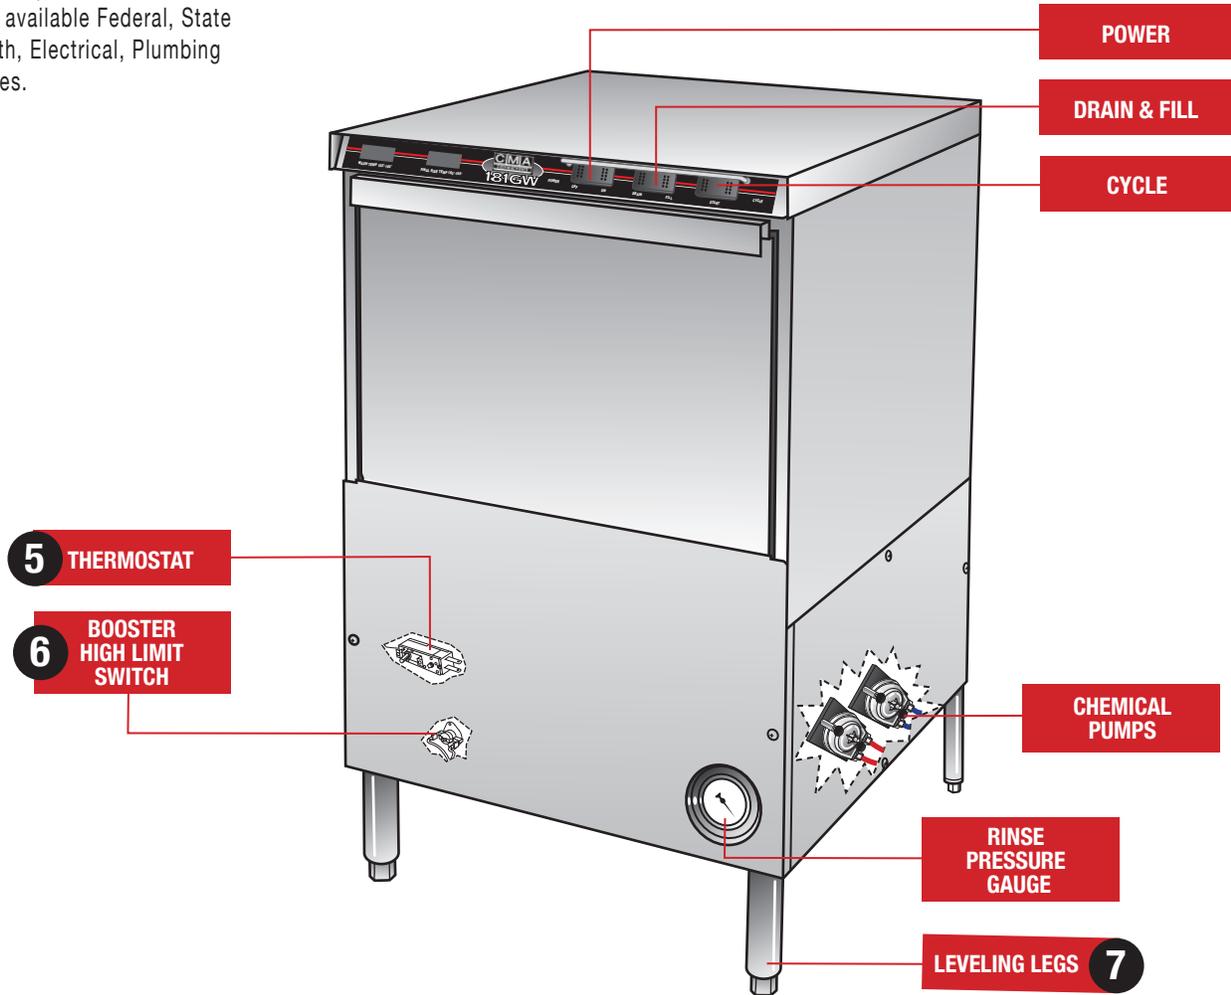

If necessary adjust the temperature by turning the adjustment stem clockwise to increase.



After filling dishwasher for the first time, (**CAUTION: turn power supply off**) reconnect the factory unplugged wire to booster high-limit switch located behind front panel.

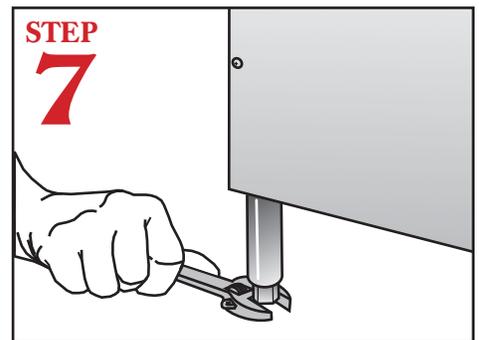

Level dishwasher by adjusting leveling legs. Dishmachine must be level front and back.

