



Medium & Heavy Duty Pop-up Toasters



Intertek
5002546

CONFORMS TO
NSF/ANSI STD. 4

Models: 184THD1800, 184THD27208, 184THD27240

09/2022

Please read and keep these instructions. Indoor use only.

Important Safeguards Save These Instructions


When using electrical appliances, basic safety should always be followed:

1. Read all instructions carefully and completely.
2. For commercial use only.
3. DO NOT touch hot surfaces.
4. Protect against electrical shock by keeping all cords, plugs, and other electrical components away from water or other liquids.
5. Unplug this unit when not in use and before cleaning.
6. Allow the unit to cool before putting on or taking off parts.
7. DO NOT operate this or any appliance with a damaged electrical cord or plug.
8. DO NOT operate this or any appliance after it has malfunctioned or has been damaged in any way.
9. DO NOT use outdoors.
10. DO NOT place on or near a hot gas or electric burner.
11. Attach plug to appliance first, then plug electrical cord into the wall outlet.
12. Disconnect the unit by removing the electrical plug from the wall outlet.
13. DO NOT use appliance for any application other than intended use.
14. DO NOT insert metal utensils or oversized foods into this unit, as they may cause a fire and heighten the risk of electrical shock.
15. DO NOT store any item on top of this unit when in operation.
16. DO NOT allow this toaster to touch or to be covered by flammable material, such as curtains, draperies, walls, etc., when in operation.
17. DO NOT clean with metal scouring pads, as pieces can break off and touch electrical components, heightening the risk of electrical shock
18. Never place materials such as paper, cardboard, plastic, etc. in this toaster.
19. DO NOT cover interior of this unit with metal foil, as it may cause the toaster to overheat.
20. Avoid scratching the surface or nicking the edges of this unit. If the toaster is damaged or broken, contact customer service before use.
21. Turn off the appliance by removing the plug from the wall outlet.
22. Note that the use of accessories not recommended by the manufacturer may result in injury.
23. Children should be supervised to ensure that they DO NOT play with the toaster.
24. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless a person responsible for their safety has given them supervision or instruction concerning use of the appliance.
25. When using the appliance in shops, snack bars, hotels etc., check the voltage and outlet to make sure the appliance is correctly connected with power.
26. Place unit on a flat surface that is well ventilated. The appliance must be supervised during operation. DO NOT leave appliance without powering off.

- Hot Surfaces - Avoid Contact!
- To provide continued protection against electric shock, connect only to properly grounded outlets.
- Do not attempt to repair or replace any parts other than the replacement parts listed in these instructions. Improper repair or replacement may result in electrical hazards.
- Do not attempt to repair or replace any parts other than the replacement parts listed in these instructions. Improper repair or replacement may result in electrical hazards and will void the warranty.

NOTE: Save these instructions for future reference.

Key Parts

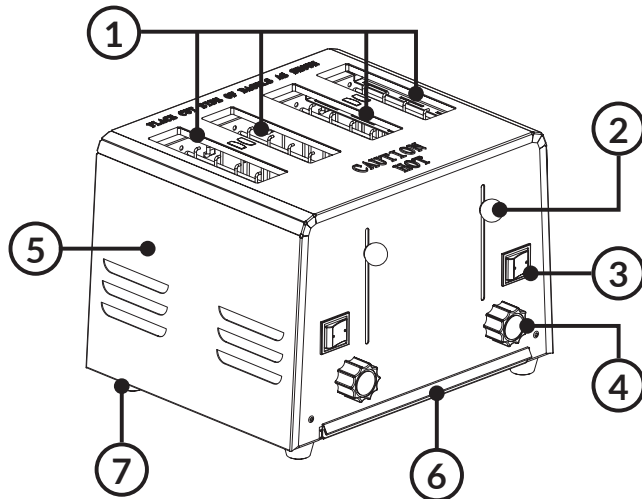

- | | |
|--------------------------------|-----------------------------|
| 1. Slots | 2. Lift Carriage |
| 3. Bagel / Bread Rocker Switch | 4. Brown Level Control Knob |
| 5. Side Panel | 6. Crumb Tray |
| 7. Foot | |

184THD1800 does not include a bagel switch

Before Using Your Toaster

Before cooking anything in your toaster for the first time, please follow these simple instructions:

1. Use a damp cloth to wipe the interior and shell.
 - DO NOT use a spray or abrasive polishing agent.
 - DO NOT wash or soak this toaster with water.
2. Preheat to its highest temperature setting for 5 minutes.
 - The heating elements are well lubricated, and this initial use will help burn off the extra grease.
 - A light amount of smoke is normal during this process.

Using Your Toaster

1. Load the bread.
2. Select either bagel or bread using the rocker switch.
 - 2a. If toasting a bagel, only the outer heating elements will turn on. The sliced side of bagels and buns needs to face outward. Markings on toaster indicate toasting side.
 - 2b. 184THD1800 does not include a bagel switch.
3. Place the bagel with the flat sides facing outwards.
4. Set desired brown level.
 - 4a. There are 2 Brown Level Control Knobs on the front panel of the toaster.
5. Each knob controls both 2 slots above. Set the desired brown level with the knobs before pressing down the Lift Carriage.
6. Press the Lift Carriage down; the toaster will start heating.
7. Once the toasting cycle is complete, the toaster will 'ding' and the food will pop up automatically.
 - 7a. If you need to cancel cooking before the cycle is completed, raise up the Lift Carriage. Food will pop up, and the cycle will end.

CAUTION: During the baking process, make sure that no metal accessory comes in contact with the electric heating elements.

CAUTION: Foods baked in this toaster will be hot. Use tools when reaching into the toaster to retrieve food.

Typical Operation Sequence

| ACTION | RESULT |
|------------------------------|---|
| Plug in your toaster | Power is connected, and toaster is ready for cooking |
| Load food into the slot | Food is ready to be cooked |
| Select bagel or bread | Bagel turns on 1 heating element, bread turns on both |
| Adjust brown level knob | Set the brown level of food |
| Press the lift carriage down | Toaster starts heating |
| Raise up the carriage | Toaster stops toasting |
| Unload toaster | Products will be cooked / hot; use caution while removing |

Cleaning & Maintenance

1. Unplug the power cord from the wall outlet.
2. Wait for the toaster to cool.
3. Use a damp cloth or sponge to gently wipe down the inside of the toaster.

CAUTION: DO NOT soak this toaster in water or use running water to clean it. THIS WILL CAUSE SERIOUS DAMAGE TO THE UNIT.

Troubleshooting

PROBLEM: The toaster does not become hot after being switched on.

- Be sure that the brown level is set.
- Be sure that the lift carriage is pressed down.

PROBLEM: There is a metallic sound when the toaster is in use.

- DO NOT attempt to dismantle your toaster.
- Discontinue use, and contact your service agent right away for examination.

PROBLEM: Food is often overcooked or burned.

- Check that the brown level is correctly set.
- Contact your service agent for examination.