



## Curved Glass Bakery Display Cases

### Dry Models:

---

#### 2 Shelf

<b>#193BCD36B</b>	36" Black	<b>#193BCD36W</b>	36" White
<b>#193BCD48B</b>	48" Black	<b>#193BCD48W</b>	48" White
<b>#193BCD60B</b>	60" Black	<b>#193BCD60W</b>	60" White
<b>#193BCD72B</b>	72" Black	<b>#193BCD72W</b>	72" White

#### 3 Shelf

<b>#193BCTD36B</b>	36" Black	<b>#193BCTD36W</b>	36" White
<b>#193BCTD48B</b>	48" Black	<b>#193BCTD48W</b>	48" White
<b>#193BCTD60B</b>	60" Black	<b>#193BCTD60W</b>	60" White
<b>#193BCTD72B</b>	72" Black	<b>#193BCTD72W</b>	72" White

### Refrigerated Models:

---

#### 2 Shelf

<b>#193BC36HCB</b>	36" Black	<b>#193BC36HCW</b>	36" White
<b>#193BC48HCB</b>	48" Black	<b>#193BC48HCW</b>	48" White
<b>#193BC60HCB</b>	60" Black	<b>#193BC60HCW</b>	60" White
<b>#193BC72HCB</b>	72" Black	<b>#193BC72HCW</b>	72" White

#### 3 Shelf

<b>#193BCT36B</b>	36" Black	<b>#193BCT36W</b>	36" White
<b>#193BCT48B</b>	48" Black	<b>#193BCT48W</b>	48" White
<b>#193BCT60B</b>	60" Black	<b>#193BCT60W</b>	60" White
<b>#193BCT72B</b>	72" Black	<b>#193BCT72W</b>	72" White

 
### Note:

Read this manual in its entirety prior to equipment setup, operation, and maintenance.

[www.AvantcoRefrigeration.com](http://www.AvantcoRefrigeration.com)

## Table of Contents

Warnings.....	3
Structure and Components .....	4
Installation .....	4
Electrical .....	5
Temperature Controls .....	6
Operation .....	6
Safety Information.....	7
Cleaning.....	8
Troubleshooting.....	9



## Warnings

**DANGER** – RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. TO BE REPAIRED ONLY BY TRAINED SERVICE PERSONNEL. DO NOT PUNCTURE REFRIGERANT TUBING.

**CAUTION** – RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. CONSULT REPAIR MANUAL/OWNER'S GUIDE BEFORE ATTEMPTING TO SERVICE THIS PRODUCT. ALL SAFETY PRECAUTIONS MUST BE FOLLOWED.

**CAUTION** – RISK OF FIRE OR EXPLOSION DUE TO PUNCTURE OF REFRIGERANT TUBING; FOLLOW HANDLING INSTRUCTIONS CAREFULLY. FLAMMABLE REFRIGERANT USED.

**CAUTION** – RISK OF FIRE OR EXPLOSION DUE TO FLAMMABLE REFRIGERANT USED. FOLLOW HANDLING INSTRUCTIONS CAREFULLY IN COMPLIANCE WITH LOCAL GOVERNMENT REGULATIONS.

---

**PELIGRO** – RIESGO DE INCENDIO O EXPLOSION. REFRIGERANTE INFLAMABLE UTILIZADO. PARA SER REPARADO SOLAMENTE POR PERSONAL DE SERVICIO CALIFICADO. NO PINCHAR LA TUBERÍA REFRIGERANTE.

**ATENCIÓN** – RIESGO DE INCENDIO O EXPLOSIÓN. REFRIGERANTE INFLAMABLE UTILIZADO. CONSULTE EL MANUAL DE REPARACIÓN / GUÍA DEL PROPIETARIO ANTES DE INTENTAR DAR SERVICIO A ESTE PRODUCTO. DEBEN CUMPLIR CON TODAS LAS PRECAUCIONES DE SEGURIDAD.

**ATENCIÓN** – RIESGO DE INCENDIO O EXPLOSIÓN DEBIDO A LA PERFORACION DE LA TUBERÍA REFRIGERANTE; SIGA LAS INSTRUCCIONES DE MANIPULACIÓN CON CUIDADO. REFRIGERANTE INFLAMABLE UTILIZADO.

**ATENCIÓN** – RIESGO DE INCENDIO O EXPLOSIÓN DEBIDO A REFRIGERANTE INFLAMABLE UTILIZADO. SIGA LAS INSTRUCCIONES DE MANIPULACIÓN CON CUIDADO CONFORME A LAS REGLAS DE LA MUNICIPALIDAD.

---

**DANGER** – RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. CONFIER LES RÉPARATIONS À UN TECHNICIEN SPÉCIALISÉ. NE PAS PERFORER LA TUBULURE CONTENANT LE FRIGORIGÈNE.

**ATTENTION** – RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. CONSULTER LE MANUEL DU PROPRIÉTAIRE/GUIDE DE RÉPARATION AVANT DE TENTER UNE RÉPARATION. TOUTES LES MESURES DE SÉCURITÉ DOIVENT ÊTRE RESPECTÉES.

**ATTENTION** – RISQUE DE FEU OU D'EXPLOSION SI LA TUBULURE CONTENANT LE FRIGORIGÈNE EST PERFORÉE; SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN. LE FRIGORIGÈNE EST INFLAMMABLE.

**ATTENTION** – RISQUE DE FEU OU D'EXPLOSION SI LE FRIGORIGÈNE EST INFLAMMABLE. SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN CONFORMÉMENT AUX RÈGLEMENTATION GOUVERNEMENTALE LOCAUX.

## Structure and Components

### Sliding Rear Glass Doors

### Air Suction

(Refrigerated only)

Never block the suction.

Air is sucked in and cold air is circulated inside the refrigerator.

### Casters



### Merchandising Shelves

Adjustable height to accommodate various goods.

For adjustment:

1. Take out the shelf.
2. Move the shelf support to suitable height.
3. Put the shelf on the supports.

### Air Outlet

(Refrigerated only)

Never block the air outlet.

Allows the circulating cold air inside to flow out.

## Installation

This unit is intended for use in a temperature-controlled environment of less than 75°F and 55% relative humidity.

### Before Installation

- If the unit has recently been transported on its side, please let unit stand upright for a minimum of 24 hours before plugging it in.
- Make sure that the unit has reached the desired temperature before loading the unit with products. This unit is meant for keeping cold products cold, not chilling warm products.
- Make sure that there is proper ventilation around the unit in the area where it will operate.
- Make sure all accessories are installed (i.e., shelves, shelf clips, casters) before plugging in the unit.
- Do not attempt to remove or repair any component of the unit. Consult an authorized service technician for servicing/repair.
- Do not sit inside the unit or hang on doors.
- This unit should be located away from doors, air ducts, and fans that could disrupt airflow and negatively impact performance.
- Please read through the manual in its entirety.

## Installation

### Cabinet Location Guidelines

---

- Install the unit on a strong and level surface.
  - If the surface is uneven, the unit may be noisy.
  - The unit may malfunction if the surface is uneven.
- Install the unit in an indoor, well-ventilated area.
  - For best performance, please maintain clearance of 6" on the back of the unit.
  - Do not use outdoors. For indoor use only.
  - Avoid direct sunlight.
- Avoid installation in a high humidity and/or dusty area.
  - Humidity above 55% can cause the unit to rust, collect condensation, and may decrease efficiency.
  - Dust collected on condenser coil will cause unit to malfunction.
  - Malfunction due to temperatures above 75°F, humidity above 55%, or improperly maintained condenser coil will void the warranty.
- Select a location away from heat and moisture-generating equipment.
  - Ambient temperatures above 75°F may cause the compressor to malfunction.
  - For optimal performance, the unit should not be used in environments with ambient temperature exceeding 75°F.
  - The unit should not be placed in areas with an ambient temperature over 90°F.
  - Equipment malfunctions due to ambient temperatures above 90°F could void the warranty.
  - Do not install this unit inside a closet or alcove.

## Electrical

- Ensure that the required voltage is being supplied at all times.
- The unit should be plugged into a grounded and properly sized electrical outlet with appropriate overcurrent protection. Refer to the electrical requirements on the unit's name plate.
- The unit should have its own dedicated outlet.
- DO NOT use extension cords.
- Ensure the unit is not resting on or against the electrical cord.
- If the unit is not in use for a long period of time, unplug from the outlet.
- To avoid shock and fire hazards, DO NOT plug in or unplug the unit with wet hands.
- After unplugging the unit, wait at least 10 minutes before plugging it back in. Failure to do so could cause damage to the compressor.

## Temperature Controls


### Adjusting the Temperature

---

- Your new refrigerator is already factory set to run at optimum temperatures for food safety and should require no adjustments.

#### Front Panel Operation

- Set temperature:
  - Press "SET" button, the set temperature is displayed.
  - Use the arrow buttons to adjust the displayed value.
  - Press "SET" button to exit the adjustment and display the unit's current temperature.
- If no buttons are pressed within 10 seconds, the unit's current temperature will be displayed.
- Lights:
  - Press "LIGHT" button to turn lights on or off.
- Manual start/stop defrost:
  - Press and hold "LIGHT" button for 6 seconds.
- Refrigerant LED:
  - When the compressor is running, the LED is on.
  - When the refrigerator temperature is constant, the LED is off.
  - During the delayed start, the LED flashes.
- Defrost LED:
  - During the defrost cycle, the LED is on.
  - When defrost cycle is done, the LED is off.
  - During the delayed display of defrost, the LED flashes.

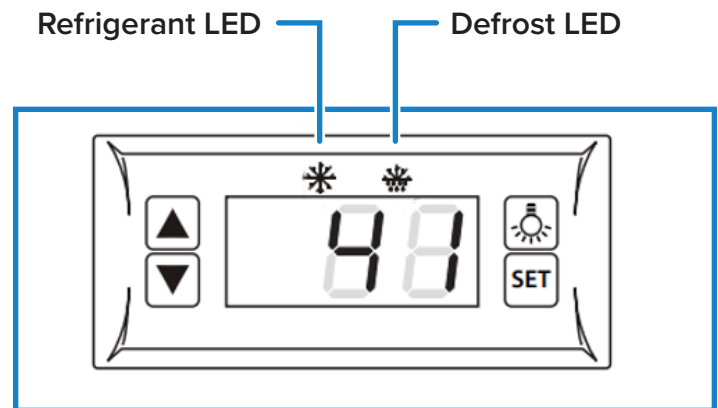

## Operation

### Defrost System

---

#### Automatic Defrost Cycle

- Refrigerator coils are kept below the freezing point (32°F).
- During compressor downtime, the evaporator fan continues to circulate air through the evaporator coil. This air circulation raises the coil temperature above the freezing point, melting any accumulated frost.
- Run-off water is drained into the evaporator pan and evaporated.

## Operation

### Loading Product

---

- Ensure there is at least 4" of clearance from the evaporator.
- Ensure all shelves are sitting level and properly secured before loading products.
- DO NOT store flammable/explosive gas or liquids inside the unit.

## Safety Information

**Pay close attention to the safety notices in this section. Disregarding these notices may lead to serious injury and/or damage to the unit.**

- To minimize shock and fire hazards, do not overload outlet. This unit should be given its own outlet.
- DO NOT use extension cords.
- DO NOT put your hands under the unit while it is being moved.
- When the unit is not in use for a long period of time, unplug the unit from the outlet.
- After unplugging the unit, wait at least 10 minutes before plugging it back in. Failure to do so could cause damage to the compressor.
- To minimize shock and fire hazards, do not plug or unplug the cord with wet hands.
- Unplug the unit before performing maintenance or cleaning.
- To minimize shock and fire hazards, make sure that the unit is properly grounded.
- DO NOT attempt to remove or repair any component unless instructed by the factory.
- DO NOT allow the unit to rest on or against the electrical cord and/or plug.
- DO NOT store any flammable/explosive gas or liquids inside the unit.
- DO NOT attempt to alter or tamper with the electrical cord.
- DO NOT use the unit if the power cord is damaged.

## Cleaning

**DISCONNECT POWER CORD BEFORE CLEANING ANY PARTS OF THE UNIT.**

It is strongly recommended that any servicing of the unit be performed by an authorized service technician.

### Fan Blades & Motor

---

- If necessary, clean the fan blades and motor with a soft cloth.
- If it is necessary to wash the fan blades more thoroughly, cover the fan motor to prevent moisture damage, then use a damp cloth to clean the fan blades.

### Interior

---

- Use warm water and a mild soap with a clean cloth to wipe down the interior of the unit.
- DO NOT use steel wool, caustic soap, abrasive cleaners, or bleach that may damage the interior finish.
- Periodically remove the shelves and pilasters from the unit and clean them with mild soap and warm water. To remove the pilasters, first remove the shelves and shelf brackets. Then, simply lift the pilaster up and out.

### Cleaning the Condenser Coil

---

- A dusty condenser may lead to high energy consumption, less cooling effectiveness, and compressor damage.
- For efficient operation, keep the condenser surface free of dust, dirt, and lint.
- We recommend cleaning the condenser coil at least once per month.
- The condenser coil is located at the bottom behind the panel.
- Once a month, remove the condenser filter and gently clean it with a dry brush.

### Cleaning the Condenser Coil Instructions

---

1. Disconnect the electrical power from the unit.
2. Remove the front cover and base cover with a screwdriver.
3. Using a soft brush and/or vacuum, remove any dirt or lint from the finned condenser coil in a vertical direction.
4. Clean the condenser with a commercial condenser coil cleaner, available from any kitchen equipment retailer. Ex. Noble Chemical Tech Line Coil Cleaners (148TLECCCLNR, 148TLHDCCLNR, 148TLECOILDD, 148TLFMCCCLNR, 147TLEVPCLNR, or 147TLHDCCLNR).
5. After cleaning, straighten any bent condenser fins with a fin comb.
6. When finished, be sure to reinstall the front cover and base cover.
7. Reconnect the electrical power to the unit.



## Troubleshooting

Problem	Possible Cause	Possible Solution
Compressor not running.	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Power cord unplugged.	Plug in power cord.
	Thermostat set too high.	Set thermostat to lower temperature.
	Cabinet in defrost cycle.	Wait for defrost cycle to finish.
Condensing units run for long periods of time.	Excessive amount of warm product placed in cabinet.	Allow adequate time for product to cool down.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening doors for long periods of time.
	Dirty condenser coil.	Clean the condenser coil. (Page 8)
	Evaporator coil iced over.	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly.
Cabinet temperature is too warm.	Thermostat set too warm.	Set thermostat to lower temperature.
	Airflow blocked.	Rearrange product to allow for proper airflow. Make sure there is at least 4" of clearance from evaporator.
	Excessive amount of warm product placed in cabinet.	Allow adequate time for product to cool down.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Dirty condenser coil.	Clean the condenser coil. (Page 8)
	Evaporator coil iced over.	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly.
	Low refrigerant levels.	Contact a service technician to check refrigerant levels.
	Door is slightly ajar.	Make sure door is completely closed.
Condensation is collecting on the cabinet and/or floor.	Relative humidity is above 55%.	Move unit to area below relative humidity or lower humidity level.
Interior light is not working.	Poor switch connection.	Turn off light switch and turn it back on.
	Bulb is not connected.	Make sure the bulb is correctly inserted in the socket.
	Bulb has burned out.	Replace the bulb.