



Installation and Operation Manual


Your Solutions Partner


Pie Pass® Pickup Unit

Models PPU41C-120 PPU61S-120

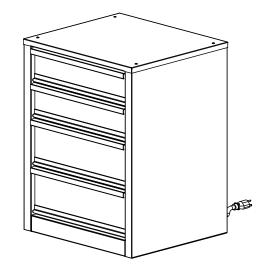

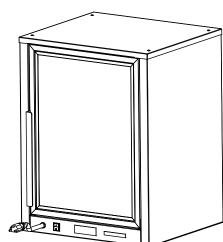

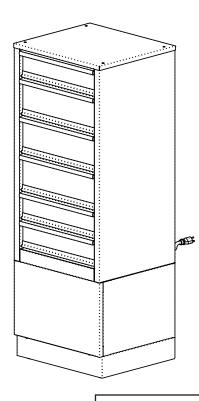

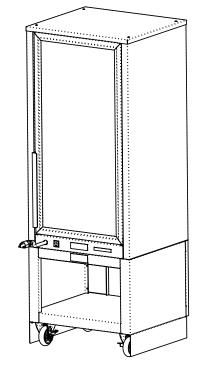

CAUTION:

Please read this manual completely before attempting to install, operate or service this equipment

WARNING for CA residents: go to www.dukemfg.com/prop65 for prop 65 warning

TABLE OF CONTENTS

Important Safety Instructions	2-3
Receiving and Inspection	3
Specifications	4-5
Wire Diagram	6
Counter Top Installation and Operation	7
Cart Installation and Operation	8
Door Reversal Instructions	9-10
Cleaning	11

IMPORTANT SAFETY INSTRUCTIONS

Throughout this manual, you will find the following safety words and symbols that signify important safety risks with regard to operating or maintaining the equipment.



Indicates a hazardous situation which, if not avoided, could result in death or serious injury



Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury



Indicates Important Information



Indicates electrical shock hazard which, if not avoided, could result in death or serious injury and/or equipment damage



Indicates hot surface which, if not avoided, could result in minor or moderate injury

In addition to the warnings and cautions in this manual, use the following guidelines for safe operation of the unit.

- Read all instructions before using equipment.
- For your safety, the equipment is furnished with a properly grounded cord connector. Do not attempt to remove or disconnect the grounded connector.
- Install or locate the equipment only for its intended use as described in this manual.
- Do not use corrosive chemicals on this equipment.
- Do not operate this equipment if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- This equipment should be serviced by qualified personnel only. Contact customercare@dukemfg.com for any issues.
- Do not block or cover any openings on the unit.
- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.

The following warnings and cautions appear throughout this manual and should be carefully observed.


- Turn the unit off, disconnect the power source and allow unit to cool down before performing any service or maintenance on the unit.
- The procedures in this manual may include the use of chemical products. You must read the Material Safety Data Sheets before using any of these products.
- The unit should be grounded according to local electrical codes to prevent the
 possibility of electrical shock. It requires a grounded receptacle with dedicated electrical
 lines, protected by fuses or circuit breaker of the proper rating, in accordance with all
 applicable regulations.
- Disposal of the unit must be in accordance with local environmental codes and/or any other applicable codes.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

RECEIVING AND INSPECTION

UNPACKING UNIT

- Inspect the shipping carton and/or container, carefully noting any exterior damage on the delivery receipt.
- Note any damage not evident on the outside of the shipping container (concealed damage). Contact the carrier immediately and file a damage claim with them.
- Save all packing materials when filing a claim. Freight damage claims are the responsibility of the purchaser and are not covered by the warranty.
- Report any dents or breakage to carrier immediately.
- Do not attempt to use unit if damaged.
- If unit has been stored in extremely cold area, wait for unit to come to room temperature before connecting power.
- Remove unit from carton.
- Remove all materials from unit interior.

SPECIFICATIONS

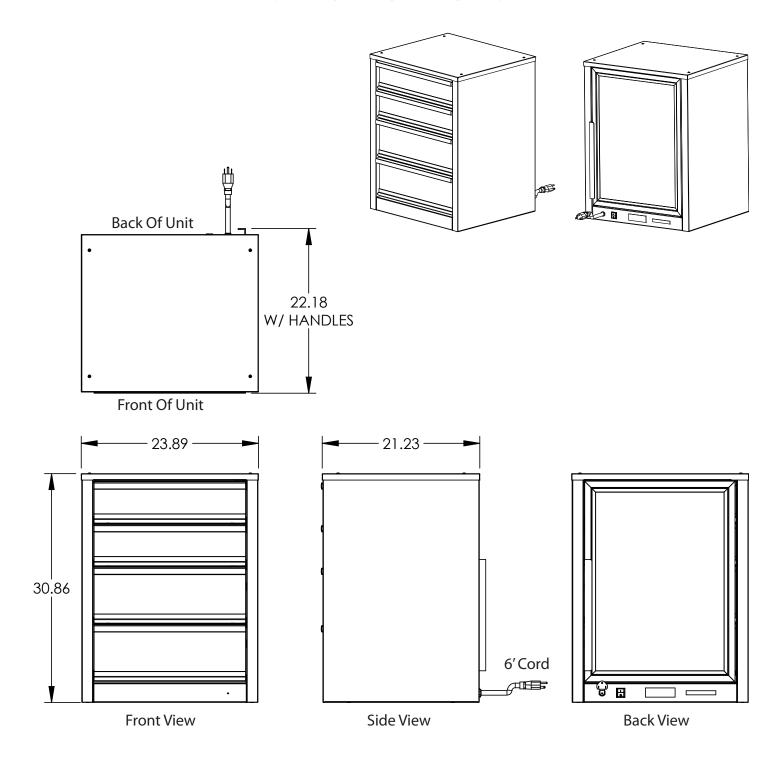


ELECTRICAL SPECIFICATIONS: DIMENSIONS:

	120 - Volt - 60		Height		Width		Depth		Crated Ship Weight	
Model	Amps	NEMA	in.	cm	in.	cm	in.	cm	lbs.	kg
PPU41C-120	4.2	5-15P	30.9	78.5	23.9	60.7	22.1	56.2	136	61.7

Freight Class: 100

SPECIFICATIONS

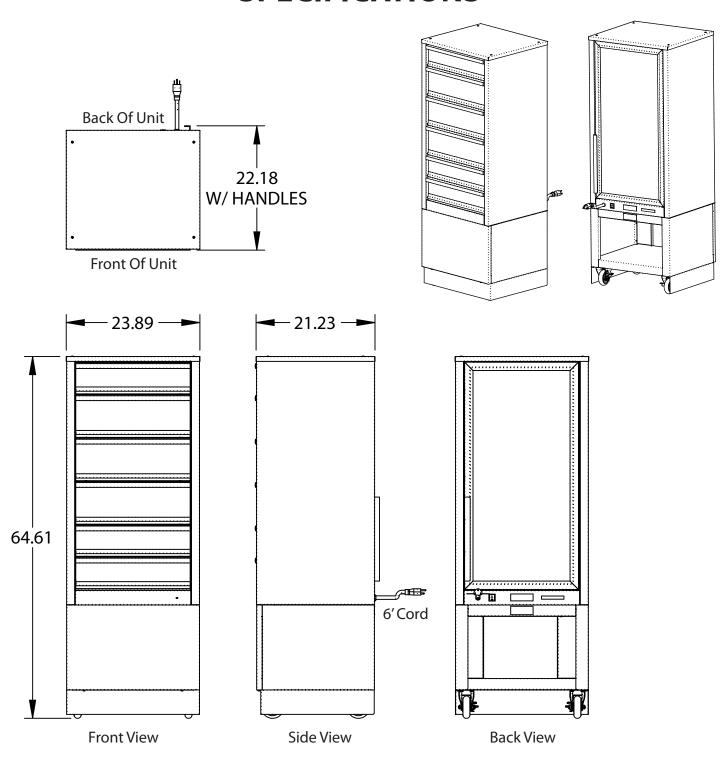

ELECTRICAL SPECIFICATIONS: DIMENSIONS:


	120- Volt - 60		Height		Width		Depth		Crated Ship Weight	
Model	Amps	NEMA	in.	cm	in.	cm	in.	cm	lbs.	kg
PPU61S-120	6.3	5-15P	64.6	164	23.9	60.7	22.1	56.2	245	112.9

Freight Class: 100


WIRE DIAGRAM

Dominoes PPU service wiring diagram

- 4 shelf unit is represented with solid lines.
- 6 shelf option is represented with dotted lines

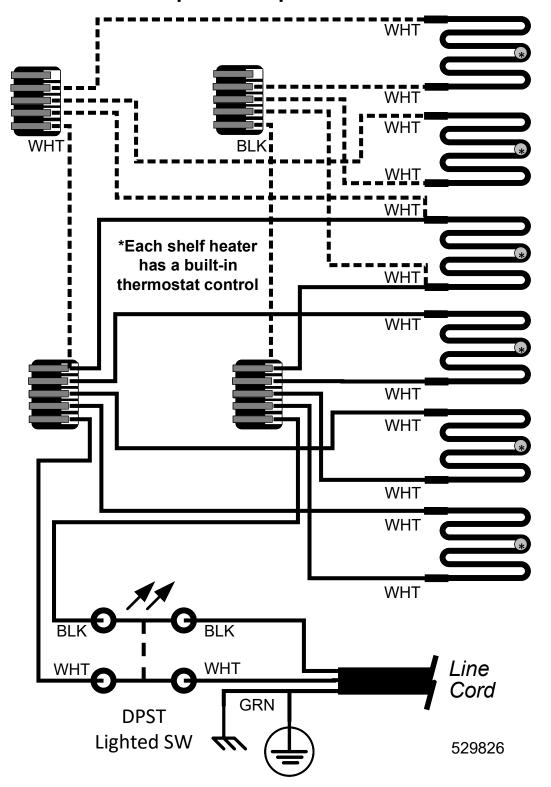

COUNTERTOP INSTALL

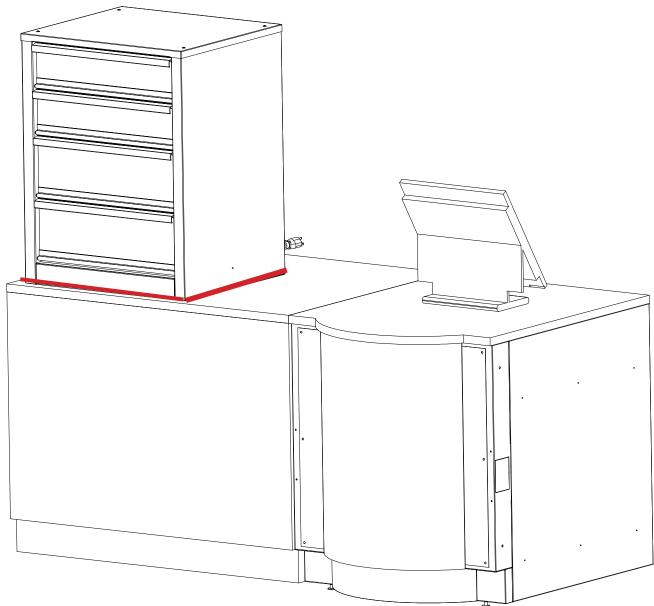


Countertop Install

- a. Set unit on counter.
- b. Seal unit to countertop by applying silicone to the bottom edges of the unit before adhearing to the countertop according to the UL sanitation requirements.
- c. Plug into 120-volt power receptacle.

Operation of Unit

- a. Turn on power switch.
- b. Allow 20-30 minutes for unit to preheat.

CART MOUNT

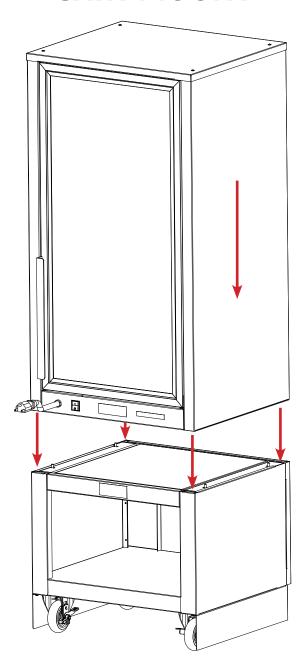

Standalone Install

Note: If unit is not bolted to cart install as instructed below.


- a. Position unit on cart.
- b. Secure unit to cart with four (4) bolts provided .
- c. Plug unit into 120-volt power receptacle.

Operation of Unit


- a. Turn on power switch.
- b. Allow 20-30 minutes for unit to preheat.

DOOR REVERSAL INSTRUCTIONS


Remove top hinge bracket (2 screws).

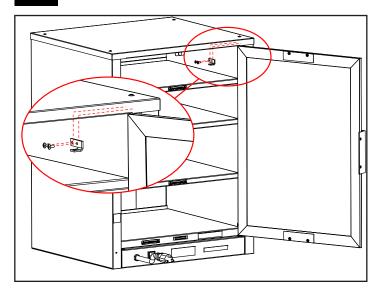


- A. Tilt top of door toward center of unit. Tilt forward so top pivot pin is on the outside of the top down flange.
 - B. Then lift door up and out of bottom hinge bracket.

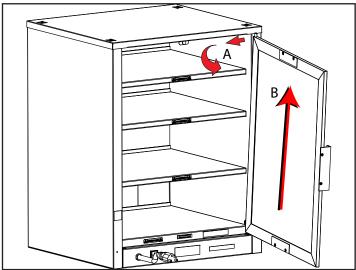


Remove bottom hinge bracket (2 screws). **Note**: The hinge brackets can be discarded

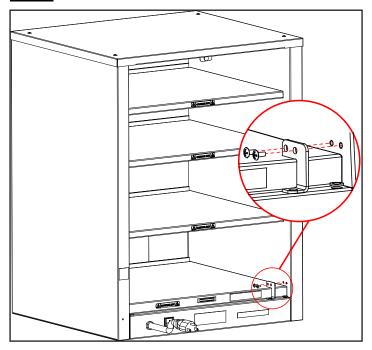


Remove screws on left side of unit where top and bottom hinge brackets will install. Also, remove the black Heyco bushing on left side by using a hammer and screw driver to punch it out.

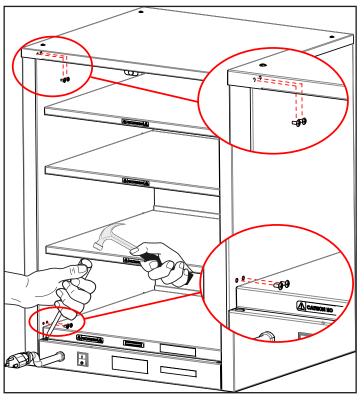


Install the new bottom hinge bracket (provided in the parts bag) in the bottom left corner of unit.

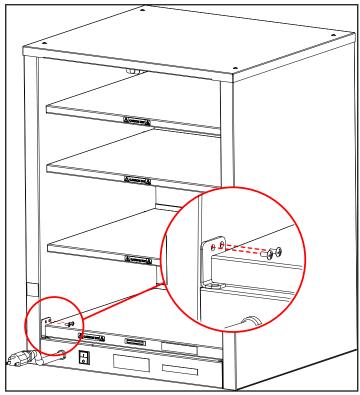


Maneuver door-top hinge pin to back side of front top down flange, and install new top hinge bracket.

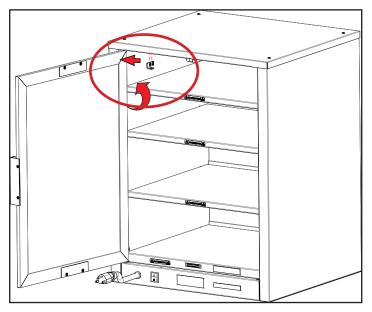

Flip door around. Install Teflon washer (provided in the parts bag) on bottom door hinge pin, and insert door bottom hinge pin into bottom hinge bracket on unit.

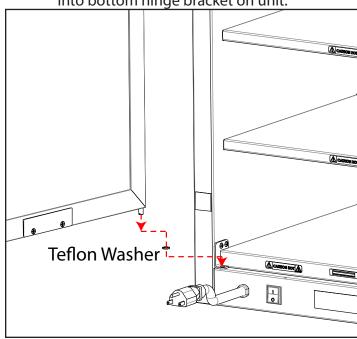

- A. Install screws (4) in old hinge bracket locations on right side of unit (extra screws provided in parts bag).
 - B. Install new Heyco bushing (1) provided in old bottom hinge pin clearance hole to close it off.

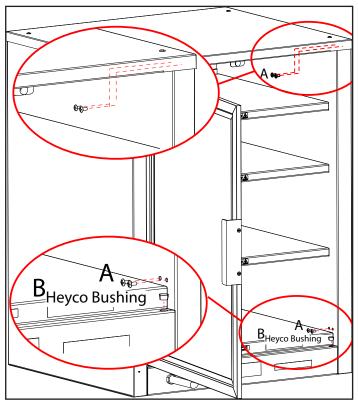

CLEANING

- Before cleaning the unit, switch it off.
- Leave the unit to cool to touch.
- Finally, wipe the unit down with noncorrocive cleaner.
- Do not use abrasives, steel wool or similar.
- After cleaning, use a soft cloth to dry and polish the surface.

AWARNING

The device is not suited for direct washing with a water jet or hose. Therefore, do not use a pressure water jet to clean the device!

AWARNING

The painted and stainless steel surfaces should be wiped clean regularly with a MILD detergent. Cleaning solutions need to be alkaline based or non-chloride cleaners. Any cleaner containing chlorides can cause blistering of painted surfaces and corrosion of the steel underneath. Chlorides are also commonly found in hard water, salts, and household and industrial cleaners. If cleaners containing chlorides or disinfectant agents are used, be sure to rinse repeatedly and dry thoroughly upon completion.

The glass and aluminum doors can be cleaned using a general purpose glass cleaner.

Installation and Operation of: Pie Pass® Pickup Unit



2305 N. Broadway

St. Louis, MO 63102

Phone: 314-231-1130 **Duke Manufacturing Co.** Toll Free: 1-800-735-3853 Fax: 314-231-5074