IFW 64 Series	FL-0314
Rev. 13 (05/06)	Page 2 of 2



## INSTALLATION INSTRUCTIONS for MODEL IFW-64 SERIES RIGID STEM WARMERS


## **HOW TO INSTALL HOOD:**


You will need a Phillips head (preferably magnetic) screwdriver with a long neck.

- 1. Slide the hole in the top of the hood over the socket.
- 2. Look inside of the hood and line up two (2) hood mounting holes with the holes in the arm assembly.
- 3. Put the screw provided on the screwdriver tip and screw loosely into one hole and then into the other; then tighten both screws.
- Screw lamp into the socket.

## **REPLACEMENT PARTS:**

DESCRIPTION	CMP No.
Switch (120V)	0808-002
Switch (240V)	0808-122
Lamp, Red (250 Watts)	0820-001
Lamp, White (250 Watts)	0820-033
Socket	0822-037

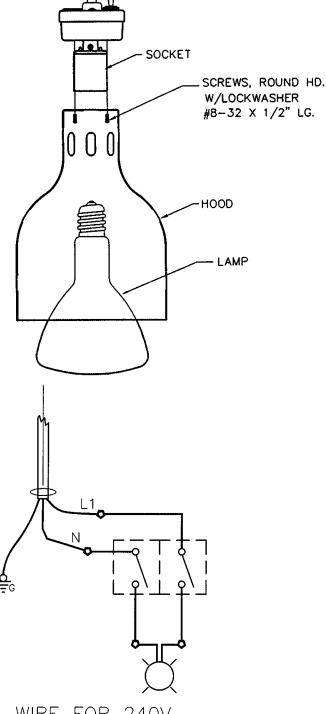

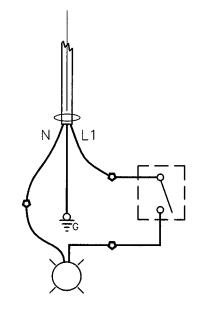

WIRE FOR 120V

WIRE FOR 240V

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com