

IFW 64 Series	FL-0314
Rev. 13 (05/06)	Page 1 of 2

# INSTALLATION INSTRUCTIONS for MODEL IFW-64 SERIES RIGID STEM WARMERS

### **ELECTRICAL SPECS:**

VOLTS	WATTS	AMPS	HERTZ	PHASE	NEMA
120	250	2.0	60	1	5-15
240	275	1.1	60	1	6-15

Warmer should be installed by an experienced electrician.


#### **U.L. REQUIREMENTS:**

- A. Wires of warmers to be connected to 75°C wire.
- B. Wires are to be installed in conduit.
- C. Warmers are not to be installed any closer than 1" from a wall.
- D. Warmers must be *at least* 16" above a combustible surface.

# **HOW TO INSTALL: (See figure at right)**

NOTE: Item numbers are in parentheses.

- 1. Put the canopy (2) over the tube (4) and run the wire through the threaded nipple of the canopy.
- 2. Connect the tube (4) to the canopy (2).
- 3. Remove two screws from the crown plate (3) and let the canopy (2) slide down the tube (4).
- 4. Mount the strap (1) to the electrical outlet box with two screws and nuts.
- 5. Wire the warmer leads to the outlet box with two screws and nuts.
- 6. Attach the ground wires, one from the ceiling and the one from the lamp, to the "GND" hole in the strap (1) with the green screw.
- 7. Screw the canopy (2) to the crown plate (3) with the two sheet metal screws.
- 8. Tighten all tubing connections; fasten threaded end of bottom stem (5) into the socket assembly (6) and tighten.

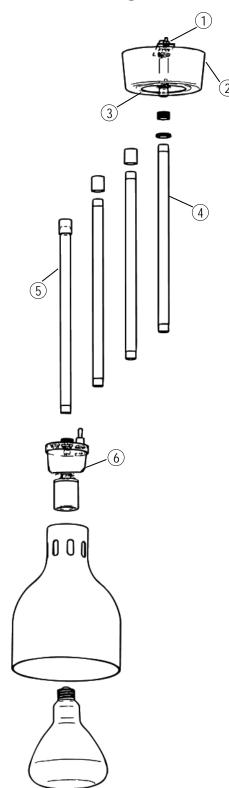

IFW 64 Series	FL-0314	
Rev. 13 (05/06)	Page 2 of 2	



# INSTALLATION INSTRUCTIONS for MODEL IFW-64 SERIES RIGID STEM WARMERS


## **HOW TO INSTALL HOOD:**


You will need a Phillips head (preferably magnetic) screwdriver with a long neck.

- 1. Slide the hole in the top of the hood over the socket.
- 2. Look inside of the hood and line up two (2) hood mounting holes with the holes in the arm assembly.
- 3. Put the screw provided on the screwdriver tip and screw loosely into one hole and then into the other; then tighten both screws.
- 4. Screw lamp into the socket.

### **REPLACEMENT PARTS:**

DESCRIPTION	CMP No.
Switch (120V)	0808-002
Switch (240V)	0808-122
Lamp, Red (250 Watts)	0820-001
Lamp, White (250 Watts)	0820-033
Socket	0822-037

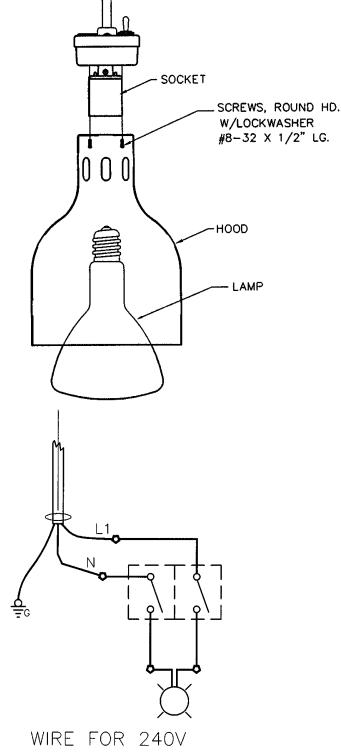

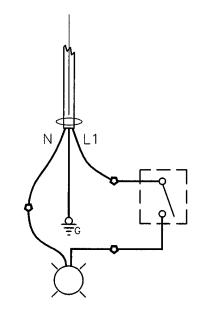

WIRE FOR 120V

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com