

Decorator Hood IFW 66 Series	FL-2194
Rev. 5 (07/10)	Page 1 of 2

## **INSTALLATION INSTRUCTIONS**IFW 66 SERIES INFRA RED WARMER

#### **ELECTRICAL SPECS:**

VOLTS	WATTS	AMPS	HERTZ	PHASE	NEMA
120	250	2.0	60	1	5-15
240	275	1.1	60	1	6-15

Warmer should be installed by an experienced electrician.


### **U.L. REQUIREMENTS:**

- A. Wires of warmers to be connected to 75°C wire.
- B. Wires are to be installed in conduit.
- C. Warmers are not to be installed any closer than 1" from a wall.
- D. Warmers must be *at least* 16" above a combustible surface.

#### **HOW TO INSTALL:**

Numbers in parentheses correspond to numbers in callouts.

- 1. Remove the two screws from the canopy and pull off the canopy.
- 2. Run the cord (1) up through the canopy, through the strain relief and the threaded nipple. Tighten the strain relief. Cut the cord to the desired length.
- 3. Mount the strap to the electrical outlet box with two screws provided.
- 4. Wire the warmer leads to the outlet box leads.
- 5. Attach the ground wire to the ground hold in the strap with the green ground screw.
- 6. Re-attach the canopy with the two screws.
- 7. Screw the bulb (4) into socket.

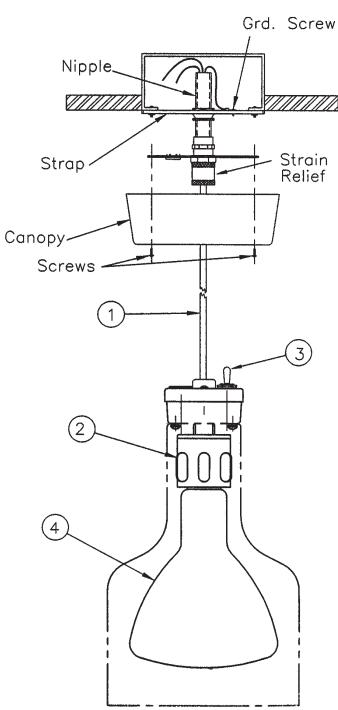

Decorator Hood IFW 66 Series	FL-2194
Rev. 5 (07/10)	Page 2 of 2



# **INSTALLATION INSTRUCTIONS**IFW 66 SERIES INFRA RED WARMER


### **HOW TO INSTALL HOOD:**

You will need a Phillips head (preferably magnetic) screwdriver with a long neck.


- 1. Slide the hole in the top of the hood over the socket.
- 2. Look inside of the hood and line up two (2) hood mounting holes with the holes in the arm assembly.
- 3. Put the screw provided on the screwdriver tip and screw loosely into one hole and then into the other; then tighten both screws.
- 4. Screw lamp into the socket.

#### **REPLACEMENT PARTS:**

ITEM	DESCRIPTION	PART NO.
1	Cord Assembly	0810-142
2	Socket Assembly	0822-037
3	Switch (120V)	0808-002
3	Switch (240V)	0808-122
4	Bulb, Red (120V)	0820-001
	Bulb, White (120V)	0820-033
	Bulb, Red (240V)	0820-014

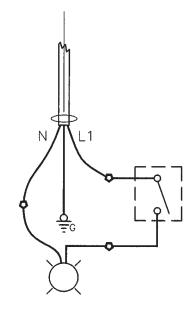

WIRE FOR 120V

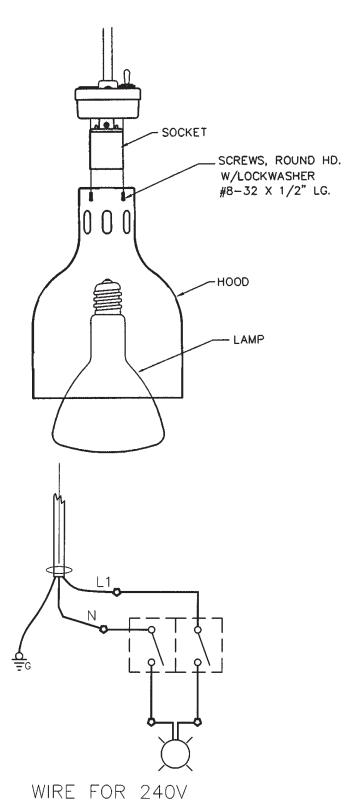

Call Toll-free: 877-CRES COR (273-7267) • Fax: 800-822-0393 • www.crescor.com