



MANUAL

Electronic Hotel Safe

#911HS082

PLEASE DO NOT KEEP EMERGENCY KEYS IN YOUR SAFE!

Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe.

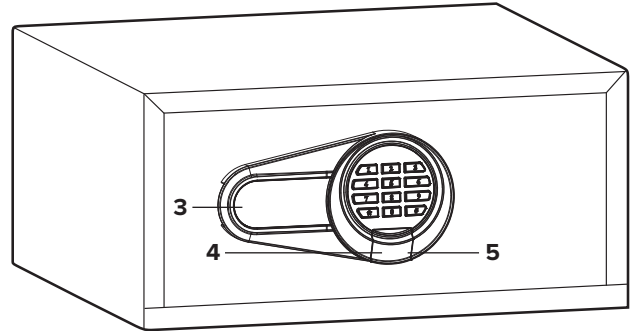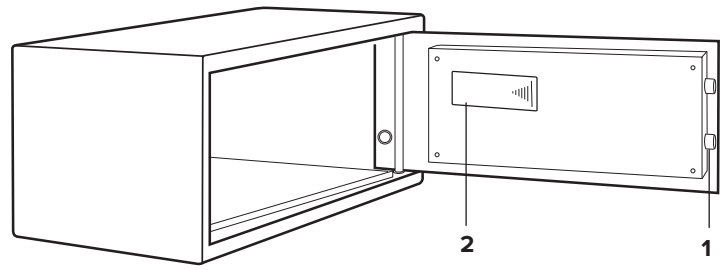

- | | |
|------------------------|------------------------|
| 1. Bolts | 4. USB (for CEU) |
| 2. Battery Compartment | 5. Emergency Key Cover |
| 3. Display | |

POWER SUPPLY

This product takes (4) AA batteries. This system will automatically convert to power-saving mode. If the display reads "BA-L", it means the voltage is low and must be replaced as soon as possible.

CAUTION: When replacing the batteries, replace all the batteries at once. Never use old and new batteries together. Never use different types of batteries.

USING PERSONAL CODE TO CLOSE & OPEN THE SAFE

TO CLOSE: Enter any 4 to 6 digit number then press the "#" key. The word "CLOSE" will show on the display, and the safe will be closed.

TO OPEN: Enter any 4 to 6 digit number then the word "OPEN" will show on the display, and the safe will be opened automatically.

SETTING A PERSONAL CODE

You can change any personal code (4-6 digits) once the door is closed.

USING MASTER CODE TO OPEN THE SAFE

Enter your 6 digit master code. The word "OPEN" will show on the display, and the safe will open automatically.

SETTING THE MASTER CODE

Keep the door open and press "#" twice and "PROG" will show on the display. After "PROG" disappears, input the original master code (factory master code is 011223) and "NEW" will show on the display. After "NEW" disappears, input the new master code (6 digits) within 5 seconds and "AGAIN" will show on the display. After "AGAIN" disappears, input the new master code again within 5 seconds. "DONE" will show on the display. This means the master code has been changed successfully. If "ERROR" shows on the display, the new master code setting failed.

OPENING THE SAFE IN AN EMERGENCY

If the electronic circuit malfunctions or the code is lost or forgotten, you can use the override key to open the safe.

SECURITY FUNCTION

HIDE THE CODE: Press "*", to activate the code hiding function. The numbers being input within 5 seconds of the code hiding function being activated will not be visible and show as "-". If numbers aren't input within 5 seconds, the hiding function will be closed automatically. To restart this function, press "*". If you press "*" when you input the code after the door is closed, the code will not display.

AUTOMATIC LOCK: After 5 consecutive times of error codes, the system will be locked automatically. During that time, the display will show "HOLD15" if you press any button. After 15 minutes, the system will start again, allowing button entry.