

BUNN®

GPR BREWER & SERVER WEEKLY CLEANING INSTRUCTIONS

WEEKLY CLEANING

Complete
daily
cleaning
first



2. Remove sprayhead and wipe down brewhead.




3. Use the long end of the deliming key to clean the sprayhead outlet fitting.



4. Use the short end of the deliming key to clean the bypass outlet fitting.



5. Use the pointed end of the deliming key to remove lime deposits from the sprayhead.

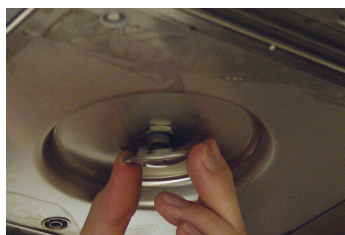

6. Reattach the sprayhead.



7. Use a brush to scrub server interior.



8. Unscrew faucet assembly.



9. Use brush on faucet shank.



10. Reattach faucet assembly.



11. Rinse Cycle - Place empty server on brewer. Select 1 gallon batch size and press "START".



12. Drain rinse solution from server and return to coffee brewer for normal operation.