




CARNIVAL KING

USER MANUAL

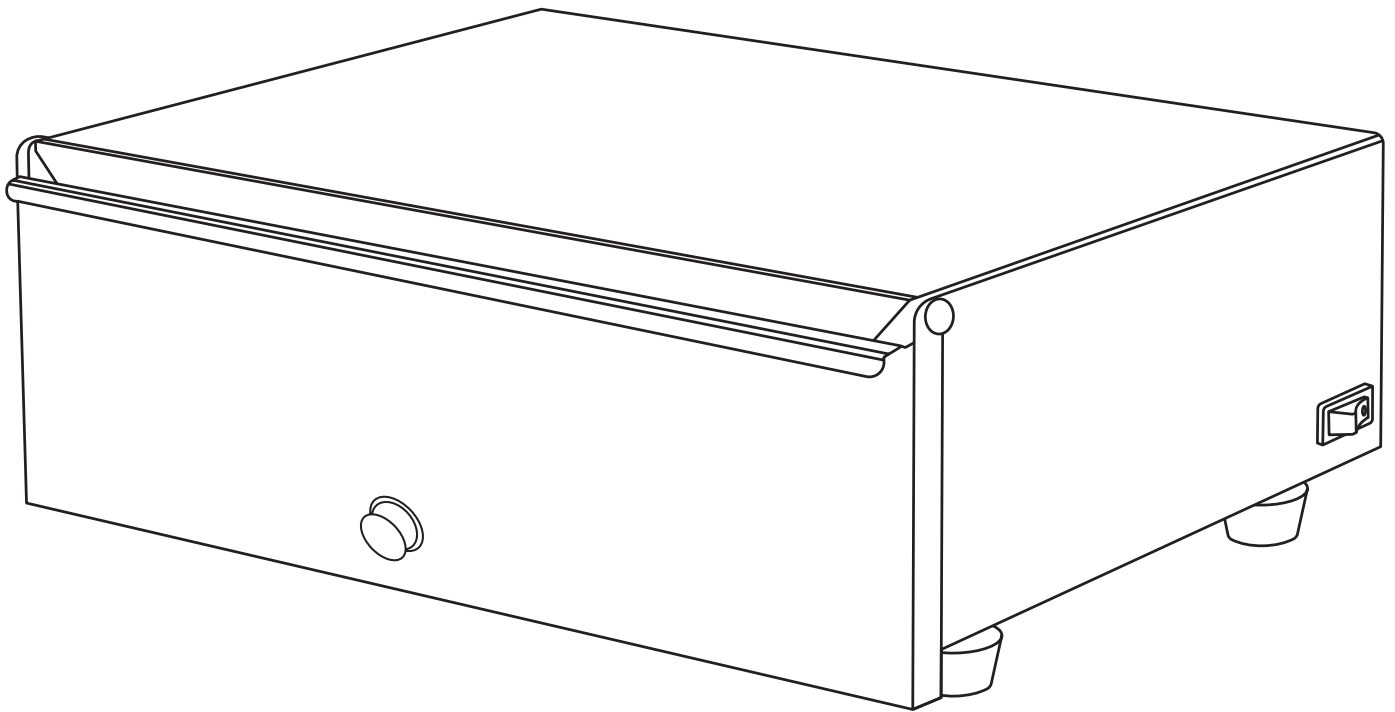

HOT DOG BUN WARMER

Item #382BW24D

CE

07/2021

www.CarnivalKingSupplies.com



HOT DOG ROLLER GRILLS MANUAL

Introduction

1. Read all instructions before using the product
2. Always follow basic precautions when using electrical equipment in order to minimize the risk of fire, electrical shock, and injury.
3. Clean machine thoroughly before and after every use.

Safety Instructions

1. Plug the machine into a certified electrical outlet that has a voltage rating that corresponds with the voltage rating on the machine.
2. Always unplug the model when it is not in use and prior to cleaning. Do not operate unit with a damaged cord or plug or after it is dropped or any malfunction occurs. Use authorized service for examinations and/or repairs.
3. Exercise extreme caution when the model is used near children and when it is left operating and unattended.
4. Thoroughly clean the unit prior to the first use.

Preparation

1. Unpack and inspect your bun warmer or drawer for any visible damage. If damage is noted, do not use and contact the place where you purchased the Carnival King item.
2. Set unit on a flat surface.
3. Position unit near a power outlet. Avoid use of extension cords.
4. To avoid electrical damage, make certain that the nameplate voltage is the same as the outlet voltage.
5. Warmer has hot parts. Do not use anywhere near gasoline or other flammable liquids.
6. Make sure electrical connections are in compliance with applicable portions of the electrical code.
7. Prior to first use, it is advised that you clean the rollers of the machine with a soft cloth.

Electrical Requirements

1. Check the product tag for voltage/wattage requirements and plug into an outlet with sufficient power.

Operation

1. Place the machine on a flat counter or tabletop surface.
2. Plug the cord into a 3-wire 120V outlet. Place buns **STILL IN THE BAG** inside the machine. Removing buns from the bag will dry out your buns.

Cleaning

1. Unplug the power cord
2. Do not ever immerse the machine in liquid of any kind
3. Remove the inside rack and clean the inside and outside of the machine with a moist sponge and a mild soap.
4. Clean rack and outside of the machine with recommended Noble Formula-D.
5. Wipe the machine dry.



Attack tough grease, oil, and carbon with this ready-to-use carbonizer and degreaser. Its unique formula is designed to clean ovens, grills, hoods and a wide variety of other surfaces.




HOT DOG ROLLER GRILLS MANUAL

Specs

MODEL	WIDTH	DEPTH	HEIGHT	# BUNS	VOLTAGE	WATTAGE	CERTIFICATIONS
382BW24D	15¾"	11"	47⁄8"	16-24	120	20	CE

Parts View

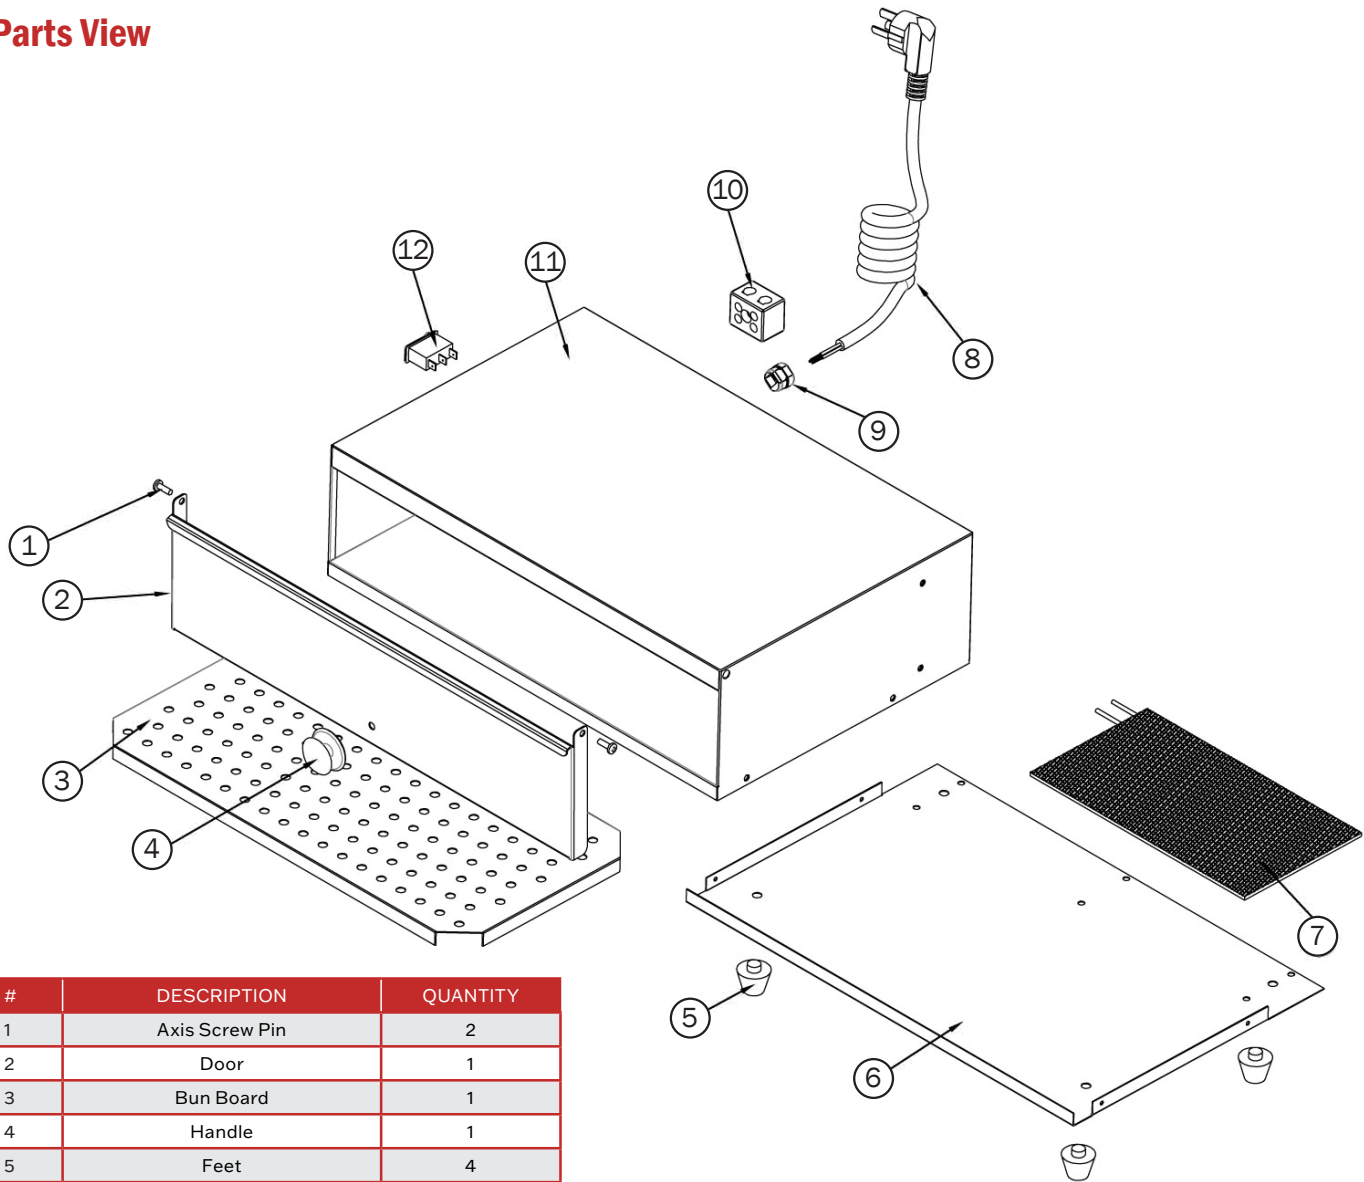

#	DESCRIPTION	QUANTITY
1	Axis Screw Pin	2
2	Door	1
3	Bun Board	1
4	Handle	1
5	Feet	4
6	Bottom Board	1
7	Heater	1
8	Power Cord & Plug	1
9	Power Cord Fixer	1
10	Terminal Block	1
11	Body	1
12	Switch	1