

USER MANUAL



CREPE MAKER

Item #382CM16A, #382CM16M

CREPE MAKER MANUAL



Important Safeguards

SAVE AND READ THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. READ ALL INSTRUCTIONS.
- 2. To protect against risk of electric shock, do not put appliance in water or other liquids.
- 3. Do not touch surfaces that may be hot. Use handles and knobs provided.
- 4. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- 5. Do not operate the Commercial Crepe Maker or any other electrical equipment with a damaged cord or plug, or after the unit malfunctions or is dropped or damaged in any manner. Return it to the nearest authorized service center for examination, repair, and/or adjustment.
- 6. The use of attachments not recommended or sold by us may cause fire, electric shock, or injury.
- 7. Do not use outdoors.
- 8. Always check that the control is set to off before plugging cord into wall outlet. To disconnect, turn the control knob to off, then remove plug from wall.
- Do not place near a hot gas or electric burner or heated oven.
- 10. Do not let cord hang over edge of table or counter, or touch hot surfaces, hot gas, electric burner or heated ovens.
- 11. The Commercial Crepe Maker should always be on a stable countertop or table.
- 12. Do not use appliance for other than intended use.
- 13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 14. Children should be supervised to ensure that they do not play with the appliance.

382CM16A

120V

120V Crepe Maker Specs

Item#

Voltage Wattage

Plug

Unit Dimensions

Temperature

17.75" x 17.75" x 7.25" 120° - 570°F

1750W 5-15P

Features:

- 1. Heavy Duty Cast Iron Plate
- 2. Stainless Steel Construction
- 3. Thermostat Control
- 4. Power and Heating Indicator Lights
- 5. Non-Slip Feet
- 6. Includes a Metal T-Spreader and Spatula

208V-240V Crepe Maker Specs



Item#	382CM16M	
Unit Dimensions	17.75" x 17.75" x 7.25"	
Temperature	120° - 570°F	
Voltage	208V - 240V	
Wattage	2450/3265W	
Plug	6-20P	

Parts Key for CM16 16" Crepe Makers		
Part Name	Replacement Part #	
Heating Element; 120V, 1750W	382PCMELEM	
Heating Element; 208/240V, 2450/3265W	382PCMELEM2	
Hot Plate	382PCMHOTPL	
Thermostat, 3A	382PCMTHERM	
Thermostat Knob	382PCMKNOB	

CREPE MAKER MANUAL

Grounding Instructions

- 1. For your protection, the Commercial Crepe Makers are equipped with a 3-conductor cord set.
- 2. The unit is supplied with a molded 3-prong grounding type plug and should be used in combination with a properly connected grounding-type outlet.

Seasoning Instructions

ATTENTION: Every Cast Iron Carnival King Crepe Maker needs to be seasoned before first-time use.

Seasoning your crepe maker will take about 1 hour. Seasoning makes the crepe maker easy to clean, prevents rust, and keeps batter and/or other food from sticking. For best results, seasoning your cooking surface regularly is recommended.

- 1. Scrub the cooking surface with a light steel wool scrubber and a little bit of mild soap to remove any excess coating or dirt. Rinse thoroughly and dry completely. It's important to pre-clean before the seasoning process.
- 2. Once thoroughly rinsed and dry, plug unit into an outlet in a well-ventilated area.
- 3. Switch ON the appliance and set to 570°F. Allow the cooking surface to heat until HEATING light turns OFF.
- 4. Use about a tablespoon of neutral-flavor vegetable oil or flaxseed oil (do not use olive oil or butter, which can turn rancid) in the center of the cooking surface. Using a cotton cloth or paper towel (synthetic materials will melt and/ or stick to the surface), spread the oil evenly and let it cook for 5 to 10 minutes until the surface loses its initial sheen and appears dry.
- 5. Repeat Step 4 five to six times, rubbing the surface with the same cotton cloth and decreasing the amount of oil used each time until it feels smooth and non-tacky.
- 6. Remember: lightly seasoning the cooking surface after each use will help ensure batter and/or food does not stick to surface.

Operation

- 1. Plug the cord into a outlet. The green POWER light will illuminate to show that the unit is on.
- 2. Turn the thermostat knob clockwise to the desired set temperature. The orange HEATING light will illuminate to indicate the heating element is turned on. Once the set temperature is reached, the HEATING light will turn off. The orange HEATING light will cycle on and off with the heating element to maintain the set temperature.
- 3. Pour batter on middle of cooking surface and use the batter spreader to spread the batter evenly. Once the crepe is cooked to desired browning on the bottom side, use the spatula to flip the crepe and cook the other side. Use the spatula to remove the crepe when finished cooking. For best results, wipe excess batter off of spreader in between crepes.
- 4. After cooking, turn the thermostat to 0.

Also available...

Crepe Mix (sold separately)

#382CREPE

Treat your patrons to the rich taste of traditional French crepes made from this convenient, simple-to-use Carnival King crepe mix. Whether served as a sweet dessert, snack, or satisfying meal, the delicate texture of crepes can be filled with a variety of wholesome ingredients, including breakfast meats, savory cheeses, onion, and more!



CREPE MAKER MANUAL



Equipment Limited Warranty

Carnival King warrants its equipment to be free from defects in material and workmanship for a period of 6 months. This is the sole and exclusive warranty made by Carnival King covering your Carnival King brand equipment. A claim under this warranty must be made within 6 months from the date of purchase of the equipment. Only the equipment's original purchaser may make a claim under this warranty. Carnival King reserves the right to approve or deny the repair or replacement of any part or repair request. The warranty is not transferable. Carnival King Equipment installed in/on a food truck or trailer will be limited to a period of 30 days from the original date of purchase.

To Make a Warranty Claim:

For Warranty Inquiries contact the location where you purchased the product:

- WebstaurantStore.com: Contact help@webstaurantstore.com. Please have your order number ready.
- The Restaurant Store: If you purchased this unit from your local store, please contact your store directly.
- **TheRestaurantStore.com:** Online purchases, call 717-392-7261. Please have your order number ready.

Failure to contact the designated location prior to obtaining equipment service may void your warranty.

Carnival King makes no other warranties, express or implied, statutory or otherwise, and HEREBY DISCLAIMS ALL IMPLIED WARRANTIES. INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

This Limited Warranty does not cover:

- Equipment sold or used outside the Continental United States
- Use of unfiltered water (if applicable)
- Carnival King has the sole discretion on wearable parts not covered under warranty
- Equipment not purchased directly from an authorized dealer
- Equipment used for residential or other non-commercial purposes
- Equipment that has been altered, modified, or repaired by anyone other than an authorized service agency
- Equipment where the serial number plate has been removed or altered.
- Damage or failure due to improper installation, improper utility connection or supply, and issues resulting from improper ventilation or airflow.
- Defects and damage due to improper maintenance, wear and tear, misuse, abuse, vandalism, or Act of God.

Any action for breach of this warranty must be commenced within 6 months of the date on which the breach occurred. No modification of this warranty, or waiver of its terms, shall be effective unless approved in a writing signed by the parties. The laws of the Commonwealth of Pennsylvania shall govern this warranty and the parties' rights and duties under it. Carnival King shall not under any circumstances be liable for incidental or consequential damages of any kind, including but not limited to loss of profits.