



www.CarnivalKingSupplies.com

USER MANUAL



POPCORN POPPERS

Item # 382PM470, #382PM850

ETL LISTED CE
12/2018



4 OZ. & 8 OZ. POPCORN POPPER MANUAL

General Safety Precautions

1. This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.
2. This popper must never be modified and should only be used for its intended purpose.
3. Always check that this popper is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If it is not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
4. Before disconnecting from the power source, be sure that all switches have been turned OFF. To unplug the product, firmly grasp the plug and remove from the outlet – never pull on the cord itself.
5. Ensure that the power outlet, plug and cord being used are in good, working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
6. If missing or broken components are found, leave the popper TURNED OFF. Do not attempt to use the popper. Contact a qualified service technician to make all repairs.
7. Use in the presence of flammable liquids, gases, dust or other explosive situations should be avoided.
8. ALWAYS use oil when popping kernels; NEVER operate with a dry pot.
9. Never directly touch the pot when in use. Wear oven mitts or other protective gear when dumping popcorn, and be sure that all hot oil and water is contained; contact with skin can cause burns. Surfaces will be extremely hot during and after use, and should be allowed to cool before transporting or putting the unit in storage.
10. It is not recommended the machine be used outdoors.
11. Manual cleaning required – unit and parts are not dishwasher safe. Do not use abrasive cleaning products.

4 oz. Popcorn Popper Specs



Item#	382PM470
Unit Dimensions	15"L x 12 1/4"W x 20 1/2"H
Capacity	4 oz.
Voltage	120V
Wattage	470W

8 oz. Popcorn Popper Specs



Item#	382PM850
Unit Dimensions	15"L x 12 1/4"W x 24"H
Capacity	8 oz.
Voltage	120V
Wattage	850W

Popper Parts List

- A. Main unit
- B. Popping pot
- C. Aluminum popcorn scoop
- D. Small plastic popcorn scoop
- E. Measuring cup set





4 OZ. & 8 OZ. POPCORN POPPER MANUAL

General Safety Precautions

1. Before use, securely station the popper on a dry, level surface that is away from a pool or any water.
 - a. **Before first use, be sure to clean the popper's glass surfaces and wipe down the interior with a clean, damp sponge.
2. Hang the pot on the popper so that its roller bar is on the door side of the machine.
3. Plug the power cord into a properly grounded electrical outlet.
4. Turn the light and heater to the ON setting before adding butter or oil to the pot. It is recommended that the amount not be more than .5 oz. Only use butter or oil with this popper. Liquid sugar or honey can cause damage to the pot, smoking, and even injury.
5. Allow the kettle to preheat for 3-4 minutes, or until you see steam exiting the pot.
6. Open the lid and add kernels into the pre-heated pot. Use provided measuring cup (1 scoop per batch) when dealing with bulk kernels. Close lid. At this point, the lid WILL BE HOT. Use caution.
7. If using the 8 oz. popper, turn on the stirrer via its switch – disregard this step when working with the 4 oz. model. Once that step is completed, safely close the main unit's doors. Popcorn will begin popping after 2 to 3 minutes.
8. When popping has finished, turn the stirrer (on 8 oz. model) and pot heater to OFF.
9. Gently turn the roller bar to completely empty the contents of the pot.
10. At this point, only the spot light warmer should be switched to ON. This will keep your popcorn warm and dry until it is served.
11. Remove and serve popcorn with the scoops provided. If more butter or seasoning is desired, complete this step outside of the main unit in a separate bowl or container.
12. When finished, be sure to unplug the machine from its power supply.

Cleaning and Maintenance

** Once you are finished popping, unplug the power supply and allow ample time for the unit to cool. When removing the pot, use caution near the heat lamp bulb. It may still be hot.

** Clean the pot after every 3 or 4 uses, or before it is going to be stored for an extended period of time.

FOR THE KETTLE

1. Turn off all switches.
2. Add a kettle cleaner, such as Carnival King Kettle Kleen (382KETTLEKLN) directly into the kettle. Add the desired amount of water as noted on the back of the kettle cleaning solution.
3. Turn on the heater and stirrer (on 8oz. model) and allow the water to boil for 2 minutes.
4. Turn off the heater and stirrer (on 8oz. model). Dump the water into a pan and discard.
5. Wipe the kettle with a damp cloth.
6. Repeat as necessary.

FOR THE CABINET

With all switches off and the unit cooled, use a degreaser such as Noble Chemical's Formula D Decarbonizer and Degreaser (147FORMULAD) and a damp cloth to wipe the interior and exterior. Make sure your popper's glass stays clean and clear by wiping with a window cleaner, such as Noble Chemical's Reflect Glass Cleaner (147REFLECT).

90 Day Replacement Warranty

(Effective from date of purchase)

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, supervision when required, or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty. This warranty does not apply to any warranty claims made on products sold or used outside of the United States. Residential use voids this warranty.