



OKLAHOMA SOUND CORPORATION

THE PRESTIGE LECTERN

Sound Floor Lectern

PRODUCT HANDBOOK



MODEL #711

INTRODUCTION

The Prestige Lectern — Model 711

A beautifully handcrafted podium that commands a dignified presence. Wide reading surface illuminated by a recessed fluorescent lamp; also features surface mounted digital timepiece. Self-contained solid-state multimedia amplifier offers three mics and one line for CD/Tape play. Now also includes wireless options built-in. Two line out jacks provide expansion possibilities for additional speakers and tape recording; and sound may be customized via the full range tone controls. Unit moves easily on four concealed easy roll casters; two locking. Colors: Walnut, Light Oak, Medium Oak or Mahogany.

Dimensions: 52"H x 26"W x 20"D.

CARE OF YOUR CABINET

All exterior and interior exposed surfaces are melamine covered as well as edges in matching patterned melamine material. To refresh the appearance, wipe the surface with a cloth soaked lightly in furniture oil. Avoid speaker grill area. Your cabinet will look as good as new.

TECHNICAL SPECIFICATIONS

Power Output.....50W RMS at 10% THD	Power Supply110-120V ohms DC 10.8 12V
Mic.....Electret Condenser (2)	Fuse2A Normal
Aux.....150 mV>220K	Output8 ohms
Frequency...100HZ-25KHZ	Wireless frequency187,8275 MHZ 187,190MHZ
Response... + 3dB	

Accessories

Handheld mic; clip-on mic; gooseneck; Shockmount mic holder; digital clock

Manufacturers Warranty

Our Lecterns undergo the most rigid and exacting tests for superior quality and performance before leaving the factory. Oklaboma Sound Corporation warrants this product to be free from defective material and workmanship on the electronic product speakers and microphones for two years from the date of resale by an authorized Oklaboma Sound distributor. Oklaboma Sound will replace defective parts and repair malfunctioning products under this warranty when the defect occurs under normal installation and use, provided the unit is returned to our factory via prepaid transportation after direct authorization and approval by Oklaboma Sound. This warranty provides that examination of the returned product must disclose in our judgement, a manufacturing defect. This warranty does not extend to any product which has been subject to misuse, neglect, accident, improper installation, or where the serial number has been removed or defected and is given in lieu of any other warranty implied or expressed and will not cover any consequential damages.



700 SERIES WIRELESS AMPLIFIER OPERATING INSTRUCTIONS

Operating Precautions

Before operating the amplifier, be sure you fully understand all instructions and features of the amplifier. DO NOT turn amplifier on until all input and output connections have been made. NEVER replace fuses unless power is off.

Microphone Input Connection

The microphone input accepts 1/4" phone jack. Do not position microphone next to or facing speakers. This may cause acoustic feedback.

Wireless Operation

Turn on the power on both the wireless receiver and wireless mic., making sure both are set to matching channels, either "A" or "B".

Auxiliary Input

One auxiliary input is provided for radio tuner, tape recorder, CD player or multi-media equipment. Output level is adjusted by the auxiliary volume control.

Tone / Equalization Controls

The Low and High frequency controls are similar to the bass and treble controls found on most stereo systems. Optimum tone is achieved by first setting both knobs halfway; adjust Low and High frequency controls to suit environment.

Auxiliary / Line Out

Connect additional speaker line to navy line out connector of the amplifier. For maximum power transfer and to avoid amplifier overload, be sure that the total impedance of the speaker line matches the output impedance setting on amplifier. *Be sure* that speaker terminals are not shorted together by speaker line connecting cables. Can also be used for a recording device.

Power Supply 12V DC Operation

Connect a 12 volt rechargeable battery 5 Amp (not included) to the battery input connector located on the panel of the amplifier (using 6' battery cable). Be sure that the positive pole of battery is connected to the white wire terminal (+) and the negative pole to the Brass wire (-). When lectern is plugged into a standard wall outlet, the battery will automatically recharge. Green indicator light illuminates during recharge mode.

Precautions

- Set Mic volume control on lowest when turning unit on.
- Insure correct polarity for D.C. supply connections.
- Reverse connection will blow the fuse and may damage internal circuitry.
- Always replace fuse with specified rating.

Removal and Installation of Amplifier

If your amplifier has to be removed for servicing — follow these simple steps:


- 1) Disconnect A/C wall plug.
- 2) Remove 4 side screws two on each side panel under amp top.
- 3) Disconnect speaker wire at rear of amplifier.
- 4) Pack it into a strong box with ample cushioning and return to factory.
- 5) To install new amplifier reverse the above procedure.

OPTIONAL/ADDITIONAL EQUIPMENT WITH WIRELESS AMPLIFIERS

Your lectern includes two corded microphones. For complete freedom of movement, use any of these wireless systems—

HAND-HELD WIRELESS MIC. / LWM-5

This wireless hand-held Mic. Uses a 9-volt battery. Select channel A or B to eliminate outside frequency interruption. Move freely up to 200 ft. away!

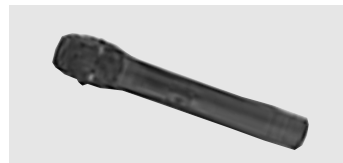

TIE-CLIP LAVELIER WIRELESS MIC. / LWM-6

Includes pocket-size transmitter with a clip-on mic. Uses a 9-volt battery. Select channel A or B to eliminate outside frequency interruption. Move freely up to 200 ft. away!



HEADSET WIRELESS MIC. / LWM-7

Includes pocket-size transmitter with a headset mic. Uses a 9 volt battery. Select channel A or B to eliminate outside frequency interruption. Move freely up to 200 ft. away!



USE WITH NON-WIRELESS AMP or ADDED WIRELESS USERS

TIE CLIP LAVALIER WIRELESS MIC SYSTEM / #WM-190TC

A compact, pocket-size, wireless system with tie-clip, lavalier type microphone. Includes transmitter, receiver and tie clip mic. Move freely up to 200 ft. Operates on two 9V batteries.



WIRED-WIRELESS MIC SYSTEM / #WM-100H

Hand-held wireless mic system. Receiver has antenna and on/off switch. Transmitter is built into mic. Move freely up to 50 ft. Mic uses AA battery; receiver uses AAA battery.



DUAL HAND-HELD WIRELESS MIC SYSTEM / #WM-200H

Offers freedom of movement for two people, Karaoke style or speaker/audience participation; up to 200 ft. away. Receiver operates on 110V AC. Each mic transmitter uses one 9V battery (not Included).



12V LANTERN STYLE RECHARGEABLE BATTERY / #PS12V

12V 5 amp rechargeable battery pack w/included cable connects to any of our lecterns for battery power. 20 hr life.



For these and other OSC accessories, please contact your dealer, or:

OKLAHOMA SOUND CORP.

149 Entin Road, Clifton, NJ 07014; Tel: 973-594-9000 • Fax: 973-594-9339

Web-Site www.oklahomasound.com • e-mail: info@oklahomasound.com