



OPERATING YOUR NEW ECO SCOOP SHOWER

- The Scoop Shower water valve is activated by pressing down on the white nozzle pin with the scoop or disher which is then rinsed with fresh water from the top and bottom at the same time. Make sure the scoop or disher is centered over the nozzle pin before pressing down to start the water flow. When you lift the scoop or disher, the water valve is automatically closed and the wastewater runs down the drain.
- The black knob on left controls the amount of water supplied and can be adjusted to suit your needs.
- First time out, let Scoop Shower run continuously for three minutes to clean the system.
- Daily use: let the Scoop Shower run continuously for one minute at the start and at the end of the day. Clean and sanitize entire unit once a day.
- Do not use the overflow tube that is included during daily operation. It is only used to fill the sink for cleaning purposes.

The Dipwell Company – 82 Industrial Drive, Unit 3 – Northampton, MA – 800-982-6730

www.dipwell.com