

# **LAVEX**

JANITORIAL

**PRO SERIES**

# **INSTRUCTION MANUAL**



READ ENTIRE MANUAL BEFORE USE

## **LAVEX JANITORIAL PRO SERIES STICK VACUUMS USER MANUAL**

**457VC8006BL • 457VC8006GY**

11/2021

# TABLE OF CONTENTS

<b>1. Safety Warning</b> . . . . .	<b>2-3</b>	4.2.1 Preparing . . . . .	<b>5</b>
<b>2. Package Content &amp; Assembly</b> . .	<b>3-4</b>	4.2.2 Battery Install & Remove . . . . .	<b>6</b>
2.1 Packing List . . . . .	<b>3</b>	4.2.3 Operating. . . . .	<b>6</b>
2.2 Accessories . . . . .	<b>3</b>	4.2.4 Foldable Aluminum Alloy Tube. .	<b>6</b>
2.3 Product Assembly . . . . .	<b>4</b>	<b>5. Maintenance</b> . . . . .	<b>7-8</b>
<b>3.Charging.</b> . . . . .	<b>4</b>	5.1 Main Body Cleaning . . . . .	<b>7</b>
3.1 Charging. . . . .	<b>4</b>	5.2 Dust Box Cleaning . . . . .	<b>7</b>
3.2 Power Indicator . . . . .	<b>4</b>	5.3 Brush Roller Cleaning . . . . .	<b>8</b>
<b>4. Product Review.</b> . . . . .	<b>5-6</b>	<b>6. Troubleshooting</b> . . . . .	<b>8</b>
4.1 Brush Introduction . . . . .	<b>5</b>	<b>7. Customer Service</b> . . . . .	<b>9</b>
4.2 How to Use. . . . .	<b>5</b>	<b>8. Warranty</b> . . . . .	<b>10</b>

## 1. SAFETY WARNING

*Read all instructions in this guide before assembling or using your vacuum cleaner.*



**IMPORTANT:** Please read the following safety warnings before using this product. Please take all safety measures when operating to avoid malfunctions caused by accidental operation.

1. This Lavex Janitorial appliance is not intended for use by children without proper parental supervision.
2. This appliance should only be used in dry locations. Do not use or store outdoors or on wet surfaces. Do not handle any part of the battery, plug, or appliance with wet hands.
3. Do not use the appliance in the event there is damage.
4. Always turn off the appliance before charging.
5. Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
6. Do not use without filters or dirt cups to avoid damaging the motor and contaminating the air.
7. FIRE HAZARD: Do not place this appliance on or near any flammable machinery or hot surface.
8. Unplug the charger from the power outlet before performing routine cleaning or maintenance.
9. Battery leaks may occur under extreme conditions. If any liquid gets on your skin, wash quickly with soap and water. If liquid gets into your eyes, rinse with water for at least 15 minutes immediately. Seek medical attention immediately.

10. Always charge the appliance with the charger provided in your initial purchase.
11. Avoid using this product to vacuum hard, sharp objects, as this may cause damage.
12. Do not expose the appliance to freezing temperatures to encourage longer lasting battery charge.

**Note:** This appliance has state of the art thermal protection technology. The machine will power down in the event the item is over-heated. Please do not force start the machine if this takes place and allow the machine to rest until cool.


## 2. PACKING CONTENT & ASSEMBLY

### 2.1 PACKAGE LIST


Please confirm you have received all parts according to the below sheet with your initial purchase.

- |                                  |                |
|----------------------------------|----------------|
| (1) Main Body                    | (1) Dust Brush |
| (1) Foldable Aluminum Alloy Tube | (1) Wall Mount |
| (1) Electric Brush Head          | (1) Charger    |
| (1) Crevice Tool                 | (1) Battery    |

### 2.2 ACCESSORIES

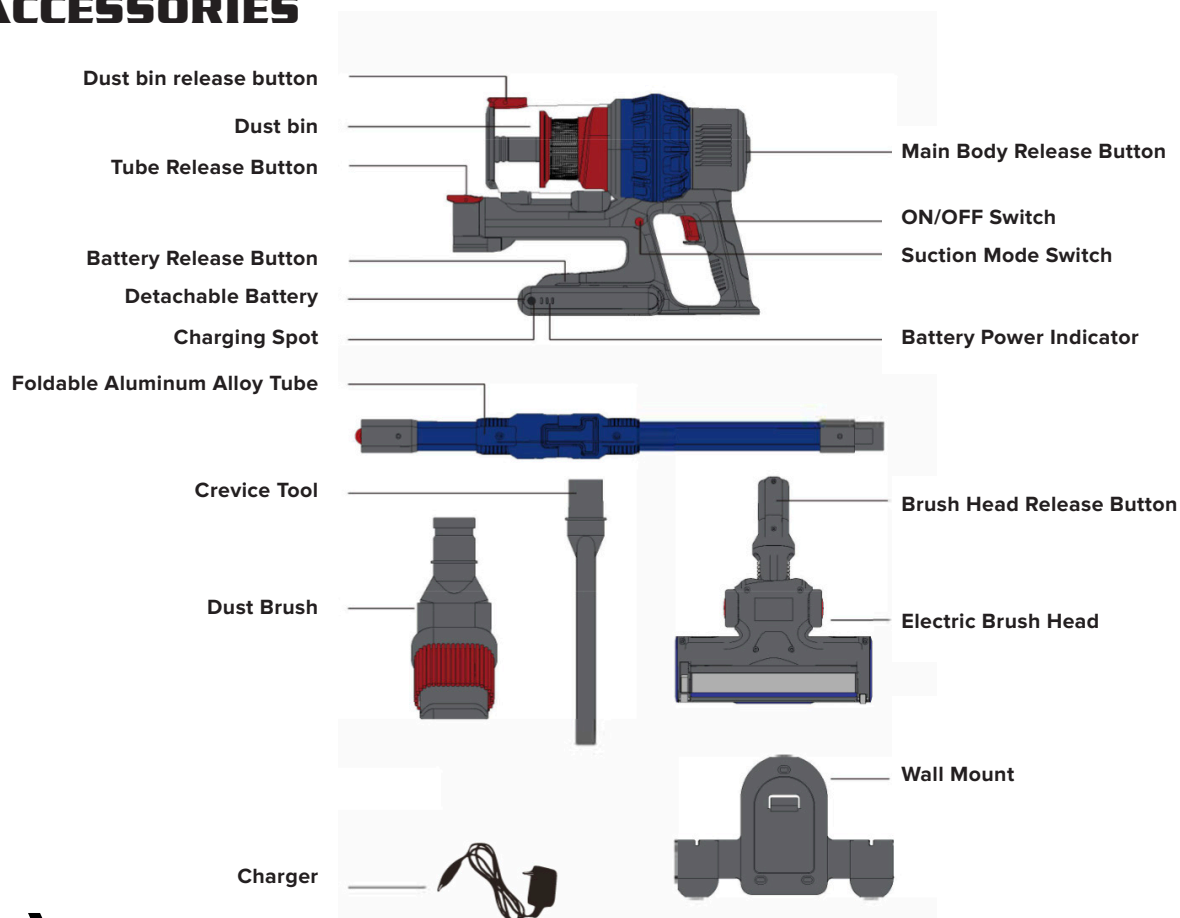


## 2.3 PRODUCT ASSEMBLING DIAGRAM

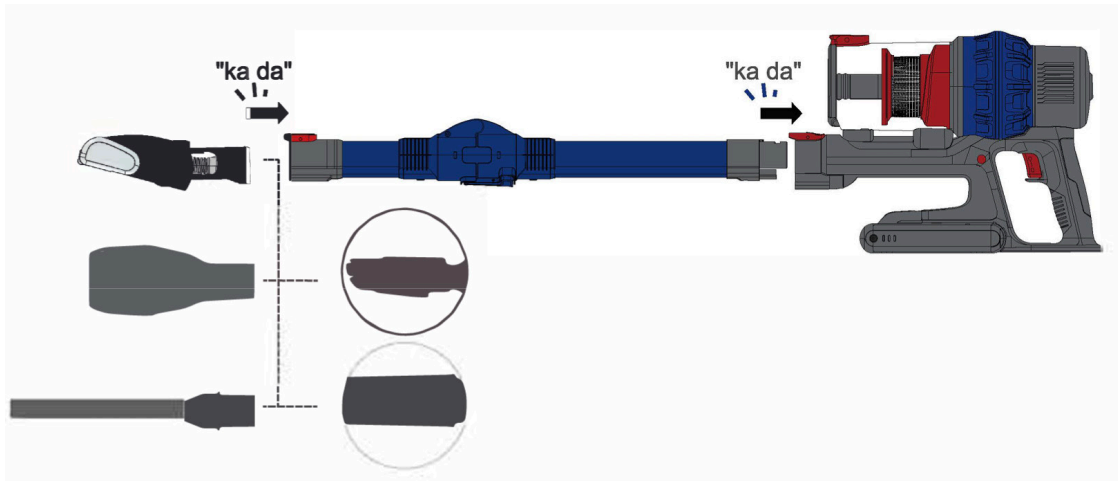


## 3. CHARGING

### 3.1 CHARGING

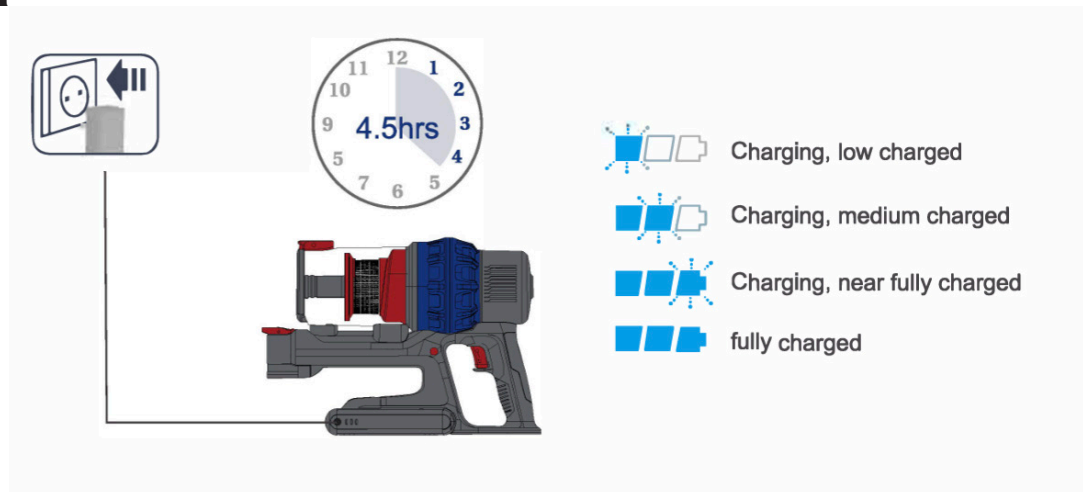

### 3.2 POWER INDICATOR

Attention: Ensure that the battery is fully charged before powering up the appliance the first time. Ensure the appliance has been run out of charge entirely upon first use before recharging to help extend the product life.

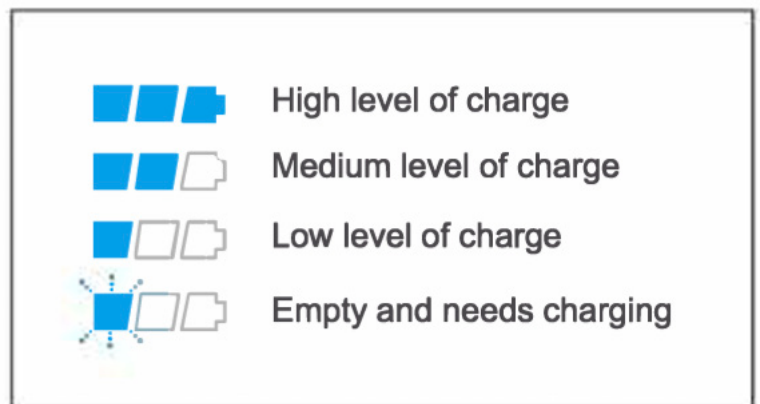


## 4. PRODUCT REVIEW

### 4.1 BRUSH INTRODUCTION


#### CREVICE TOOL

Removes dust on hard-to-reach areas including window gaps, tables, chairs, and corners. Read all instructions in this guide before assembling or using your vacuum cleaner.

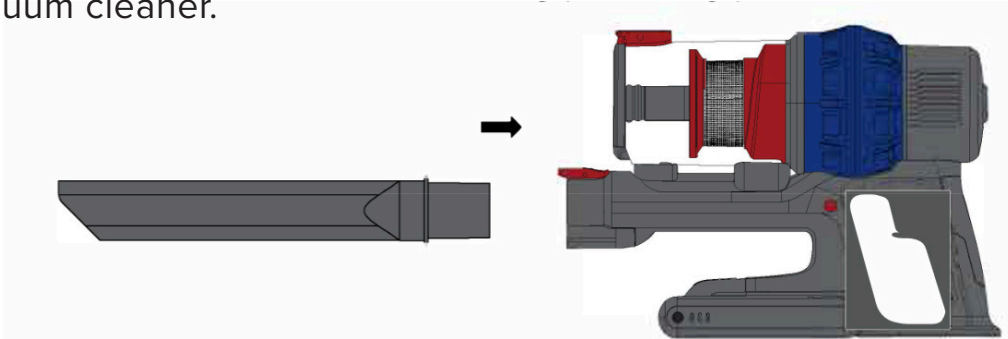

#### DUST BRUSH


Removes dust and hair on carpets, couches, and furniture with ease.

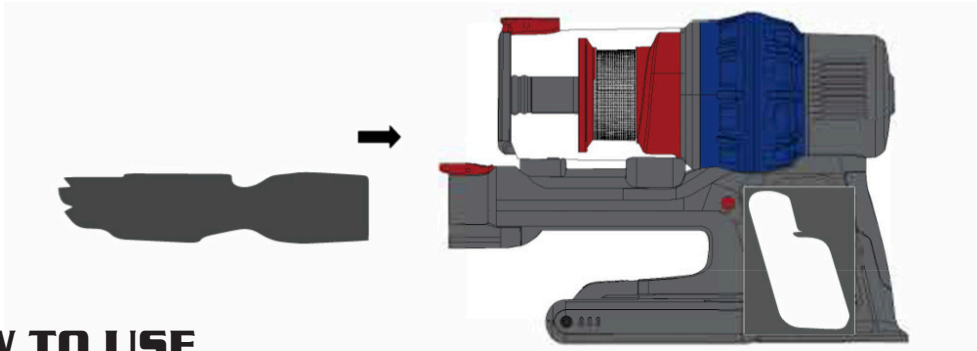

### 4.2 HOW TO USE

#### BATTERY INSTALL & REMOVE

Press the release button and pull the battery to remove it. Press the release button and push the battery to install it.

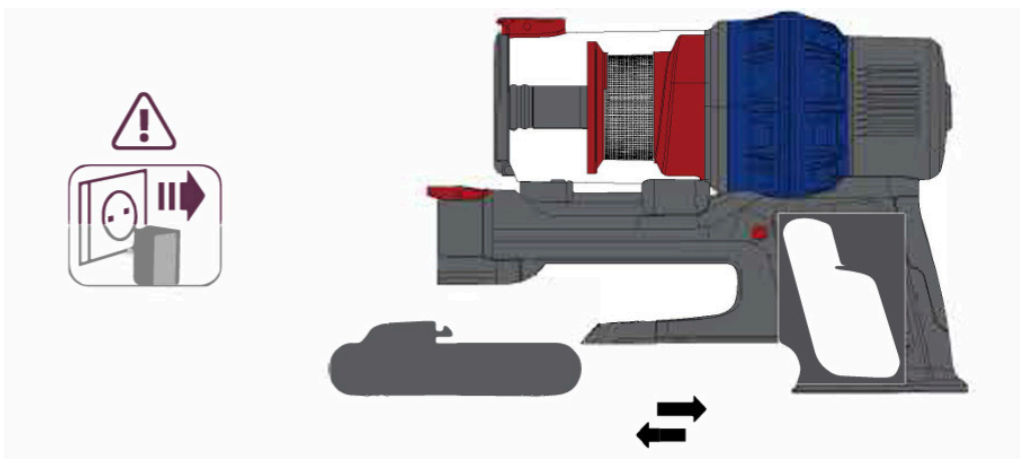


## 4.2 HOW TO USE (CONTINUED)

### OPERATING

#### Switch On/Off and Change Suction Mode

Press the min/max button to switch between the three varying levels of suction.

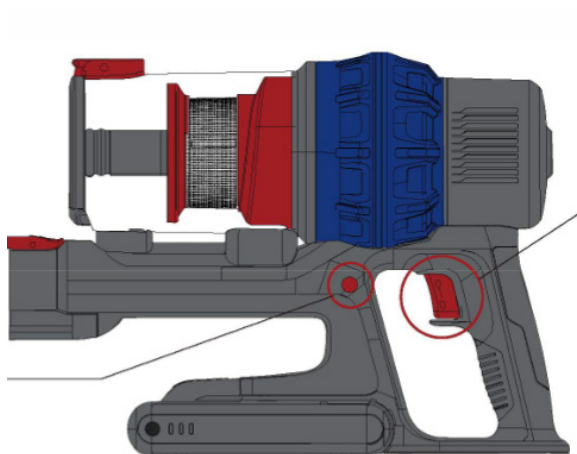

Press the ON/OFF trigger one time to turn on the appliance. The appliance will start in 'low' suction mode. Press the trigger a second time to power off the appliance.

### FOLDABLE ALUMINUM ALLOY TUBE

Press the button to fold the tube.

Bend the tube back into place until a "click" is heard to return upright.





## 5. MAINTENANCE


Clean the vacuum regularly to prolong its life.

### 5.1 MAIN BODY (HAND-HELD, NON-WASHABLE PARTS) CLEANING:


1. Turn off the power before cleaning the body
2. Use a neutral detergent and wipe the body with a damp cloth
3. Avoid sun exposure and store in a cool, dry place

### 5.2 DUST BIN CLEANING


1. Press the release button to open the dust bin lid, dump out any and all dust as shown below.

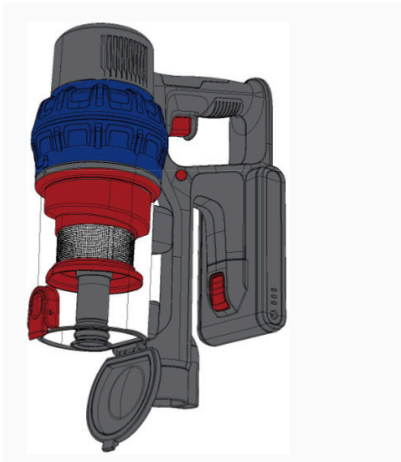


2. Press the main body release button to remove the main body.

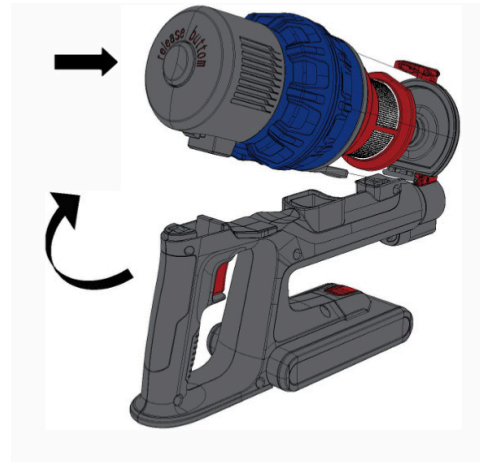


3. Twist the dust bin counterclockwise to remove the dust bin and expose the filter. Remove the filter from the appliance.

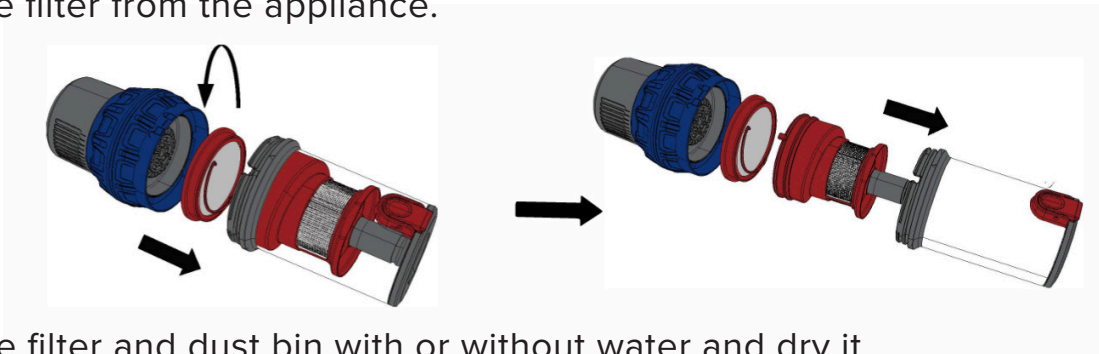


4. Clean the filter and dust bin with or without water and dry it.

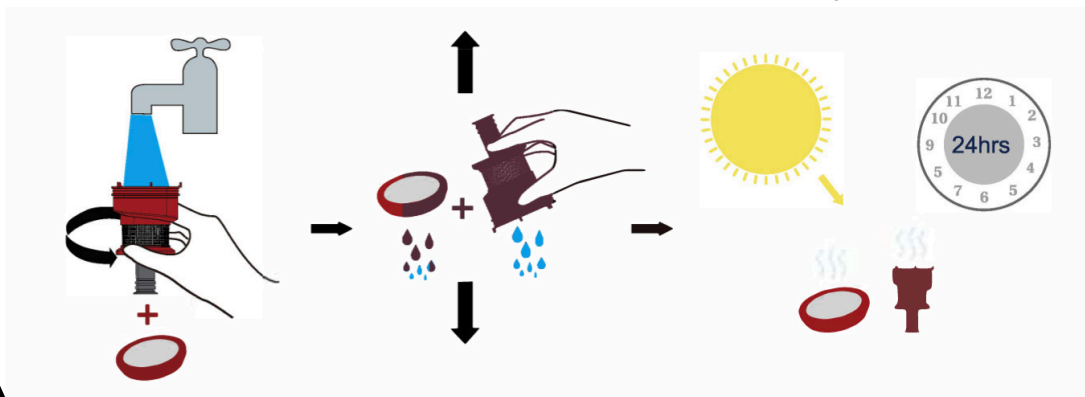

5. Reinstall the filter by turning clockwise along with the buckles of the unit before twisting shut.

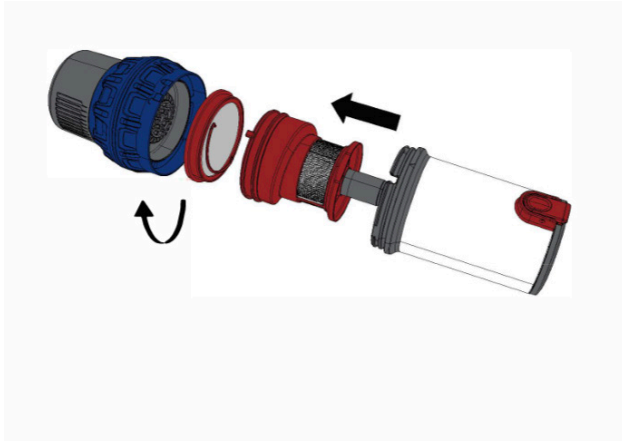


6. Reinstall the main body by putting the hook into the hole. Push from the rear, stopping when you hear the mechanism lock.

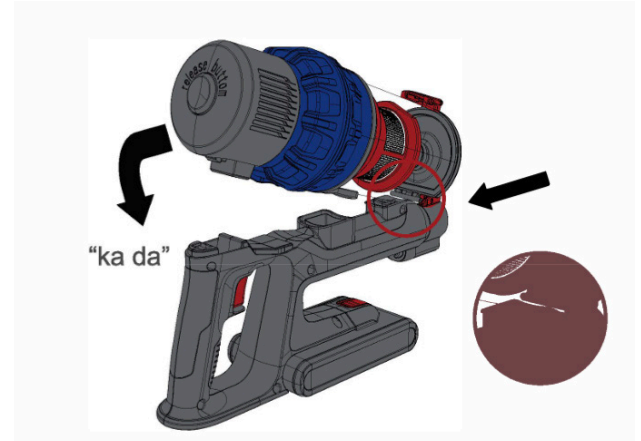

### 5.3 BRUSH ROLLER CLEANING

1. Twist the button on the electric brush head counterclockwise and pull out the brush roller.
2. Tilt and shake the brush roller to pour out dirt, then use the brush cleaning tool to remove any leftover detritus.
3. The brush roller is washable. Before replacing, check that the brush roller is completely dry.
4. Push in and twist the button clockwise to reinstall the brush roller

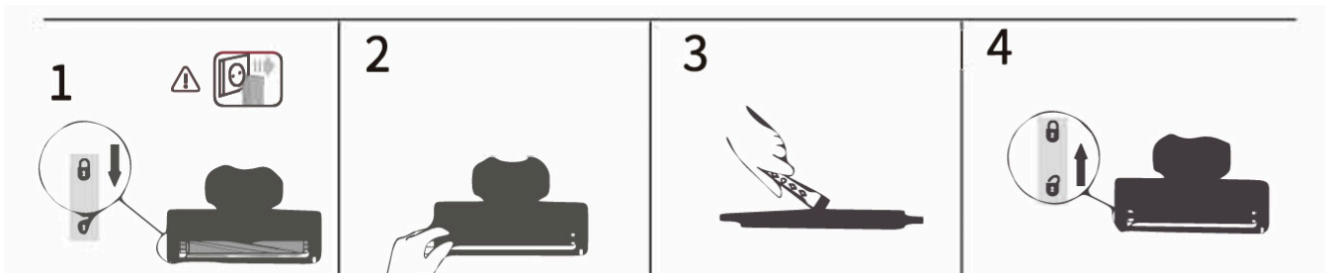

## 6. TROUBLESHOOTING

COMMON TROUBLE	POSSIBLE CAUSES	SOLUTIONS
Main unit not working	<ul style="list-style-type: none"> <li>• Low Battery power</li> <li>• Suction inlet blocked</li> </ul>	<ul style="list-style-type: none"> <li>• Charge the unit before use</li> <li>• Remove blockage in suction inlet</li> </ul>
Weak suction	<ul style="list-style-type: none"> <li>• Dust bin or filters blocked with dust</li> <li>• Rolling brush is jammed with hair or long straps</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the dust inside the bin or filters</li> <li>• Remove hair or long straps from rolling brush</li> </ul>



# CUSTOMER SERVICE

*Dear customer,*

*Thank you for purchasing our product. If you are satisfied with your purchase, please leave us a review to share your feedback with other customers and let us know if we can offer better service. If you encounter problems, please email us so that we can offer you the service you require.*

*Thank you again for your purchase.*

# LIMITED WARRANTY

## WHAT THIS WARRANTY DOES NOT COVER:

Lavex will not warrant coverage for product failure or damages that arise under the following conditions:

- Parts of the vacuum that require replacement under normal use, such as bumpers, brushrolls, belts, and filters.
- Damages or malfunctions caused by negligence, abuse, improper use, or actions not in accordance with the User Manual.
- Equipment used for residential or other non-commercial purposes.
- Defects or damages caused by improper maintenance, use of any replacement parts other than Lavex Janitorial original parts, wear and tear, misuse, abuse, vandalism, or Act of God.

Lavex Janitorial will, at its option, repair or replace a defective vacuum or vacuum part that is covered by this warranty. As a matter of warranty policy, Lavex Janitorial will not refund the consumer's purchase price.

Lavex Janitorial does not recognize third-party sales; the warranty is null and void if the unit is purchased from any non-authorized dealer.

The seller shall in no event be liable for direct, indirect, or consequential damages in connection with Lavex Janitorial products.

This warranty explicitly does not apply to, and Lavex Janitorial is not responsible for, any warranty claims made on products sold or used outside of the United States.

Lavex Janitorial attempts to ensure that their products comply with codes and regulations dictating sales, construction and use. However, Lavex Janitorial cannot guarantee compliance, and cannot be responsible for their products' use. Be sure to review product application as well as local and national codes and regulations to ensure compliance before use.

Any action for breach of this warranty must be commenced within 1 year of the date on which the breach occurred. No modification of this warranty, or waiver of its terms, shall be effective unless approved in a writing signed by the parties. The laws of the Commonwealth of Pennsylvania shall govern this warranty and the parties' rights and duties under it. Lavex Janitorial shall not under any circumstances be liable for incidental or consequential damages of any kind, including but not limited to loss of profits.

## FOR WARRANTY INQUIRIES OR SERVICE:

To obtain warranty service, contact the location where you purchased the product:

### **www.WebstaurantStore.com:**

Contact [help@webstaurantstore.com](mailto:help@webstaurantstore.com). Please have your order number ready.

### **The Restaurant Store:**

If you purchased this product from your local store location, please contact your store directly.

### **www.TheRestaurantStore.com:**

If you purchased this product online, call 717-392-7261.

You must have your order number ready when contacting.

### **Clark Food Service Equipment, PRO Marketplace, Hometown Provisions:**

Please contact your account manager directly. If you do not know your account manager, please call 717-392-7363 for CFSE and Pro Marketplace or 717-464-4165 for Hometown Provisions. Failure to contact the designated location prior to obtaining equipment service may void your warranty.

Lavex Janitorial makes no other warranties, express or implied, statutory or otherwise, and **HEREBY DISCLAIMS ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.**