

System setting info.
Displays the menu list version, communication firmware version, and device ID.

Menu list version
Network module firmware version
Device ID (HASH)

Maintenance info.
A total of all cooking hours is rounded down to the nearest hour.
e.g.)

All cooking hours	Display
59 min	0
1 hr 59 min	1

The last two figures of the total number of cycles are rounded down.
e.g.)

Number of cycles	Display
99 times	0
101 times	100
1100 times	1100

Check memory
Confirm the following memory contents.
●Cooking menu contents ●Beep settings ●Memory lock
●Maintenance guidelines

Backup
Backup
Restore

It is possible to backup the menu list to the USB memory stick, edit on your personal computer with the setting support tool, and restore the menu list and device settings created with the setting support tool from the USB memory stick to the main unit.
●Restoring refers to reverting to previously backed up data or importing data.

Memory lock
You can choose memory lock ON or OFF.

Device settings
Following settings can be changed.
●Beep ●LCD brightness
●Temperature unit
●Home setting
●Memory number digit
●Language setting
●Call for cavity cleaning
●Password ●Initialization

Network settings
You can set the IP address used when connecting to the network.

IP address
DNS

Operating Guide

Commercial High Speed Oven/Microwave Oven

Model No. **NE-SCV3N**

This guide briefly describes the basic operation. Before using the product, please read the "IMPORTANT SAFETY INSTRUCTIONS" in the Operating Instructions to use the product safely.

Setting the Cooking Plate

●When using this product, make sure you place the cooking plate on the bottom surface of the oven interior.

Cooling
Setting the Required temp. / Lowest cooking temp.

Tools (p.4)

Menu List

Cooking with a Saved Cooking Menu

Start preheating → **Preheating has been completed** → **Select a category and a cooking menu** → **Cooking will start**

In such cases

 
- Regular maintenance**
A part replacement is required when a screen displays that it is time to perform the regular maintenance. Please contact the dealer or a service agent promptly.
- "F" code e.g. "F30" etc.**
If the "F" code does not disappear even after pressing the Stop/Reset pad, pull out the plug and then plug it in again after 5 seconds.
The oven is faulty if the "F" code still appears. Contact the dealer or a service agent.
- The power turns off automatically**
The initial screen of the display turns off automatically if it is not used for 5 minutes. (Auto Power OFF Function)
Opening the door turns the power ON.

●Illustrations may differ from the actual items.



⚠ WARNING

- Pull out the power plug before maintenance. If not, this may result in electric shock.
- Wait for the oven cavity to cool down first before cleaning. If not, this may result in burns and injuries.

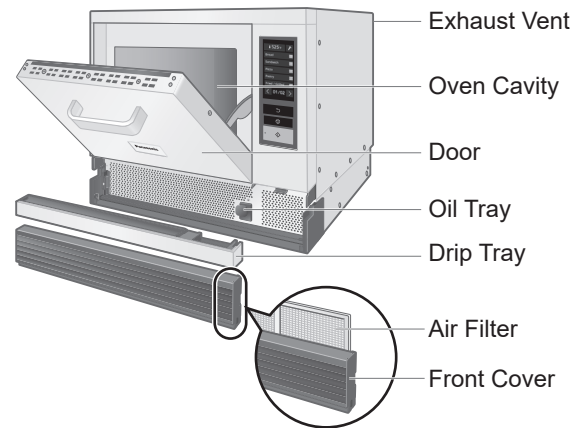

Notes

- Do not clean this oven with a water jet or steam cleaner.
- Do not pour detergent and leftover food into the gap and punching holes. This will result in a malfunction.
- If the oven becomes damaged in any way, contact the dealer or a service agent before continuing use.
- Do not use thinner, benzene, cleanser, or bleach. There is a danger of damage or deformation.

■ Before Cleaning

1 Cool down the oven cavity

- Perform this procedure only when the oven cavity is hot.
 1. Tap the **525°F**
 2. Select **Cooling**, open the door little, and press **◊**
 3. Once the cool down finishes, tap **OK**

2 Soak Cooking Plate

Remove the Cooking Plate and place it in a bowl of hot, soapy water to soak.

Clean these parts Every Day.

3 Oven Cavity • Door Inner Side • Door Seal

Wipe with a damp cloth

Thoroughly wipe away water, oil and leftover food stains frequently to prolong the use of the oven. Failure to remove burnt food remains and dust may cause rust.

 
If the stains are bad, wipe away with a cloth soaked in a neutral kitchen detergent.

- If left in a stained condition, the stain becomes difficult to remove, so that the food scraps burn, and the smell of the food persists.
- Take good care in particular of the area where the main unit and door contact and the surroundings.
- Do not scrape the parts other than the metal part inside the door (door seal area etc.) with a hard scrubber, which may cause damage of the door seal and malfunction of the oven. Be sure to use only a soft scrubber.
- Do not splash detergent directly onto the top and rear surfaces of oven cavity. This will result in a malfunction.

4 Drip Tray


① Removing

Pull the drip tray toward you to remove it.

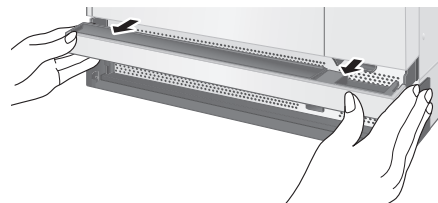


② Wipe with a damp cloth

 Wipe away the leftover food in the Drip Tray.

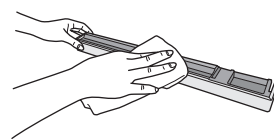

③ Attaching

 Install the drip tray so that its groove slots into part ② of the main unit.

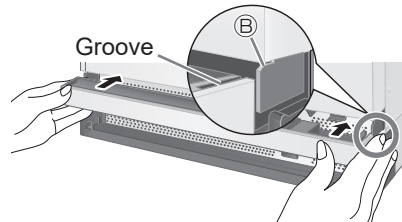

5 Cooking Plate • Paddle

Wash with a sponge scrubbing brush with (neutral) detergent for use in the kitchen applied to it.

- Do not wash the equipment in a dishwasher.
- If you are concerned about bad oil stains or the like Use alkaline detergent. When using alkaline detergent, use after thoroughly reading the detergent's usage cautions. After performing the maintenance, make sure you wipe the equipment with a damp cloth so no detergent remains. However, you cannot use this on the inside of the door as the resin parts will deteriorate. If by chance the detergent should get on the resin parts, wipe them with a damp cloth immediately.

6 Outer Areas

Wipe with a damp cloth

Wipe away oil and food stains immediately.

- Do not use thinner, benzene, abrasive cleanser, bleaching agent, alkaline residential or household synthetic detergent.

If the stains are bad, wipe away with a cloth soaked in a neutral kitchen detergent. Take care not to allow the kitchen detergent to enter the exhaust vent and gaps.

- Outer side of the door • handle area
After wiping with a wet cloth, wipe the areas with soft, dry cloth.

 
Disassemble and clean these parts Once a Week.

- Do not wash the equipment in a dishwasher.

■ Front Cover

Wipe with a damp cloth


Wipe away oil and food stains immediately. If the stains are bad, wipe away with a cloth soaked in a neutral kitchen detergent.

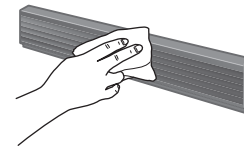

■ Air Filter


Dry after washing with water

 Clean it after every use if the stains are bad. The filter may lose its effect if the stains are left behind. The temperature of the internal parts may also rise, resulting in a malfunction.

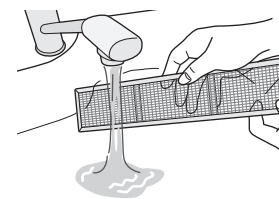


● Removing

 After pulling the front cover down toward you, lift it diagonally upward to remove it. Remove the air filter by pulling it out of the front cover.

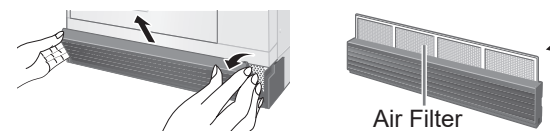

● Attaching

 
Insert the air filter into the groove of the front cover, and after firmly inserting it all the way in, install it so that the groove of the front cover is inserted into part ① of the main unit.

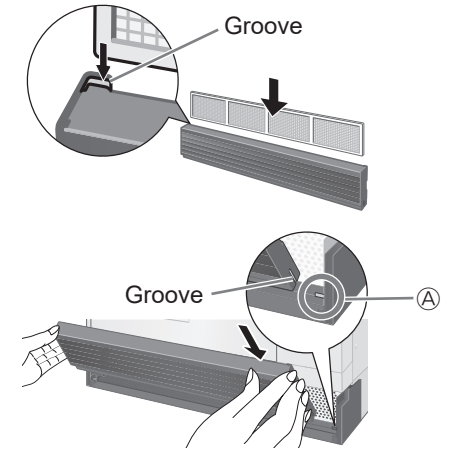

■ Oil Tray

Wipe away oil stains with a soft cloth or paper towel

 If the stains are bad, clean the area with a soft scrubber dipped in a neutral kitchen detergent and dry.

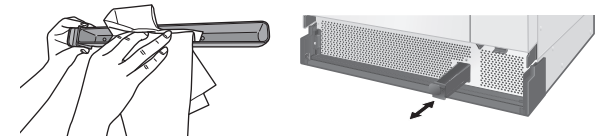

● Removing

Remove the front cover first, and take out the oil tray.

● Attaching

Follow the reverse procedure to install the oil tray.

Clean this part once a month.

■ Exhaust Vent

Clean the rear exhaust vent with a toothbrush and a towel

