



3.7 Qt.

Countertop Pump Dispenser with Plastic Pump Assembly & Care Instructions


Countertop dispenser for bulk 1 gallon container,
#10 can, or about 3.7 quarts for direct pour

651PDSS10PFN

Parts Included

304 Stainless Steel Pump

- 1** 304 Stainless Steel Body (Brushed Finish)
- 2** 304 Stainless Steel Lid
- 3** Plastic Pump
 - a. Pump Body
 - b. Valve
 - c. Base of Pump Body
 - d. Lower Flange
 - e. Removable Dip Tube
- 4** 304 Stainless Steel Inset

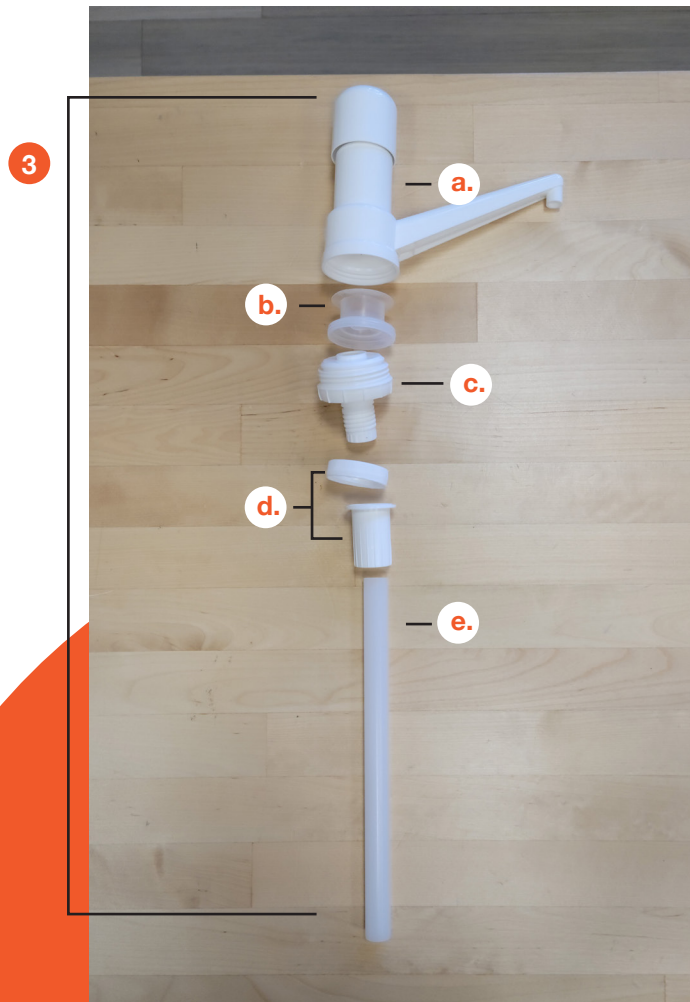

Safety

- All components must be cleaned before first use.
- Follow local food safety guidelines and regulations to ensure the food product that is being stored and/or served is being done so at the proper temperatures.
- Clean, rinse, sanitize, and dry parts at a minimum of every 24 hours.
- Check local sanitation requirements.

Pump Cleaning

Regular cleaning and maintenance of your ServSense pump will ensure proper operation and ultimate performance.

- 1 For pumps that have been in use, flush and rinse all pump parts with hot water by removing the pump from the body and putting the lower portion of the pump (valve body) into hot water. Pump the hot water through the pump until all food product has been expelled and only hot water is expelled.
- 2 Disassemble the pump. Pull out the removeable dip tube and set aside.
- 3 Remove the lower flange from under the lid by twisting counter-clockwise and remove the pump from the lid.
- 4 Unscrew the base of the pump body from the pump body by twisting counter-clockwise.
- 5 Gently pull the plastic valve free from the pump body.
- 6 Wash and rinse completely with warm, clean water.
- 7 Sanitize all parts according to local sanitation requirements.
- 8 Air dry parts completely before assembling for use.

Disassembly

- 1 Remove dip tube. Unscrew lower flange from underneath stainless steel lid by twisting counter-clockwise. Remove pump body from the lid.
- 2 Unscrew the base of the pump body from the pump body by twisting counter-clockwise
- 3 Gently pull the plastic valve free from the pump body

Assembly

- 1 Insert plastic valve into base of the pump body.
- 2 Screw the base of the pump body onto the pump body by twisting clockwise.
- 3 Place the pump body into the lid and twist the lower flange clockwise to create a tight fit between lid and pump.
- 4 Insert dip tube into lower flange.

Final Assembly

