


ASSEMBLY INSTRUCTIONS FOR ITEM # 71550 (Accent table)

Page 1 of 3

STOP! PLEASE READ FIRST


Thank you for purchasing this item from Outdoor Interiors. Please verify all the hardware and components are included as you unpack the carton. Place the items in a safe area to avoid loss and damaging contents. Use a soft area or use the empty box to assemble the set. **ASSEMBLY TIPS:** Assemble upside down with the sofa facing down. Never over-tighten bolts. Please review the care card for how to care & maintain your new furniture. If you have any questions visit www.outdoorinteriors.com

PARTS LIST

 	Table top x 1 piece
	Leg x 2 pieces

HARDWARE LIST

1		F-Bolt 8.00x45.00 mm	04 pieces
2		Pat I 30x30x3 mm	04 pieces
3		Plain Washer Ø25x5.00 mm	04 pieces
4		Allen key 4.00x98.00 mm	1 piece

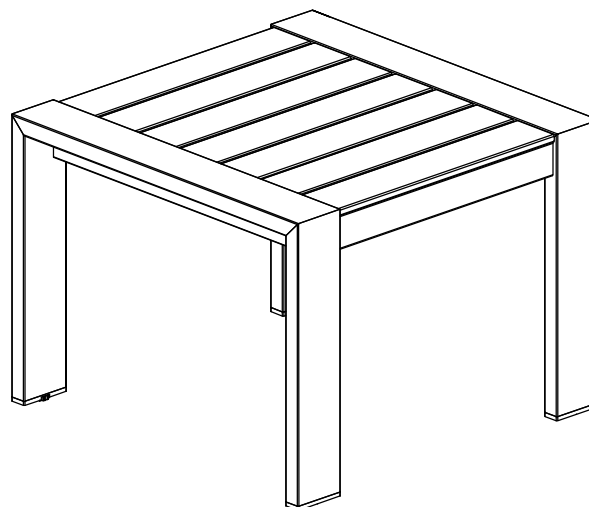


ASSEMBLY INSTRUCTIONS FOR ITEM # 71550

(Accent table)

Page 2 of 3

Step 1

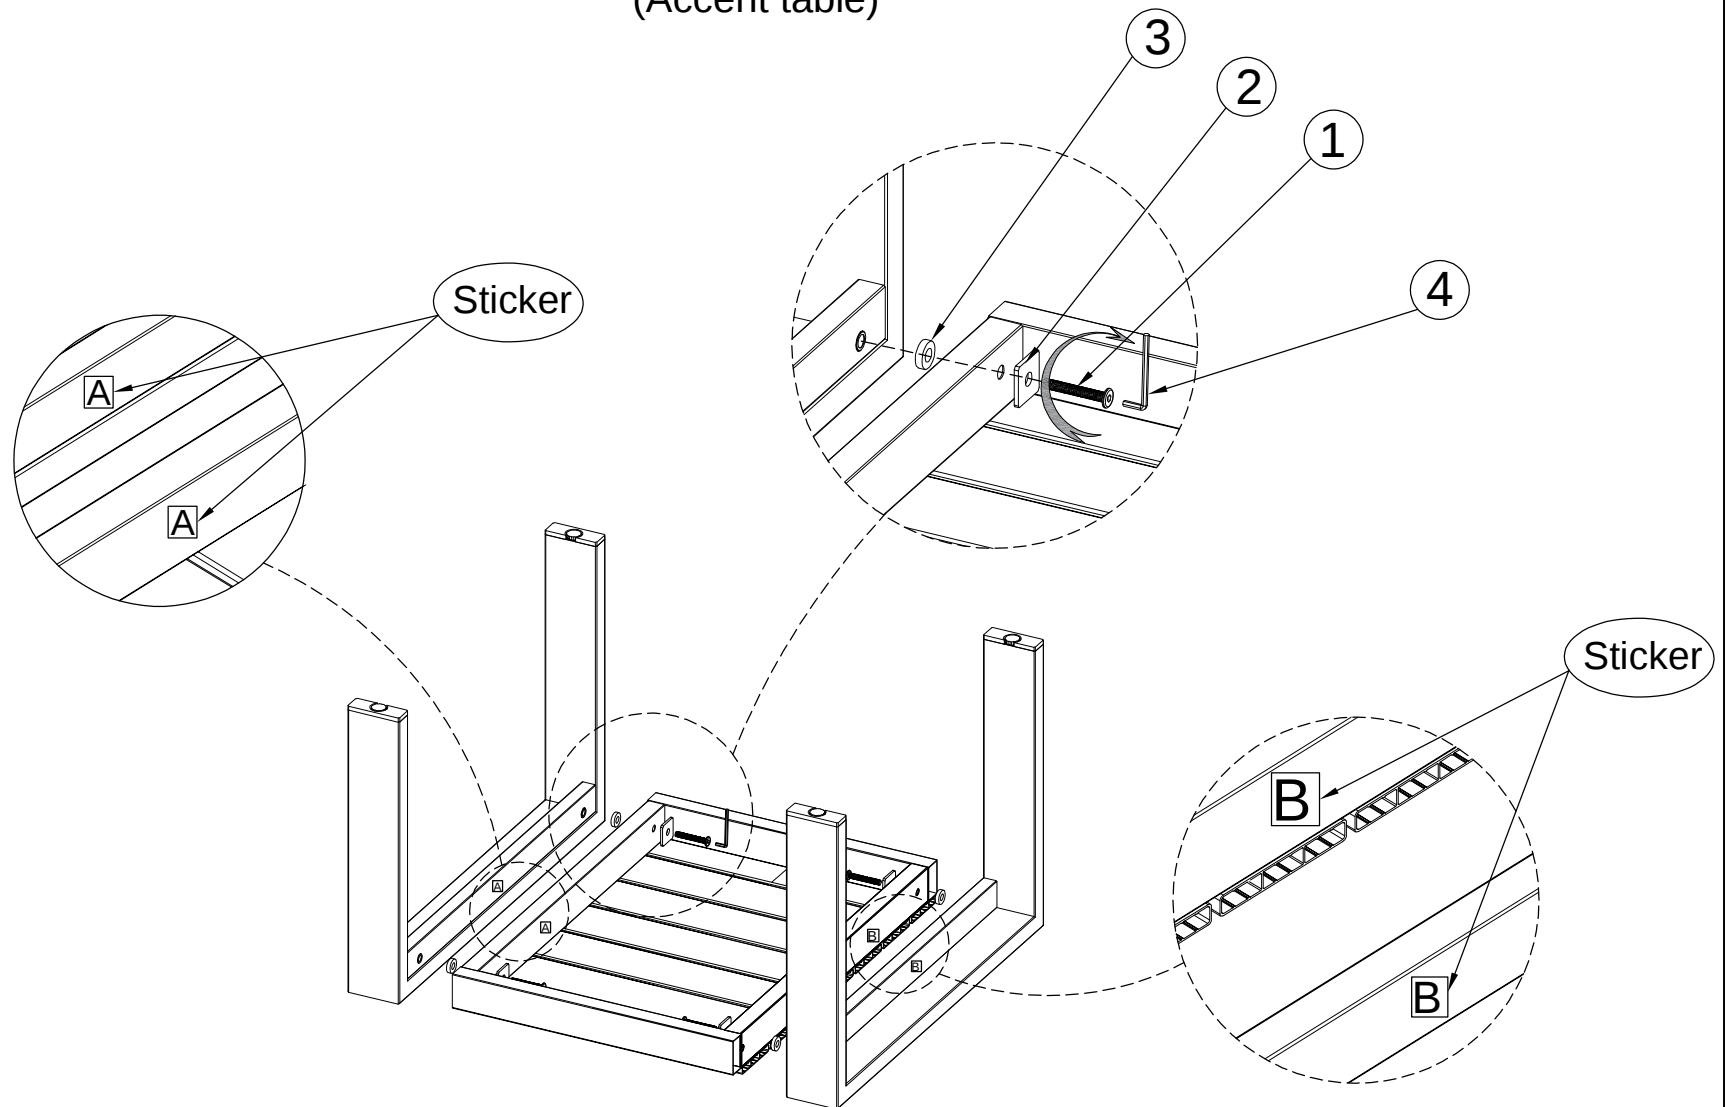


Please do not fully tighten the bolts until last step

ASSEMBLY INSTRUCTIONS FOR ITEM # 71550

(Accent table)

Page 3 of 3

Step 2

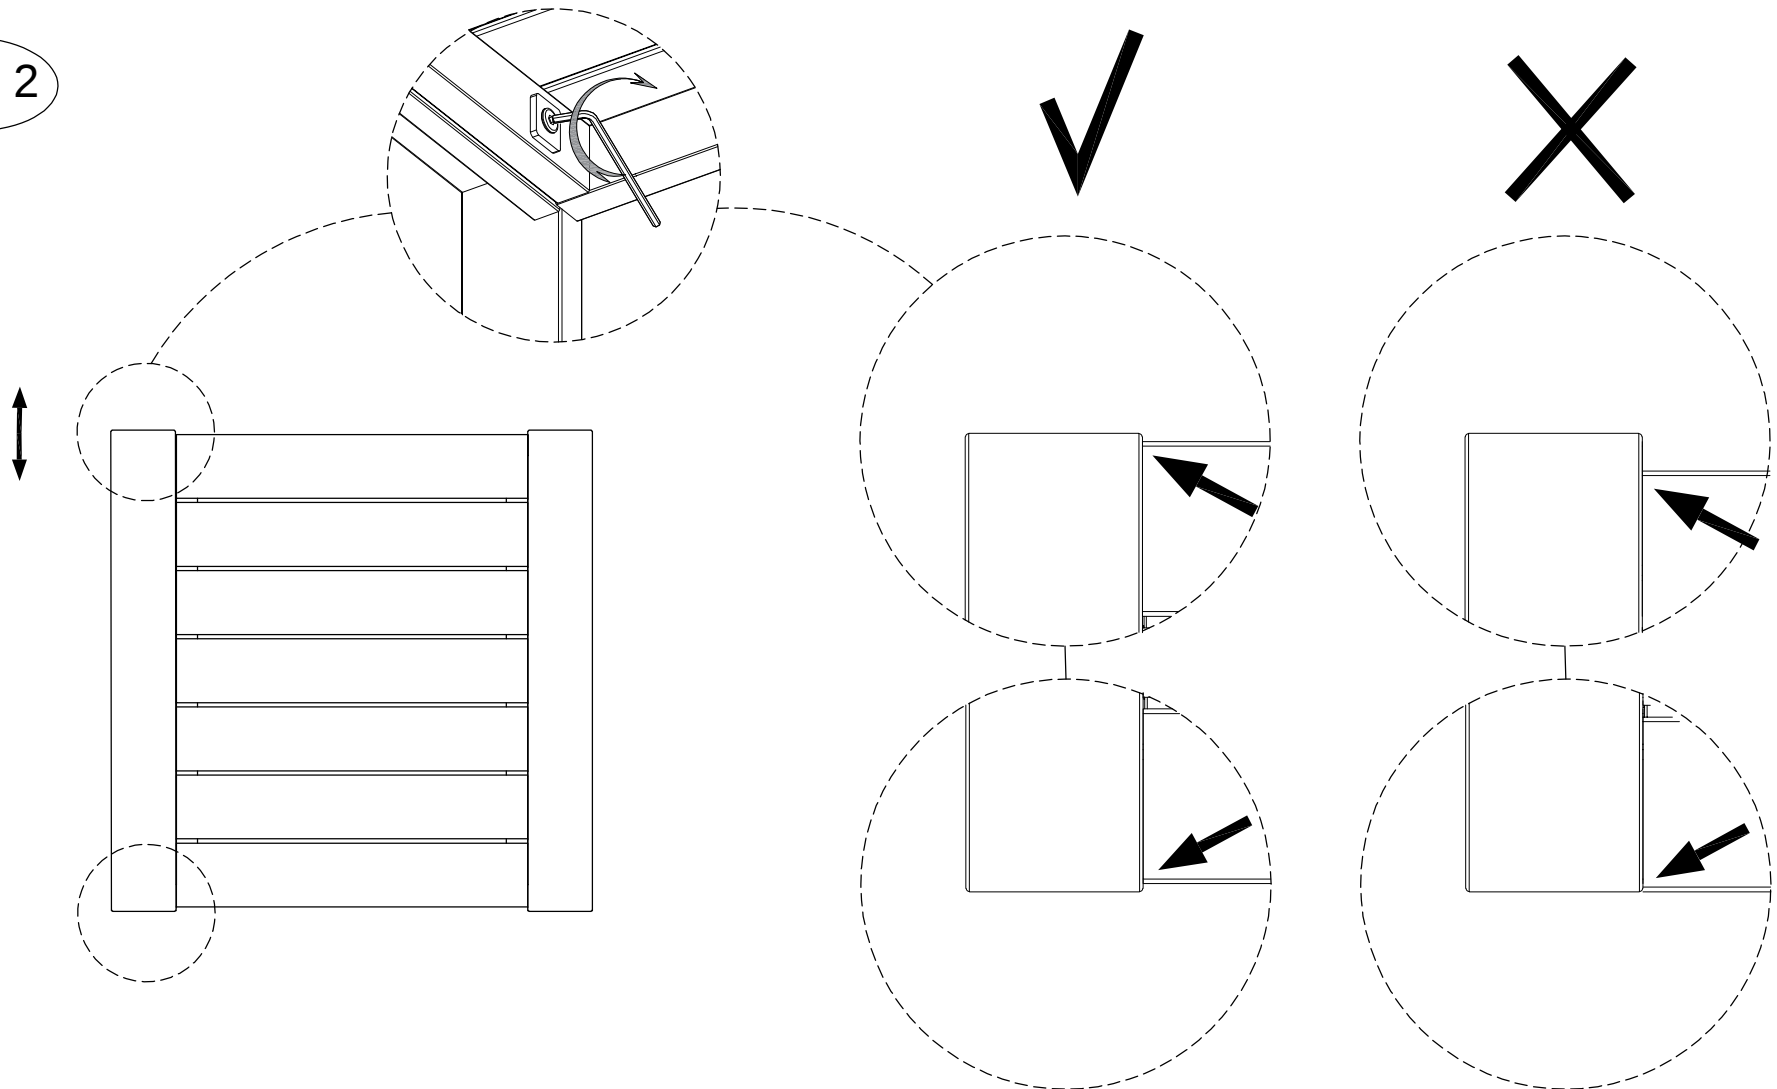

Please do not fully tighten the bolts until last step