 


#761LAVAM0125

3-Speed Commercial Mini Air Mover

500 CFM, 115V

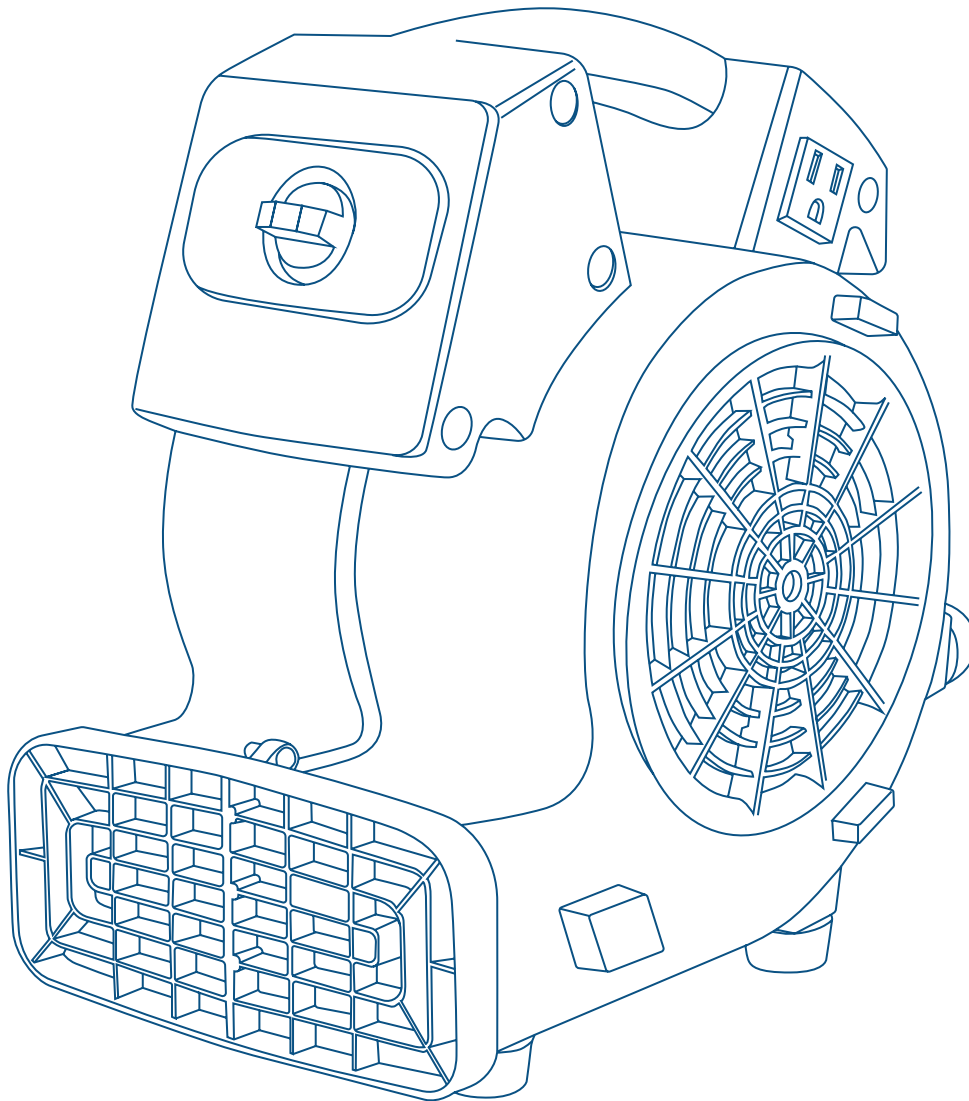

PLEASE READ ENTIRE MANUAL BEFORE USE

LEA Y GUARDE ESTAS INSTRUCCIONES

LISEZ ET ENREGISTREZ CES INSTRUCTIONS

Table of Contents

 
Safety Instructions	3
Parts Description	4
Introduction.....	5
Operation Guide.....	5
User Maintenance Instructions.....	8
Technical Specifications	9

Safety Instructions

⚠ WARNING: Read and save this instructions before using this product. The user of electrical products may create hazards that include but are not limited to injury, fire, electrical shock. Failure to follow these instructions may damage and / or impair its operation and void the warranty.

- Before operating, remove all packaging material and check for any damage that may have occurred during shipping or any missing items.
- Check household power supply to ensure it matches the appliance's specification.
- **DO NOT** operate any fan with a damaged cord or plug. Discard fan or return it to an authorized service facility for examination and/or repair.
- Use only on GFCI protected receptacles. Please contact a qualified electrician for verification and / or installation of a GFCI receptacle if necessary.
- **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To reduce the risk of fire or electric shock, **DO NOT** use this fan with any solid-state speed control device.
- **DO NOT** touch this appliance or the plug with wet hands or while standing in water.
- **DO NOT** operate the appliance in any pooled water.
- **DO NOT** use the product in areas where gasoline, paint, or other flammable goods and objects are used or stored.
- **DO NOT** insert or allow objects to enter any ventilation or exhaust opening as this may damage the appliance and void the warranty.
- **DO NOT** cover the air inlet or outlet on the appliance.
- **DO NOT** direct the airflow at human faces or bodies.
- **DO NOT** allow children to play around or with this appliance.
- **AUTOMATICALLY OPERATED DEVICE** – To reduce the risk of injury, disconnect from power supply before servicing.
- Remove the power cord from the electrical receptacle by grasping and pulling on the power cord plug-end only, **DO NOT** pull the cord directly.
- **DO NOT** attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- If the appliance is damaged or it malfunctions, **DO NOT** continue to use it. Unplug the product from the electrical outlet. Refer to troubleshooting guide.
- Store in a dry area, away from exposure to sunlight, extreme temperature and humidity, or other extreme environments when not in use.
- **DO NOT** stack more than four units of this appliance.

Parts Description

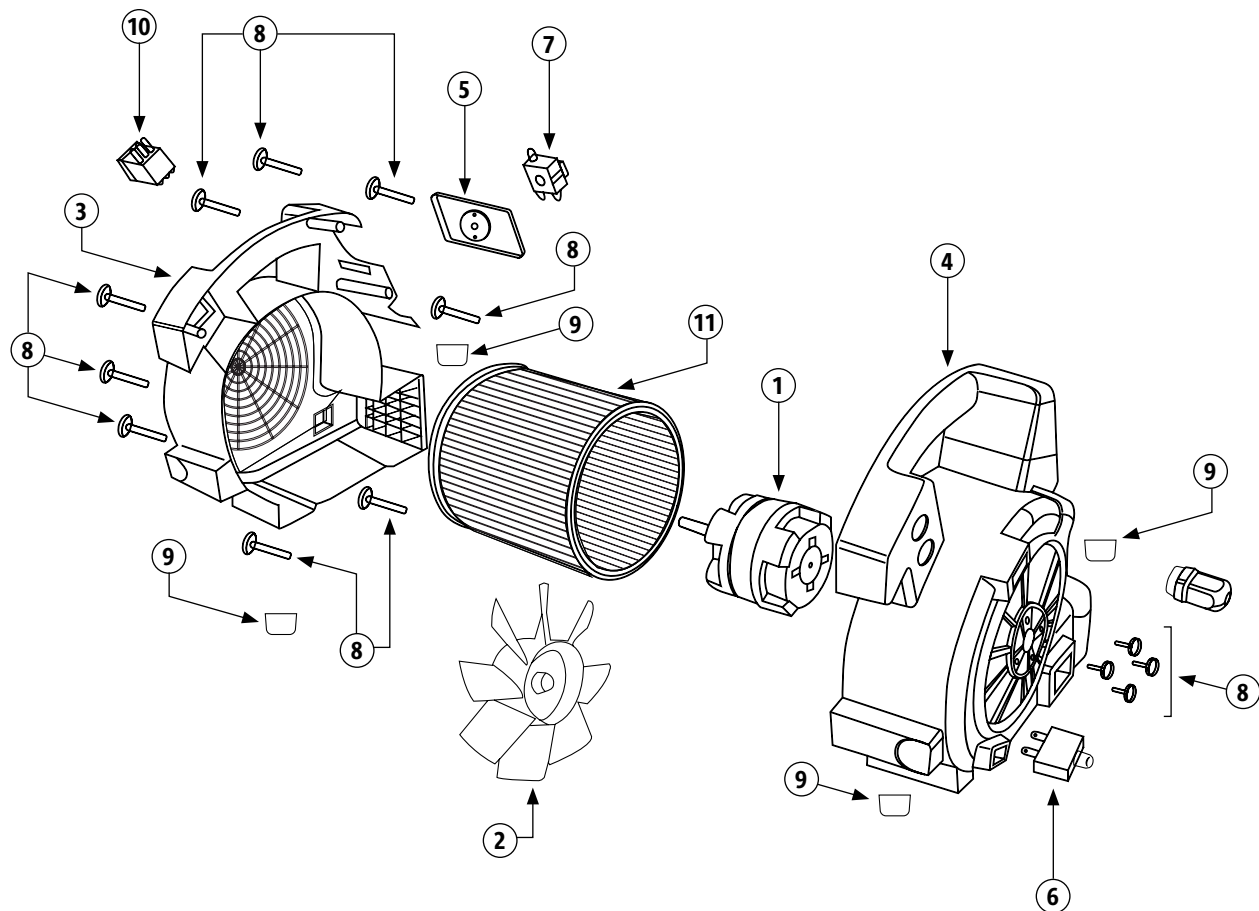


Ref #	Description	Qty
1	Motor	1
2	Fan Blade	1
3	Left Shell	1
4	Right Shell	1
5	Switch Panel	1
6	Overload Protector	1

Ref #	Description	Qty
7	Rotary Switch	1
8	Screw	21
9	Rubber Foot	4
10	Capacitance	1
11	Blower Wheel, Cage	1

Air Mover Introduction

 - The Air Mover produces a plentiful airflow capacity for small to large jobs for any location size.
- It is ideal for drying tight spaces such as crawl spaces, under counters, inside cabinets, bathrooms, auto interiors, and more.
- It's also designed for professional carpet cleaning, water damage restoration jobs, or home use.

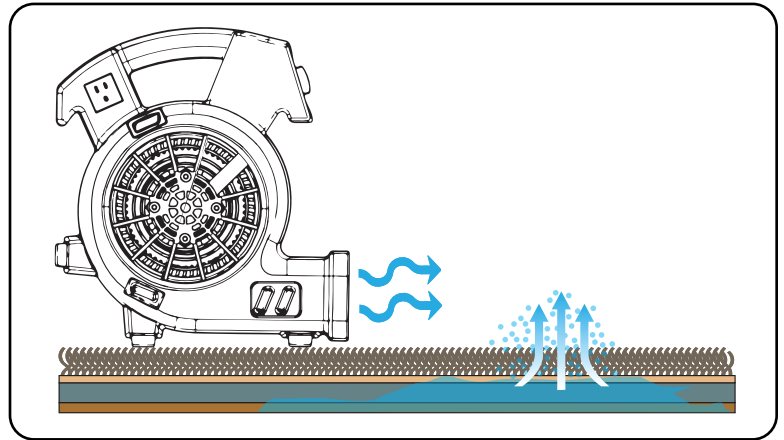


Operation Guide

DRYING A FLOOR


Single Unit:

 Place the air mover at the corner to create circular airflow.

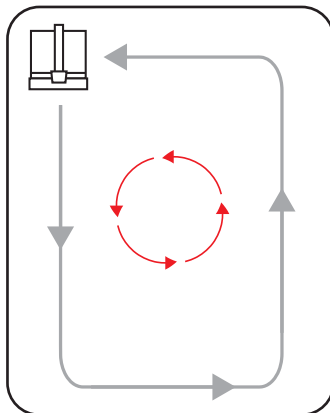

Multiple Units:

 
Place the air movers at four corners to create circular airflow.

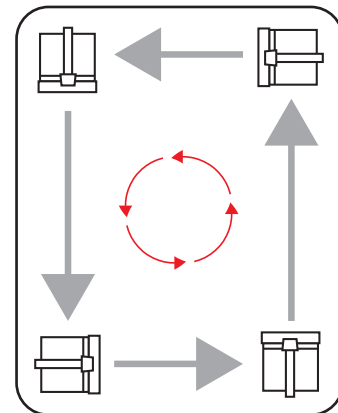

DRYING A WALL OR CEILING

Multiple Operating Positions:

 
The air can operate at different positions, directing the airflow to desired areas.

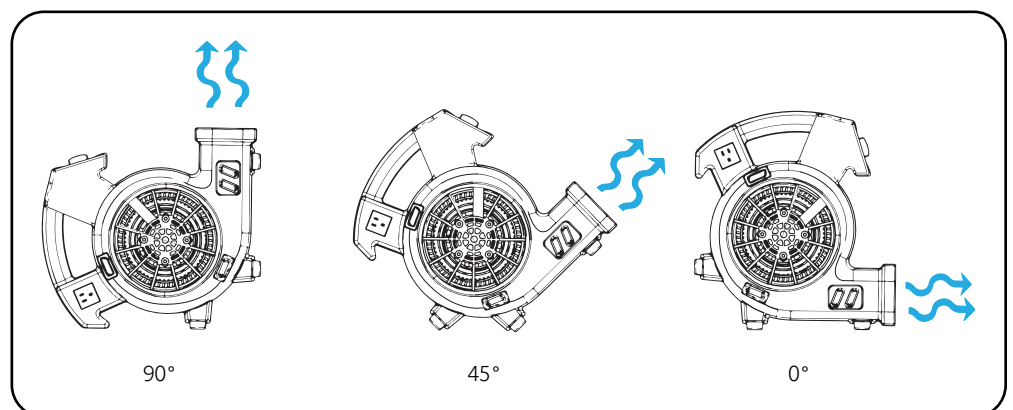

SWITCH PLATE


Speed Switch:

 - Turn to **"OFF"** position to switch the air mover OFF. Turn to any speed position to switch the air mover ON.
- Turn clockwise to set the desired fan speed.
- There are 3 fan speeds from: 1, 2, 3. **"1"** is the lowest speed and **"3"** is the highest speed.

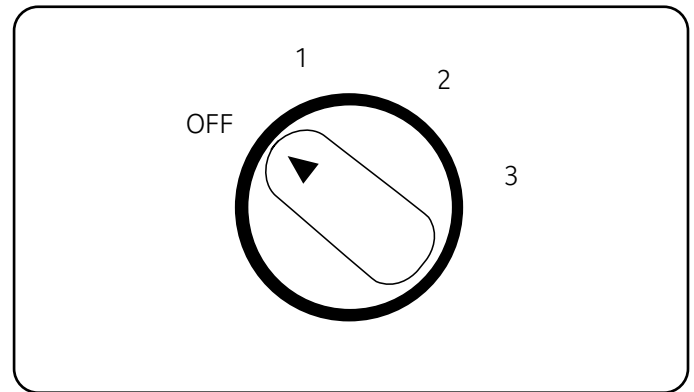

ADDITIONAL ELECTRICAL RECEPTACLE (DAISY CHAIN)

 
- Other appliances can be plugged in the additional electrical receptacles and work whether the air mover is on or off. However, the total amperage must be lower than the amperage instructed. Different models may have varying instructions.
- If the air mover or the plugged in appliance stops working, press the **RESET BUTTON** to reset the circuit.

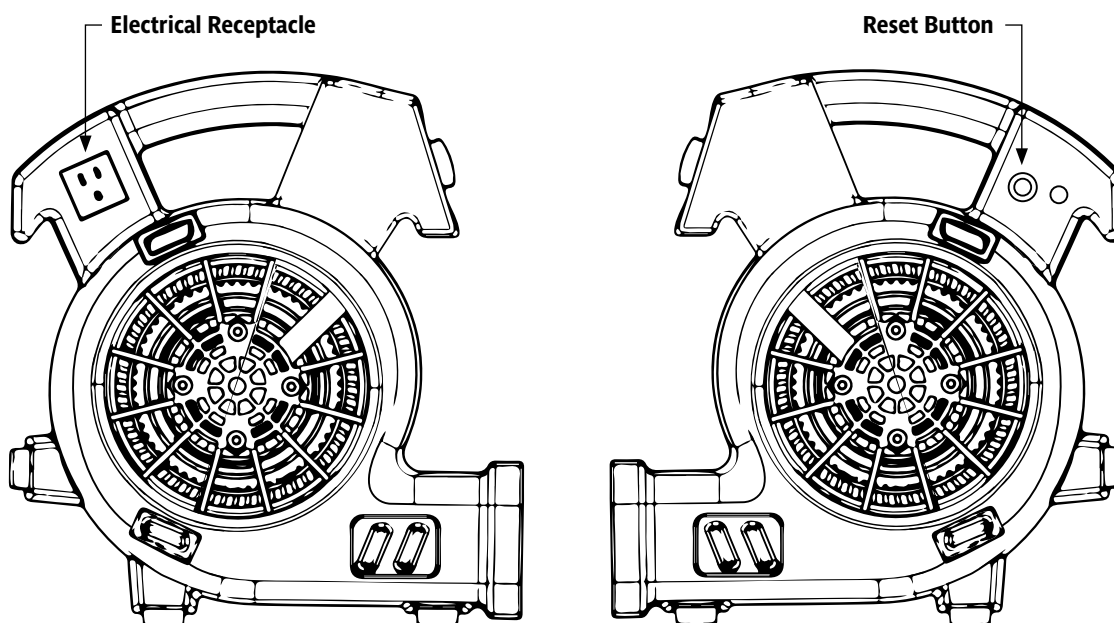

STORAGE

Organize the Cord:

 - Wrap the power cord around the switch plate for storage after use.
- Use convenient clip at end of cord to secure in place.


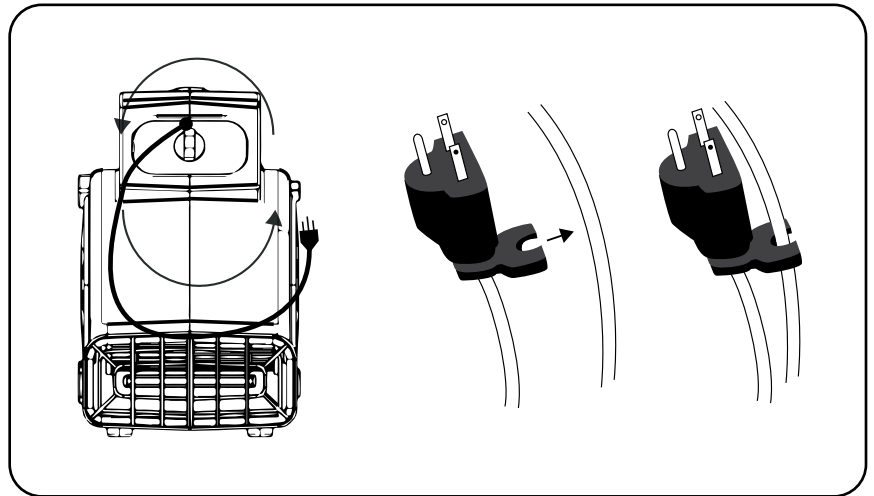


Stack Multiple Units:

- Stack the air movers on the sides. Align the air inlets of both air movers.
- Turn the second air mover 30°.

⚠ WARNING:

  - Do not stack more than four units of this appliance.
- Stacking function is not secure during transportation.

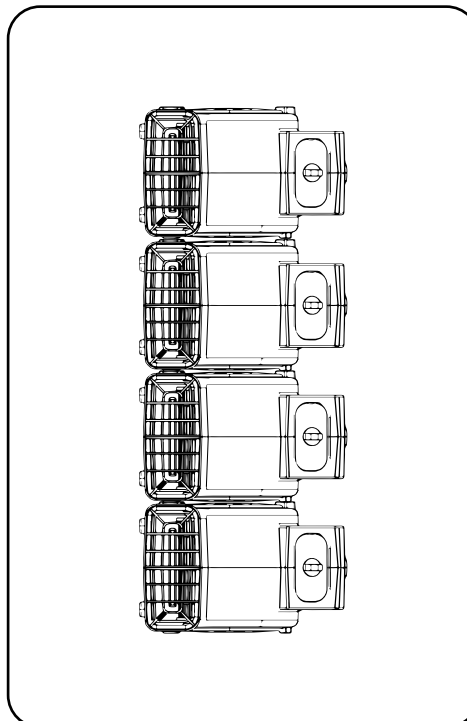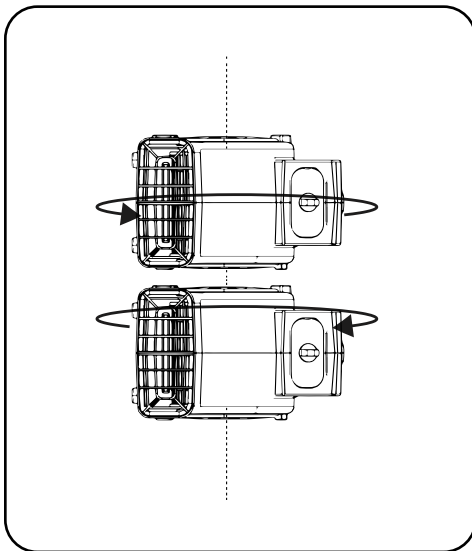

User Maintenance Instructions

Frequent maintenance is recommended on this appliance. Failure to follow the maintenance instructions may cause failure of the appliance and void the warranty.

- When not in use, unplug and store the appliance in a dry and cool indoor place. Make sure it's out of reach of children.
- Before performing any maintenance or cleaning, always disconnect the air mover from its power source.
- Use a damp cloth to wipe the surface of the housing. Do not clean the unit with water directly.
- Check if the grille covers are clean. Remove dirt or any other objects that could block the air inlet and air outlet.
- Do not stack more than four units of this appliance

Troubleshooting Guide

Problem	Possible Cause	Solution
Air mover does not start.	No electricity.	Check for power supply.
	The power cord is not properly plugged in.	Remove and reconnect the power cord.
	The machine is working under an extreme temperature.	Turn off the machine and unplug it. Let the machine cool down to normal temperature.
	The circuit breaker on the additional electrical receptacle (Daisy chain) jumps.	Remove all appliances on the additional electrical receptacle and press "Reset".
Unit runs but the speed is abnormal.	Air inlet or air outlet is blocked.	Remove blockage.

Technical Specifications

Model Number	AP130003
Voltage / Frequency	110V/60Hz
Amperage	0.72A
Motor Power	1/8 HP
Rated Airflow	500 CFM
Speed Control	3 Speeds