



P R O F E S S I O N A L

# PREMIUM BUTANE TORCH

## OPERATING INSTRUCTIONS:

### ASSEMBLY:

1. Ensure Gas Regulator (3) is turned to the "-" (OFF) position (turned fully clockwise) before assembling.
2. Keep the Butane Cylinder upright when fitting to the Connector (1).
3. With the Connector squarely on top of the cylinder valve, gently screw the Connector (1) into the cylinder valve until it meets the O-ring of the valve. Hand tighten only. Do not overtighten to prevent damage to the Connector (1).

### OPERATING:

1. Use Chef Master (Item 40062) Butane Fuel.
2. Ensure Gas Regulator (3) is turned to the "-" (OFF) position (turned fully clockwise).
3. Shake the Butane Cylinder to warm the fuel.
4. Turn the Gas Regulator (3) counter-clockwise approximately 2/3 of a turn. Gas will start to flow with a hissing sound. Press the Ignition Trigger (2) which will ignite the flame at the Burner Tube (4).
5. Use the Adjustable Control Knob (5) to adjust the flame to desired length.

### COLD WEATHER OPERATION:

Cold weather can adversely affect the flame size. To ensure proper performance, let fuel warm to room temperature before use. Flame is more likely to extinguish if torch is turned upside down while using in cold conditions.

### TURNING OFF AND STORAGE:

1. After use, ensure Gas Regulator (3) is turned to the "-" (OFF) position (turned fully clockwise).
2. Ensure flame is extinguished and Burner Tube (1) has cooled and that no other heat sources or flames are nearby.
3. Once cooled, remove the cylinder from the torch by turning counter-clockwise from the Connector (1). Store away from heat and flame.

### ⚠ CAUTIONS/WARNINGS:

1. **Read directions before use.**
2. **Disconnect torch from cylinder when not in use.**
3. **NEVER attempt to repair a damaged torch.**
4. **NEVER modify torch. This may make torch unsafe for use.**
5. **NEVER point torch at face, body or clothing when igniting.**
6. **DO NOT store in direct sunlight or any place where temperatures can exceed 104°F (40°C).**
7. **Use ONLY in well ventilated areas.**
8. **DO NOT TOUCH the Burner Tube (4) during or right after use. It will be very hot.**
9. **Keep out of reach of children.**
10. **Always wear protective gear when dealing with the hot surfaces and foods.**

