



Digital Timer

INSTRUCTIONS

914SDT100M

Before Use: Carefully remove plastic strip from battery compartment. This is included to preserve battery life. Remove film from LCD display.

Cleaning and Care: Hand wash only. Do not immerse in water or put in the dishwasher.

To Select Alarm:

Slide the switch located on the back of the timer for either alarm mode (ON) or silent mode (OFF).

Count down:

1. Press M and S to set desired time. Press and hold each button for fast advance.
2. Press START/STOP to start the count down.
3. Press START/STOP to pause and resume the count down.
4. When timer counts down to 0, press START/STOP to turn off the alarm and recall last time setting.
5. Press M and S simultaneously to clear the time.

Note: *Set desired time in minutes and seconds up to 99 minutes and 59 seconds.*

Count up:

1. Press START/STOP to start the count up.
2. Press START/STOP to pause and resume the count up.
3. Press M and S simultaneously to clear the time.

Note: *The timer will count up to 99 minutes and 59 seconds.*