




Blade Assembly

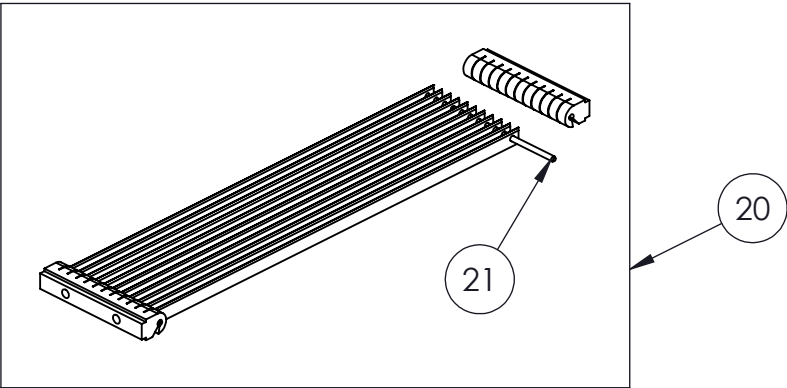

Pusher Head Assembly

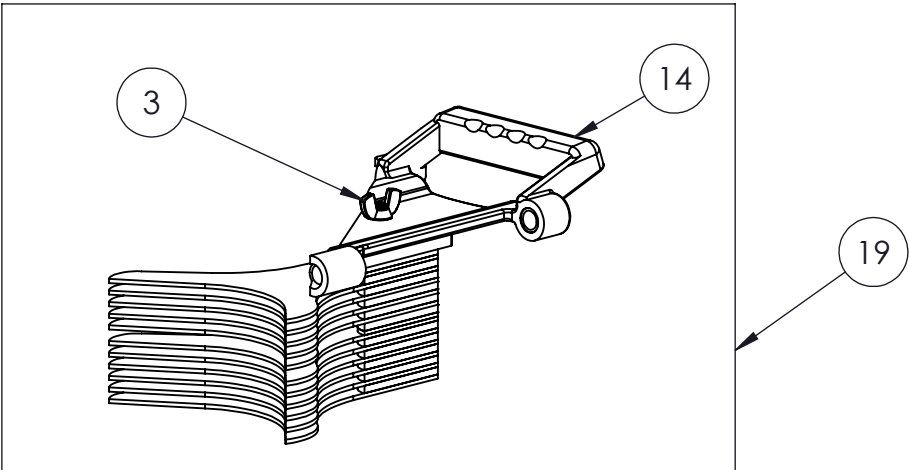


CALLOUT	SPARE PART	DESCRIPTION
1	303	RUBBER FOOT
2	305	O RING STOPPERS
3	356	NUT WING 1/4-20 SS
4	0658	RUBBER SEAL (NSF MODELS)
5	0660	BLADE BLOCK SCREWS
6	0664	BRIDGE CASTING
7	0667	BASE CASTING
8	0670	PLATFORM TP W/SG
9	0671	PLATFORM
10	0673	SCREW SET BRDG CSTING
11	0676	SCREW RETAINING
12	0680	PIVOT ARM POSITIVE STOP
13	0682	SAFETY GUARD-TOM PRO
14	0661	PUSHERHEAD CASTING
15	0688	END BUMPER/POS.STOP
16	369211	THUMBSCREW 1/4" 20 X 1/2"
17	0666L	GUIDE ROD LEFT
18	0666R	GUIDE ROD RIGHT
19	0662	PUSHERHEAD ASSY 3/16
	0663	PUSHERHEAD ASSY 1/4
20	0648	BLADE ASSY 3/16SCLPD
	0652	BLADE ASSY 1/4 SCALLOPED
	0653	BLADE ASSY TP 3/16
	0654	BLADE ASSY TP 1/4
	0656	BLADE ASSY TP 3/8
21	355318	BLADE PIN

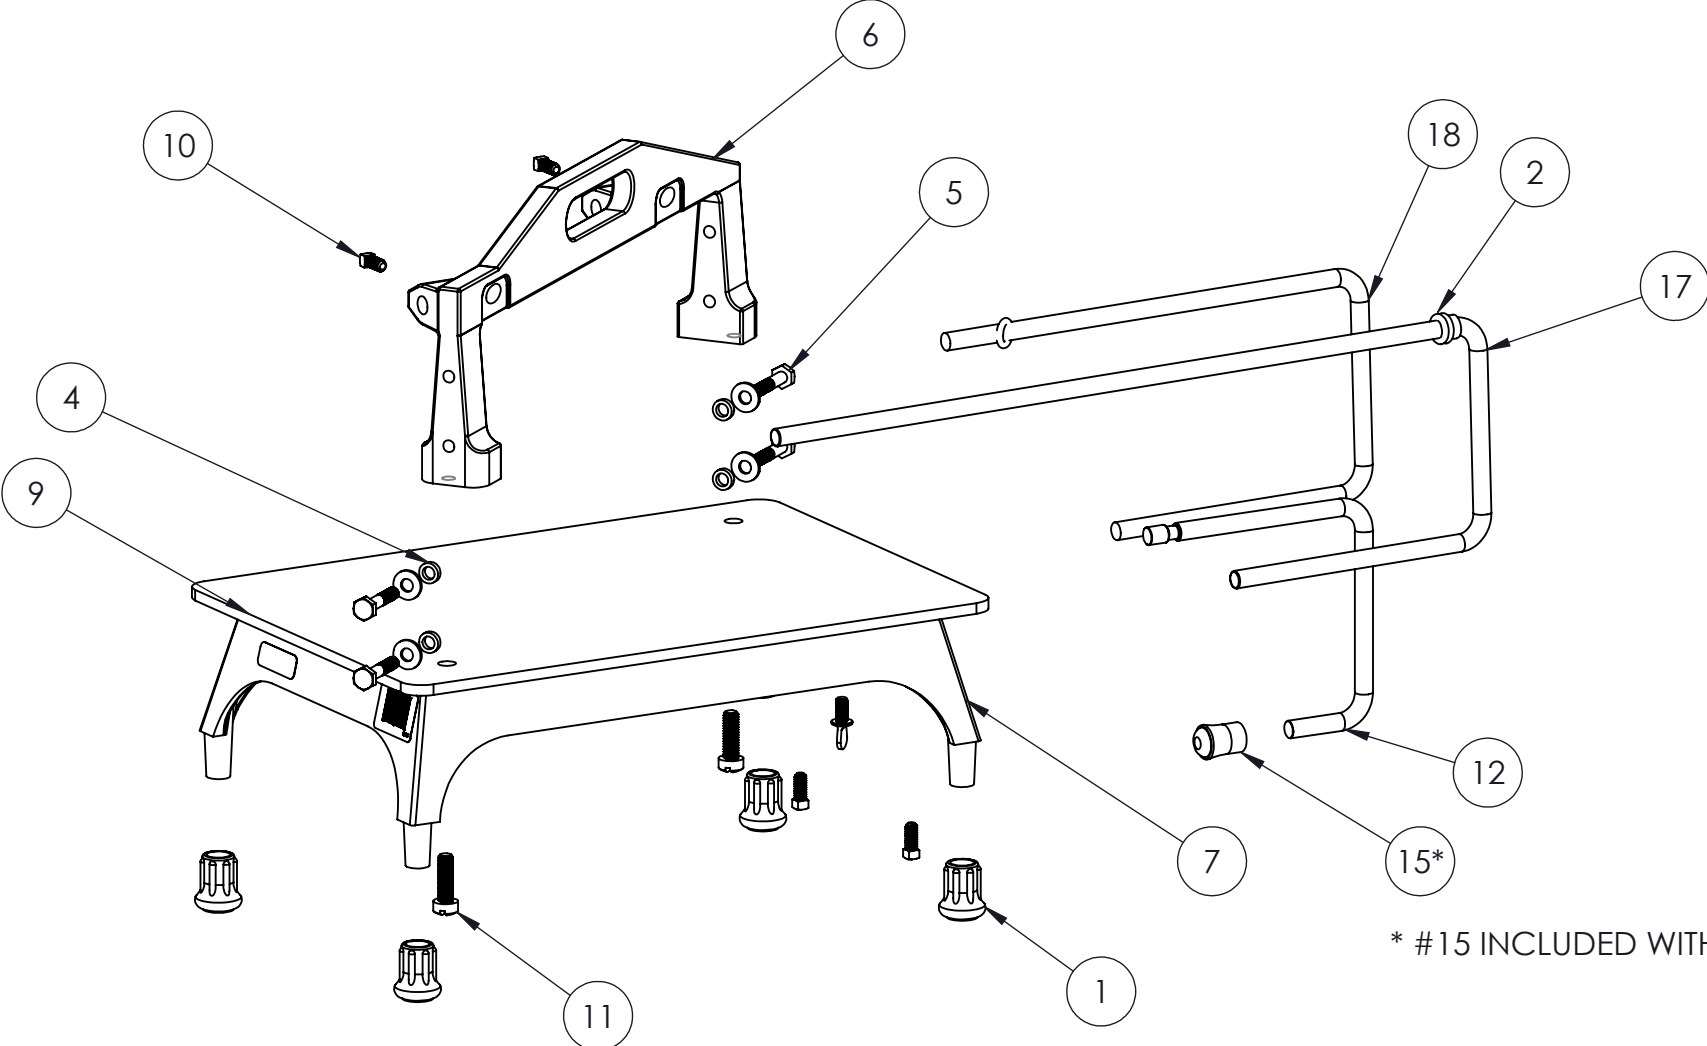

* #15 INCLUDED WITH #12

Safety Guard with Platform

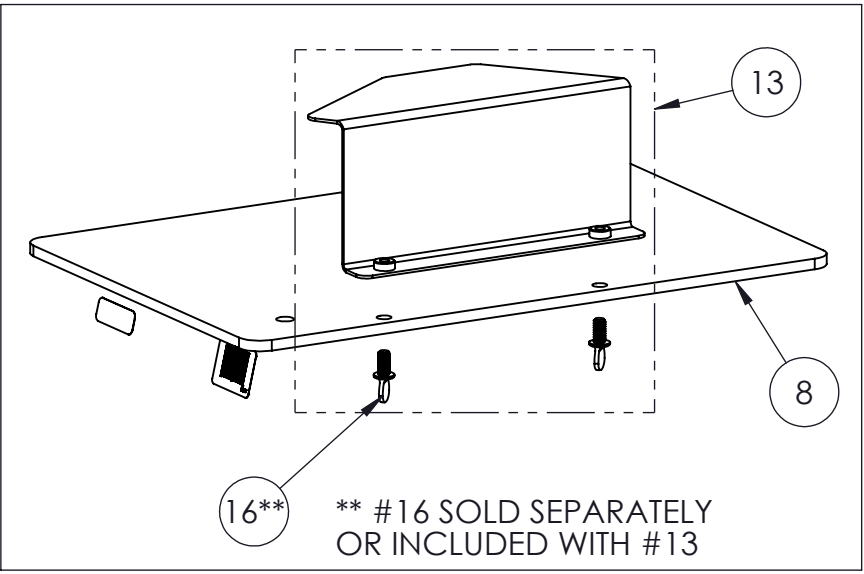

** #16 SOLD SEPARATELY OR INCLUDED WITH #13