

Cómo ajustar la configuración del dispensador químico Comment régler les paramètres de distribution de produits chimiques

The diagram illustrates the correct sequence for setting GEN mode. It shows a hand pressing the Power button and the Detergent Pre-Rinse button (labeled 2) simultaneously. An hourglass icon indicates a 5-second duration, with the text "PRESS BUTTONS SIMULTANEOUSLY". An arrow points to the next step, where the hand presses the Rinse Aid Pre-Rinse button (labeled 3). A checkmark icon indicates that this sequence is correct.

Diagram illustrating the process of setting a custom cook time:

- Initial state: Control panel shows "DIN" (Default) and a default time of 50 seconds.
- Action: Pressing the "DETERGENT PRIMING" button (3) changes the time to 45 seconds.
- Action: Pressing the "RANGE ADJ. PRIMING" button (2) changes the time to 45 seconds.
- Action: Pressing the "DETERGENT PRIMING" button (3) again confirms the setting, indicated by a checkmark.

Diagram illustrating the process of setting the default rinse time:

- Initial state: The control panel shows "RIN" and a default time of 10 seconds.
- Step 1: The time is set to 10 seconds (DEFAULT = 10 sec).
- Step 2: The time is set to 8 seconds.
- Step 3: A hand is shown pressing the "3" button, indicating a confirmation or selection.

DEFAULT = 8 sec

Diagram illustrating the sequence of button presses to set the default delay to 4 seconds:

- Press the **RAI** button.
- Press the **4** button.
- Press the **WASH** button.
- Press the **RINSE AND RINSE AID** button.

The final state shows a hand icon with a checkmark, indicating the successful completion of the sequence.

800-344-4802