



manufactured fun

P A R A G O N

OWNER'S MANUAL

The Econo-Sink Portable Handwashing Station



Model/Numbers:

Econo-Sink Portable Hand Washing Sink/ #4470

www.ParagonConcessions.com

Paragon International, Inc • 731 W. 18th Street • P.O. Box 560 • Nevada, IA 50201 USA

Phone (515) 382-8000 • Toll-free (800) 433-0333 • Fax (515) 382-8001 • Email:

info@manufacturedfun.com

Important Owner Information

Record the model number, serial number and voltage in the spaces below (the data plate is located on the operator's side of the machine in the bottom right). Please have this information available when calling Paragon for service assistance.

Model No. _____

Serial No. _____

Business Hours: 8:00 AM to 5:00 PM Central Standard Time (CST)

Telephone: 515-382-8000; 800-433-0333

Email: info@manufacturedfun.com

Fax: 515-382-8001

Additional information can be found by visiting our web site at www.paragonconcessions.com

INTRODUCTION

PARAGON IS PROUD TO BE YOUR PARTNER FOR MANUFACTURED FUN.

The Econo-Sink Portable Hand Washing Station is specially-crafted to meet precise specifications for performance, efficiency, and output. The Hannibal Sink is self-contained to allow hand washing and sanitizing in remote serving locations.

Paragon Portable Hand Sink Features:

- All 304 stainless steel construction that withstands heavy commercial use
- Ready to operate out of shipping container; all components factory installed
- Touchless: tug-n-pull towel dispenser and foot pedal operated hand washing
- Mobile: Locking swivel casters and quick lift foot pedal lever allows for effortless transportation
- Commercial grade five (5) gallon fresh water tank has an Easy Connect cap
- Commercial grade seven (7) gallon waste water tank with Shut-off Connection
- Lockable stainless steel cabinet
- Long gooseneck faucet spout
- Drain trap prevents smell from waste water
- External waste water exit hole allows alternative drain solution
- Seamless, deep drawn bowl design is easy to clean

Paragon Portable Hand Sink Specifications:

Model Number	4470
Model name	Econo-Sink Portable Hand Washing Station
Product Series	Econo-Sink
Brand	Paragon Portable Sinks®
NSF Certified	Yes
Warranty	1 Year Commercial Product Warranty
Indoor Use	Yes
Outdoor Use	Yes
Free Standing	Yes
Wheels	Yes
Number of Basins	One
Number of Hand Washings	Approx. 64 quantity, 5 pumps/ wash
Cabinet Material	304 Stainless Steel
Cabinet Locking	Yes
Dimensions	Full Sink: 26.5" W, 18.25" D, 37.5" H, 83 pounds.
Soap Dispenser Type	Integrated in sink, push operation
Paper Towel Dispenser	Wall Mount, Tug and Pull
Faucet Type	Gooseneck Spout
On/Off Mechanism	Hands-Free Touchless Foot Pedal Pump
GPM	.5 gallons per minute

Water Quality	Water must meet EPA Standards with PH between 7.0 and 9.0
Fresh Water Tank	5 Gallon Capacity
WasteWater Tank	7 Gallon Capacity
Basin Material	304 Stainless Steel
Basin Dimensions	21" W x 15" L x 7" Deep



Portable Hand Sink Applications

- Concession stands, food trucks & tents
- Outdoor events
- Medical exam rooms
- Lab and testing facilities
- Tradeshow
- Catering events
- Restaurants, cafeterias & waitress stations
- Mall kiosks
- School classrooms and playgrounds

Should you have any questions about your equipment, or would like to know more about our other innovative concession equipment and supplies, please contact us at 1-800-433-0333 or visit us on the web at: Manufacturedfun.com.

Thank you for your purchase and enjoy!

UNPACKING

Paragon carefully inspects each product during assembly and after completion to adhere to strict quality guidelines, and packs it securely to ensure safe delivery to each of our customers. Be sure to carefully remove all packing material and adhesive before any operation. Please examine your product to guarantee all equipment has arrived, complete and in good condition.

If you believe that any damage may have occurred during shipment or parts may be missing, please contact Paragon immediately for replacement.

SAFETY PRECAUTIONS



CALIFORNIA PROPOSITION 65 WARNING

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

ADVERTENCIA: Este product contiene productos químicos reconocidos por el estado de California que provocan cáncer, defectos de Nacimiento u otros daños reproductivos.

For more information: www.p65Warnings.ca.gov

Paragon values your continued safety above all else. Please follow these guidelines when using your equipment to prevent injury and maximize product performance:



All equipment is designed and sold for commercial use, but can be used by the general public or home use. No direct contact to internal, locked equipment by the general public should be allowed when used in food service locations. Only trained personnel should access the cabinet to empty and re-fill the water containers.

Carefully read any and all instructions before beginning operation of the equipment.

Do not allow users of the equipment to hang on the sides of the sink to avoid tipping over.

Any alterations made to equipment by anyone other than certified Paragon personnel will void warranty and may also create unsafe working conditions. NEVER make alterations to the equipment.

OPERATING INSTRUCTIONS

Portable sinks are extremely simple to set up and operate. The portable sink can be used just about anywhere. The portability and mobility of self-contained sinks make them an ideal solution for classrooms, playgrounds, concession stands, and outdoor events where plumbing is either not available or would be cost prohibitive.

1. Remove the portable sink from its packaging.
2. Fill the soap and towel dispensers.
3. Roll the portable sink into the desired location using its wheels. Be sure to place the portable sink on a level, solid surface. Once in place, lock the locking caster wheels in place by moving the metal lever into

- the down (locked) position. All four caster wheel swivel and lock.
4. Open the locked cabinet and lower the red lifting lever to lower the foot pedal and ensure it is completely lowered on to the level surface.
 5. Fill the fresh water tank (marked for your reference) from a tap and use the Easy Connect to snap the fresh water line on to the connection. To disconnect the Easy Connect connection, push the lever on the front of the connector coupling.
 6. Connect the waste water (marked for your reference) by fitting the tube into the water container. The fresh and waste water tanks have different connecting mechanisms so they cannot be inadvertently switched.
 7. Both the fresh and waste water tanks are equipped with air pressure release valves. Both of these valves, which are small valves located on the back of the tank's handle, should be turned open to allow air pressure to freely move through the plumbing connection and tubes.
 8. Should you prefer to connect the waste water connection to an outside source, simply connect the waste water line to a standard garden hose through the exit hole in the back of the sink cabinet to drain the water externally. Ensure you comply with local drain laws prior to dumping the waste water.

ASSEMBLY AND COMPONENT LIST

Open the box and remove the collapsed sink with the wheels on the ground.


Put two doors on the side for now and remove all excess foam.

Push all 4 metal buttons in and lift sink straight up. The metal buttons should automatically lock into their new, upright position.


Next attach doors. If possible, have someone help support the door. Attach top hinge first followed by bottom. Repeat for the other door.

Peel the remaining laser film off the sink and enjoy. Call us if there are any issues and we would love to help!



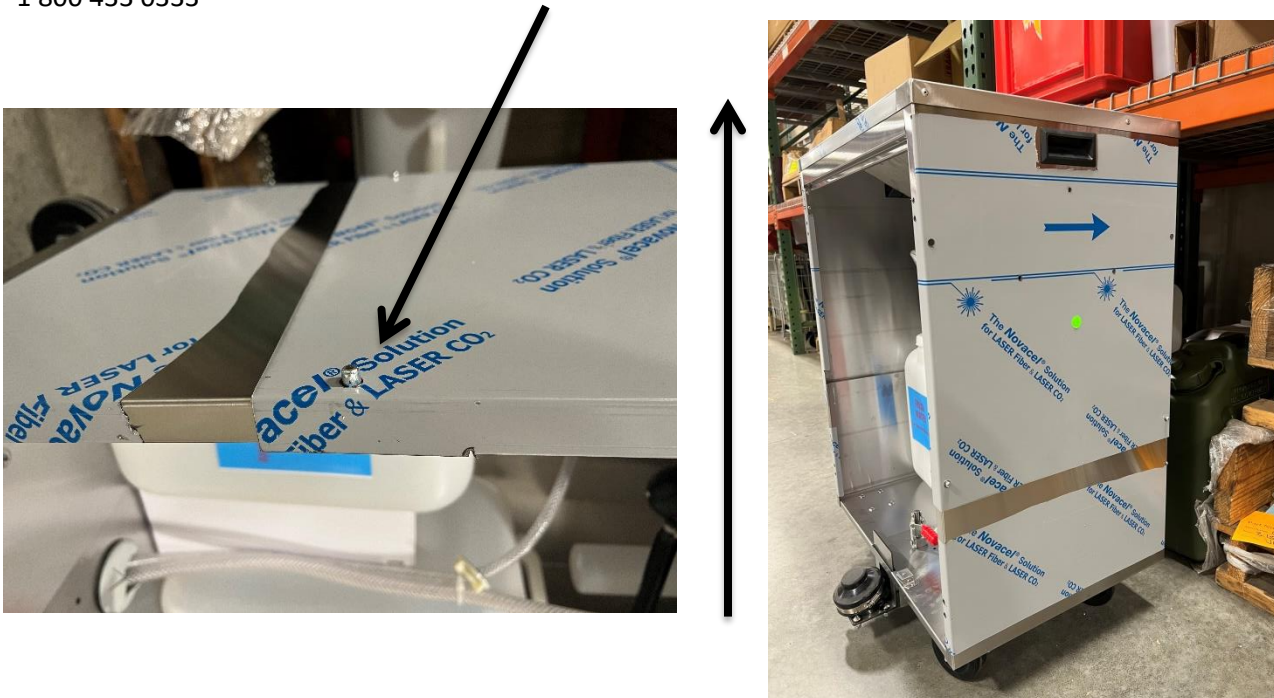



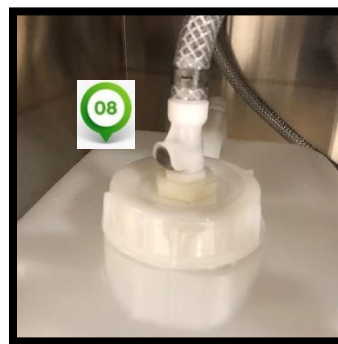





1 800 433 0333



The portable sink is shipped partially assembled; only towel dispenser requires installation to the side of the sink and the faucet will be installed, but needs to be screwed on the sink. Place the base of the faucet into the hole while reaching into the sink. Simply find the white plastic bolt attached to the faucet tube and slide it up the tube. Screw the white bolt onto the base of the faucet. The hardware for the towel dispenser is packaged into its respective box. To fill the soap dispenser, pull off the top and pour your choice of liquid soap into the bottle and replace the top of the soap dispenser. Lastly, to protect the sink during manufacturing, assembly and shipping, Paragon uses laser film on stainless steel products. The laser film needs to be peeled prior to using the sink.



PARTS LIST

	Description	Part Numbers
	Soap Dispenser – Automatic and Hardware	44614
	Paper Towel Dispenser – Z Fold and Hardware	44617
	Caster – 4” Swivel Locking	44620
	Lock & Key	44649
	Foot Pump – Plastic Water Pump & Fasteners	44613
	Lift Lever Toggle Clamp	44616
	Goose Neck Faucet & ¼” Hose and Clamp	44615
	Easy Connect Female (Fresh water tank)	44638
	Waste Water Tank Drain Cap Hole (Waste water tank)	44645
	Drain Trap – Gas, Black & Clamp with Drain Cover	44641
	Fresh Water Tank (5 gallon)	44618
	Waste Water Tank (7 gallon)	44619



Frequently Asked Questions

Issue: The drains will not drain and are filling up with water.

Solution: Ensure the waste water tank shut-off valve is open or perpendicular to the tube. When ready to empty the waste water tank, turn the shut-off valve to close (horizontal to the tube) to prevent any overflow spillage and remove hose fitting from the waste water tank.

Issue: The foot pedal will not pump water.

Solution: Open the air pressure release valve on the lid of both the fresh water and waste water tanks.

Solution 2: Ensure the quick connect valve is connected to the fresh water tank.

Solution 3: Ensure the water in-take tube inside the fresh water tank is connected to the barb.

Issue: Foot pedal is leaking water.

Solution: Tighten the hose clamp encircling the foot pedal using a screw driver.

Issue: The soap dispenser will not dispense.

Solution: Ensure the batteries are placed inside the battery compartment correctly with the negative sides of the batteries resting on the springs and the positive terminal resting on the tabs. If your sink and soap dispenser has been in operation for an extended period and under heavy use, you may need to change the batteries.

Issue: Wheels will not roll.

Solution: One set of wheels on the left side of the sink has locking wheels. If the wheels will not roll, they may be

locked. Simply flip the lever to the opposite side.

Issue: Why is water in the water lines of my new sink?

Solution: Paragon performs a quality check on every sink which involves filling the water tanks with clean water and ensuring the plumbing and pumping of the water works correctly.