



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.


Your Model Number AL5001W/F

Date Code 2 - AL5001W- - SY

Purchase Date _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

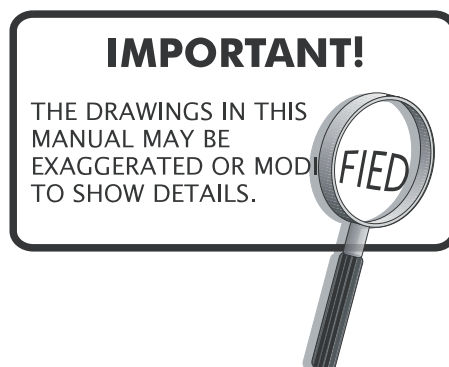

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS 9' KIRKWOOD LIGHT UP SHUFFLEBOARD TABLE WITH BOWLING

Tools Required:

Socket Head Wrench (Included)
Furniture Polish and Cloth
Carpenters Level

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your table.

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



ATTENTION:

**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO ASSEMBLE THIS GAME TABLE.**

HARDWARE IDENTIFIER


(To Scale)



H1 - 8mm x 130mm Hex Head Bolt
(8 pcs)



H2 - 8mm x 40mm
Hex Head Bolt
(16 pcs)

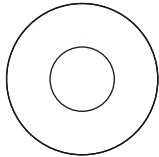

H3 - M8 Flat Washer
(24 pcs)




H4 - M8 Lock Washer
(24 pcs)



H5 - 3.5mm x 14mm
Phillips Flat Head Screw
(4 pcs)




H6 - 3.5 mm x 35 mm
Phillips Flat Head Screw
(10 pcs)

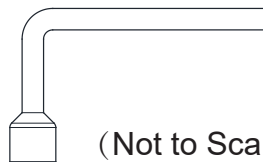


(Not to Scale)
T1 - Socket Head Wrench
(1 pc)

PARTS IDENTIFIER


(Not to Scale)

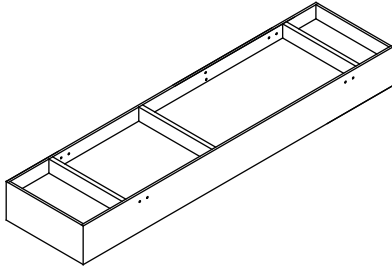


P1 - Main Cabinet
(1 pc)

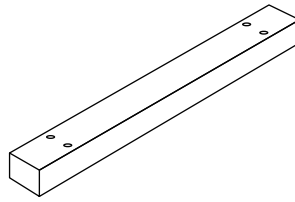


P2 - Leg Base
(2 pcs)

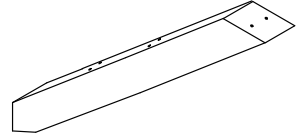


P3 - Middle Leg
(2 pcs)

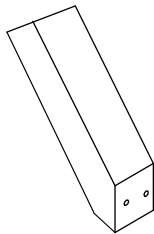


P4 - Upper Leg
(2 pcs)

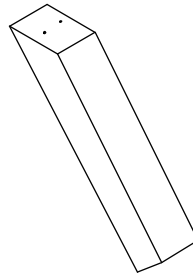


P5 - Bottom Leg
(2 pcs)

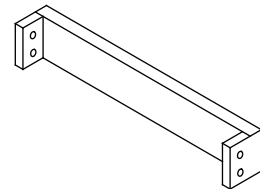


P6 - Support Brace
(1 pc)

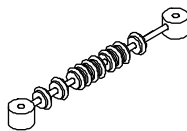


P7 - Manual Scorer
(2 pcs)

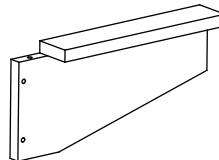

P8 - Bowling Pin
Side Block - A
(1 pc)

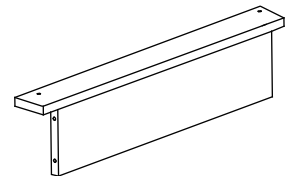

P9 - Bowling Pin
Back Block
(1 pc)

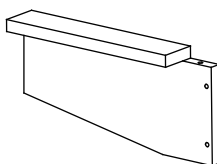

P10 - Bowling Pin
Side Block - B
(1 pc)

ACCESSORIES IDENTIFIER

(Not to Scale)



A1 - Shuffleboard Wax
(1 pcs)



A2 - Black Puck
(4 pcs)



A3 - Gray Puck
(4 pcs)



CAUTION:

 
1. Contains material not suitable for human consumption.
2. Shake contents before applying to shuffleboard playfield.
3. Prep playfield surface with furniture polish before applying shuffleboard wax.

Note:

A wide variety of shuffleboard waxes are available on the internet.




A4 - AC/DC Adapter
(1 pc)



A5 - Playrfield Brush
(1 pc)



 A6- Bowling Pins
(10 pcs)



A7- Bowling Pin Setter
(1 pc)



A8 - Table Leveling Shim
(4 pcs)

Assembly Note:

In the following Steps 2, 3 & 4, please exercise patience when starting all H1 & H2 bolts . Be sure to align bolts straight with their respective holes . Be careful not to cross thread .

Do not push on the bolts while trying to get the bolts to start as you could accidentally push the inner T-Nut out of its fixed position .

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance

PARTS REQUIRED


1pc - **P1** Main Cabinet
1pc - **P6** Support Brace

4pcs - **H6** Phillips Round Head Screw

STEP 1

Attach the **P6** Support Brace onto the **P1** Main Cabinet using the **H6** Phillips Round Head Screws as shown in **FIGURE 1**.

Tighten H6 Screws using the Phillips Driver.

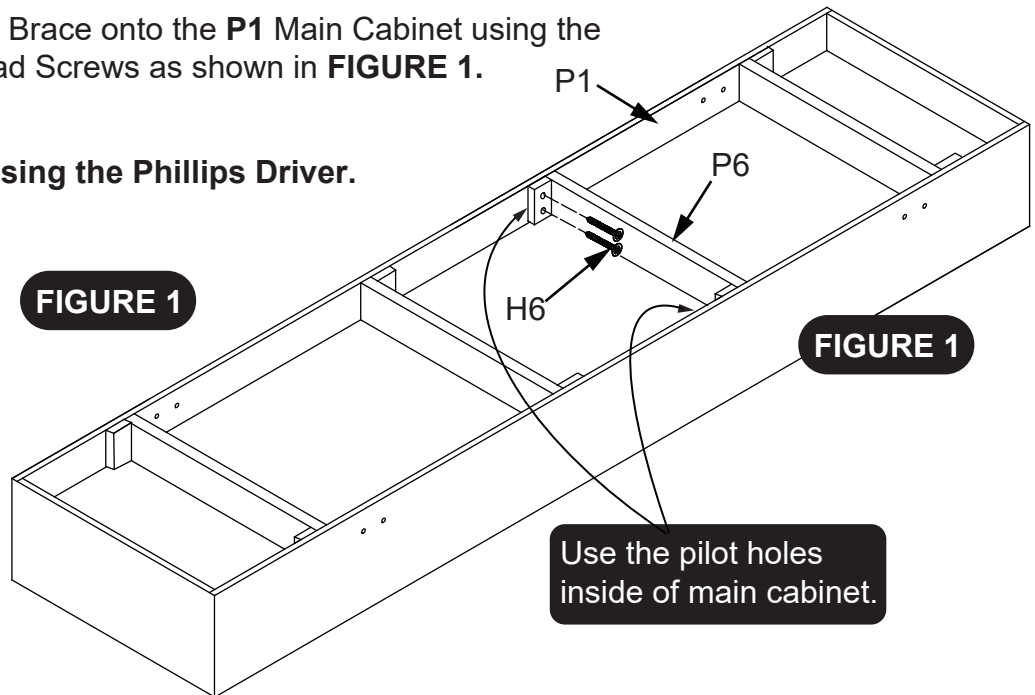

PARTS REQUIRED


2pcs - **P3** Middle Leg
2pcs - **P4** Upper Leg
8pcs - **H2** Hex Head Bolt

8pcs - **H3** Flat Washer
8pcs - **H4** Lock Washer

STEP 2

Attach the **P4** Upper Leg, **P3** Middle Leg onto the **P1** Main Cabinet using the **H2** Hex Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 2**.

Do not tighten Bolts at this time.

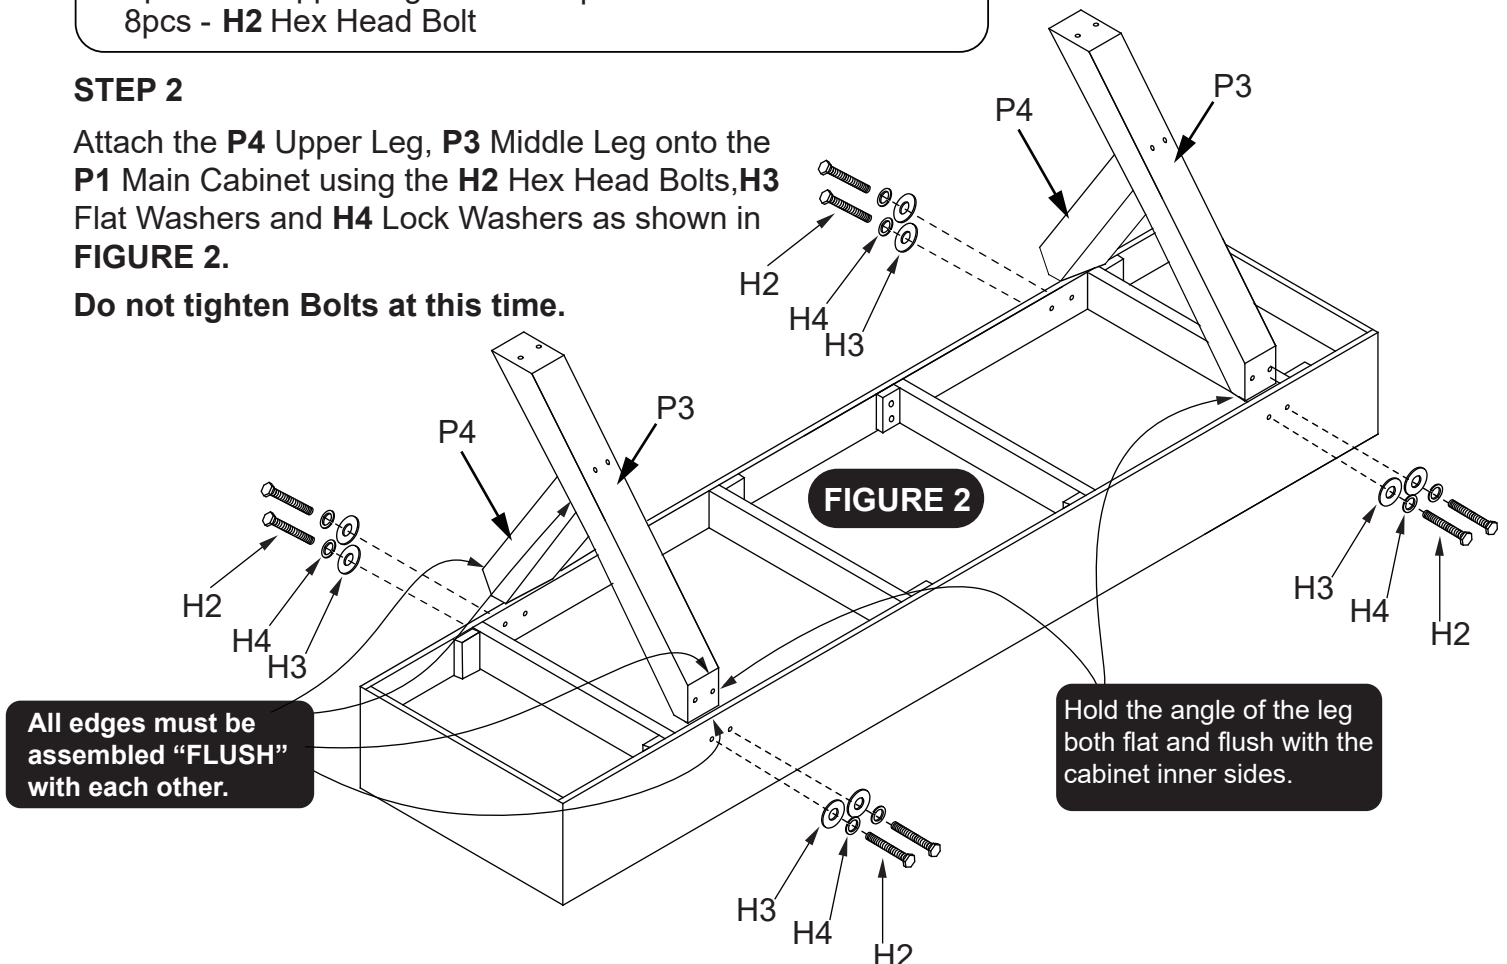

PARTS REQUIRED

2pcs - **P5** Bottom Leg

8pcs - **H1** Hex Head Bolt

8pcs - **H3** Flat Washer


8pcs - **H4** Lock Washer

STEP 3

Attach the **P4** Upper Leg with **P3** Middle Leg using the **H1** Hex Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 3**.

Attach the **P5** Bottom Leg onto the **P3** Middle Leg using the **H1** Hex Head Bolts, **H3** M8 Flat Washers and **H4** M8 Lock Washers as shown in **FIGURE 3**.

FIGURE 3

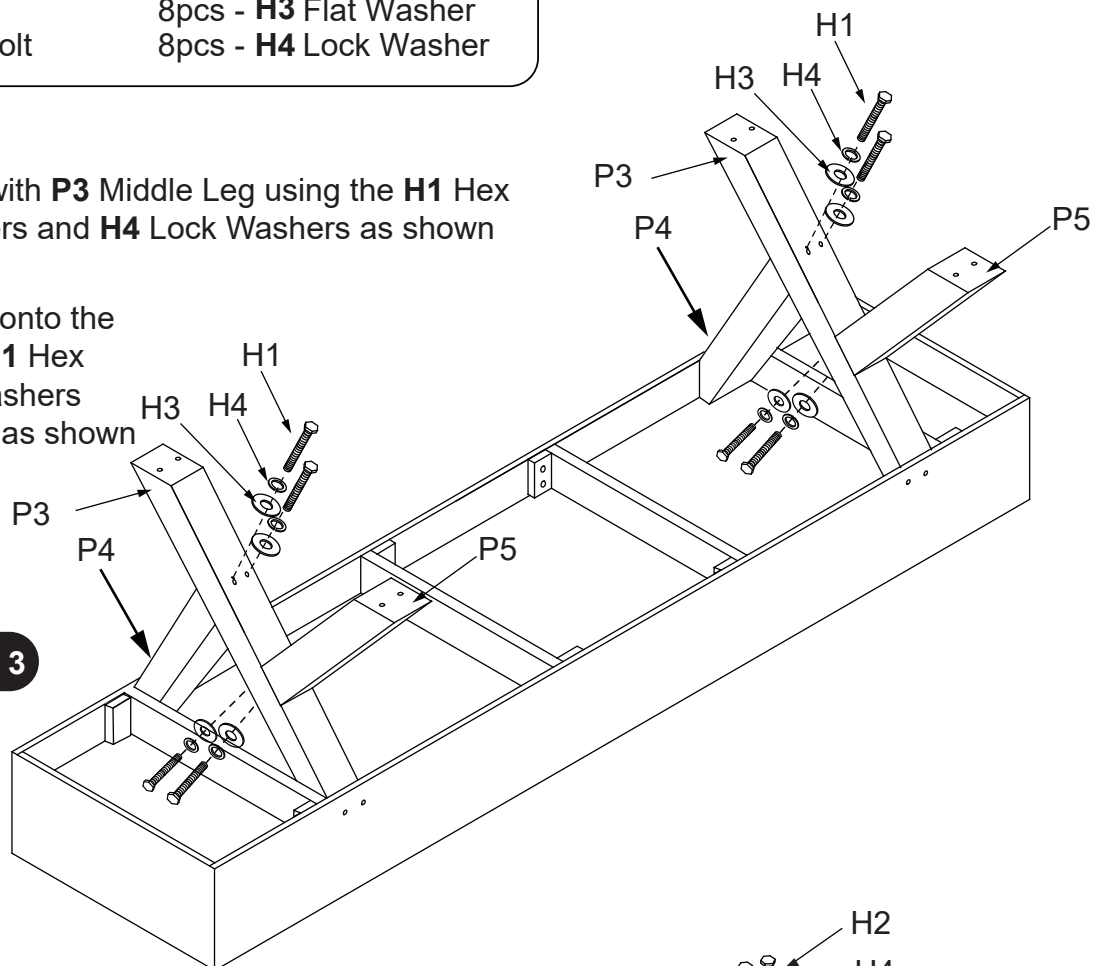

PARTS REQUIRED

2pcs - **P2** Leg Base

8pcs - **H2** Hex Head Bolt

8pcs - **H3** M8 Flat Washer

8pcs - **H4** M8 Lock Washer

STEP 4


Attach the **P2** Leg Base onto the **P3** Middle Leg and **P5** Bottom Leg using the **H2** Hex Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 4**.

Tighten all leg bolts now using the **T1** Socket Head Wrench.

All edges must be assembled "FLUSH" with each other.

Black PVC on the top.

FIGURE 4

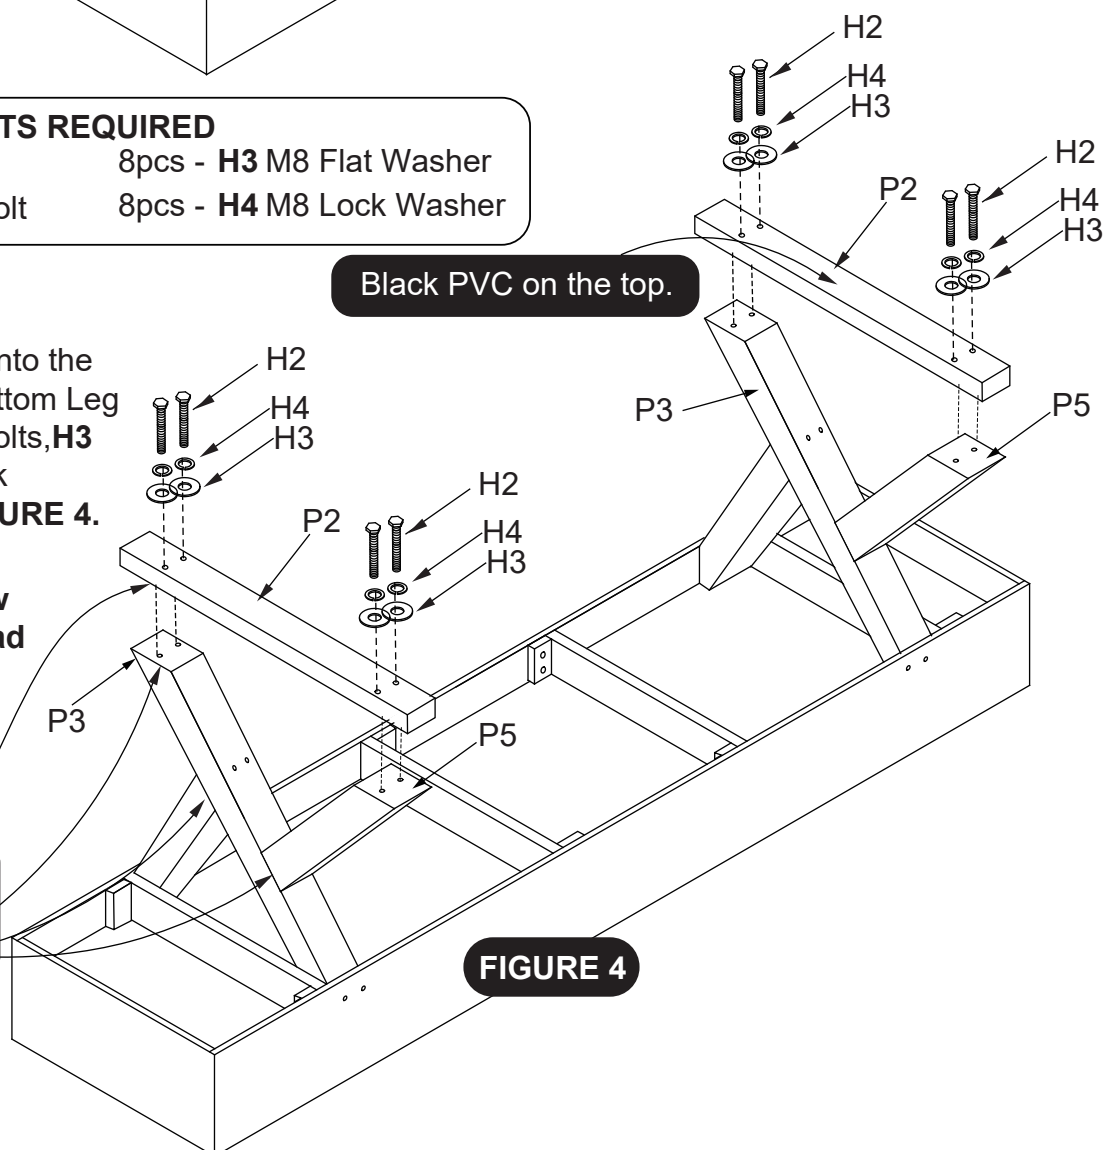

PARTS REQUIRED

2pcs - **P7** Manual Scorer

1pc - **P8** Bowling Pin Side Block-A

1pc - **P9** Bowling Pin Back Block

1pc - **P10** Bowling Pin Side Block-B

4pcs - **H5** Phillips Flat Head Screw


6pcs - **H6** Phillips Flat Head Screw

STEP 5

Attach the **P7** Manual Scorers into the pilot holes on the top rail using the **H5** Flat Head Screws as shown in **FIGURE 5**.

Attach the **P8** Bowling Pin Side Block-A and the **P10** Bowling Pin Side Block-B onto the **P9** Bowling Pin Back Block using the **H6** Phillips Flat Head Screws as shown in **DETAIL A**.

Tighten, but DO NOT strip out screws.

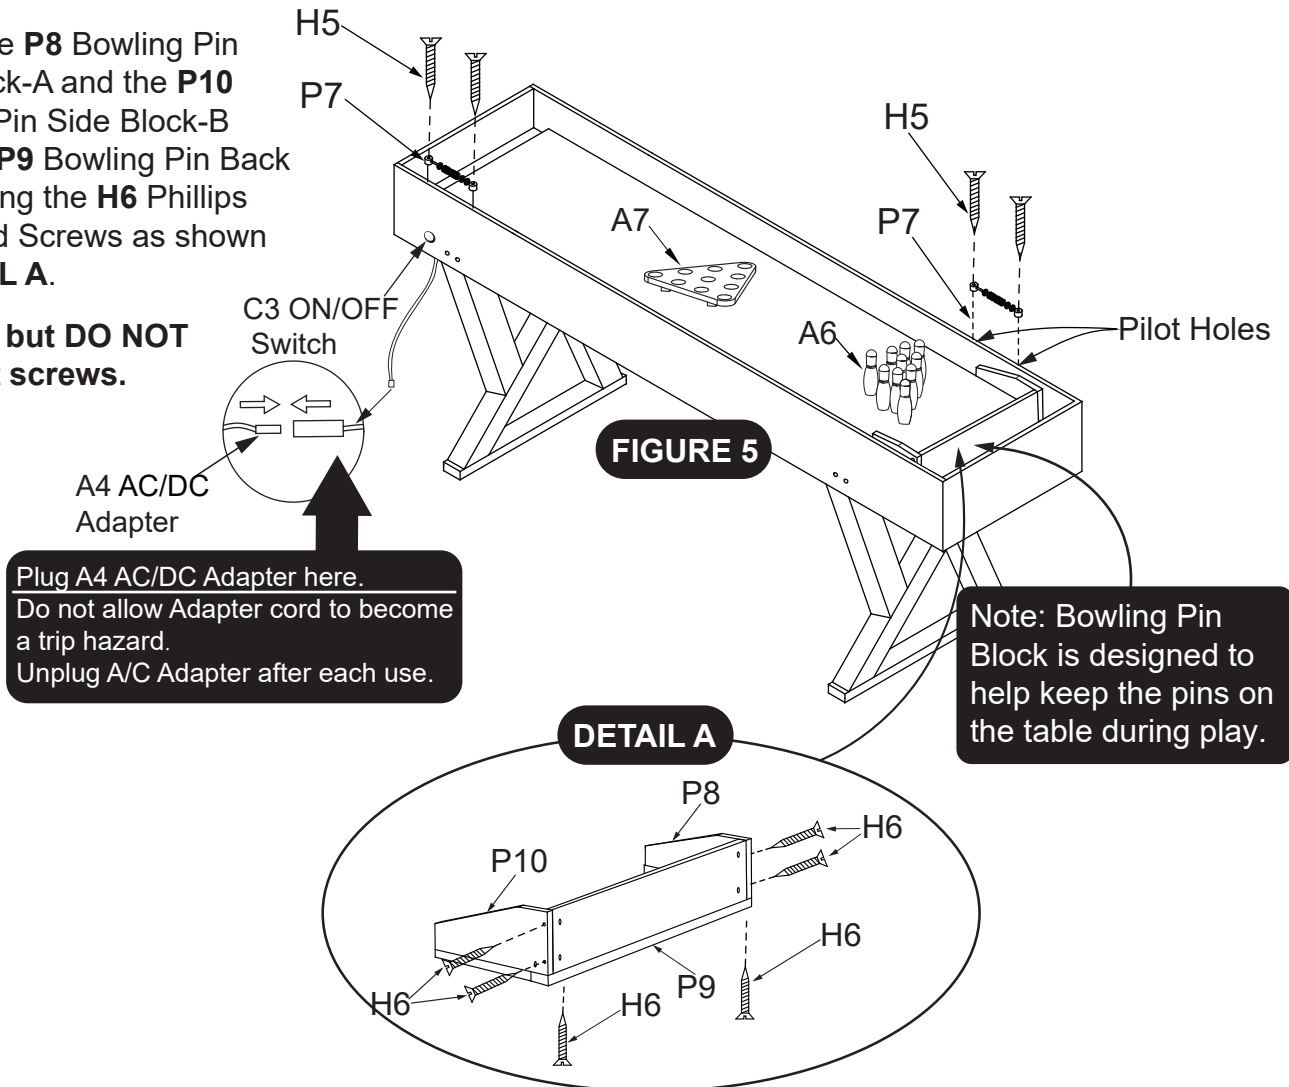


WARNING:

THIS STEP REQUIRES FOUR OR MORE ADULTS.

WHILE FLIPPING THE TABLE OVER, DO NOT ALLOW TABLE TO REST ON THE SIDE OF LEGS AS THIS COULD DAMAGE THEM.

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

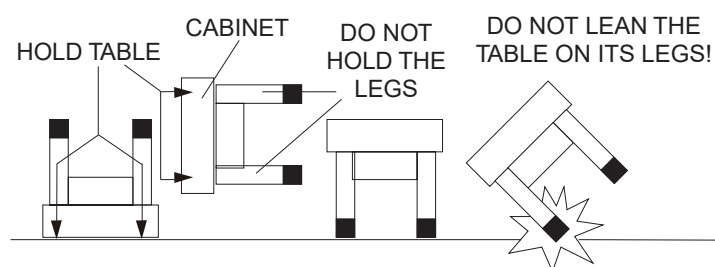

Replacement of LED Light Strip


STEP ONE :

Should the LED lights not be working in the rail - Firstly , make sure the wall outlet cord is plugged in to a live A/C outlet properly. Secondly , make sure the A/C Adapter (**A4**) is tightly plugged in to its outlet under the table . Lastly, make sure all LED Rail light connections are snugly plugged into the Main Electronic Unit (**C3**) . At this point , should the LED Rail Lights still not be working , please disconnect the A/C power to the table before proceeding .

A call will be required to our Customer Service Department to acquire the necessary replacement part(s) .

STEP TWO :

If the LED Light Strip needed to be replaced on the **P1** Cabinet inner side, take the **C1/C2** LED Light Strip out of the table.

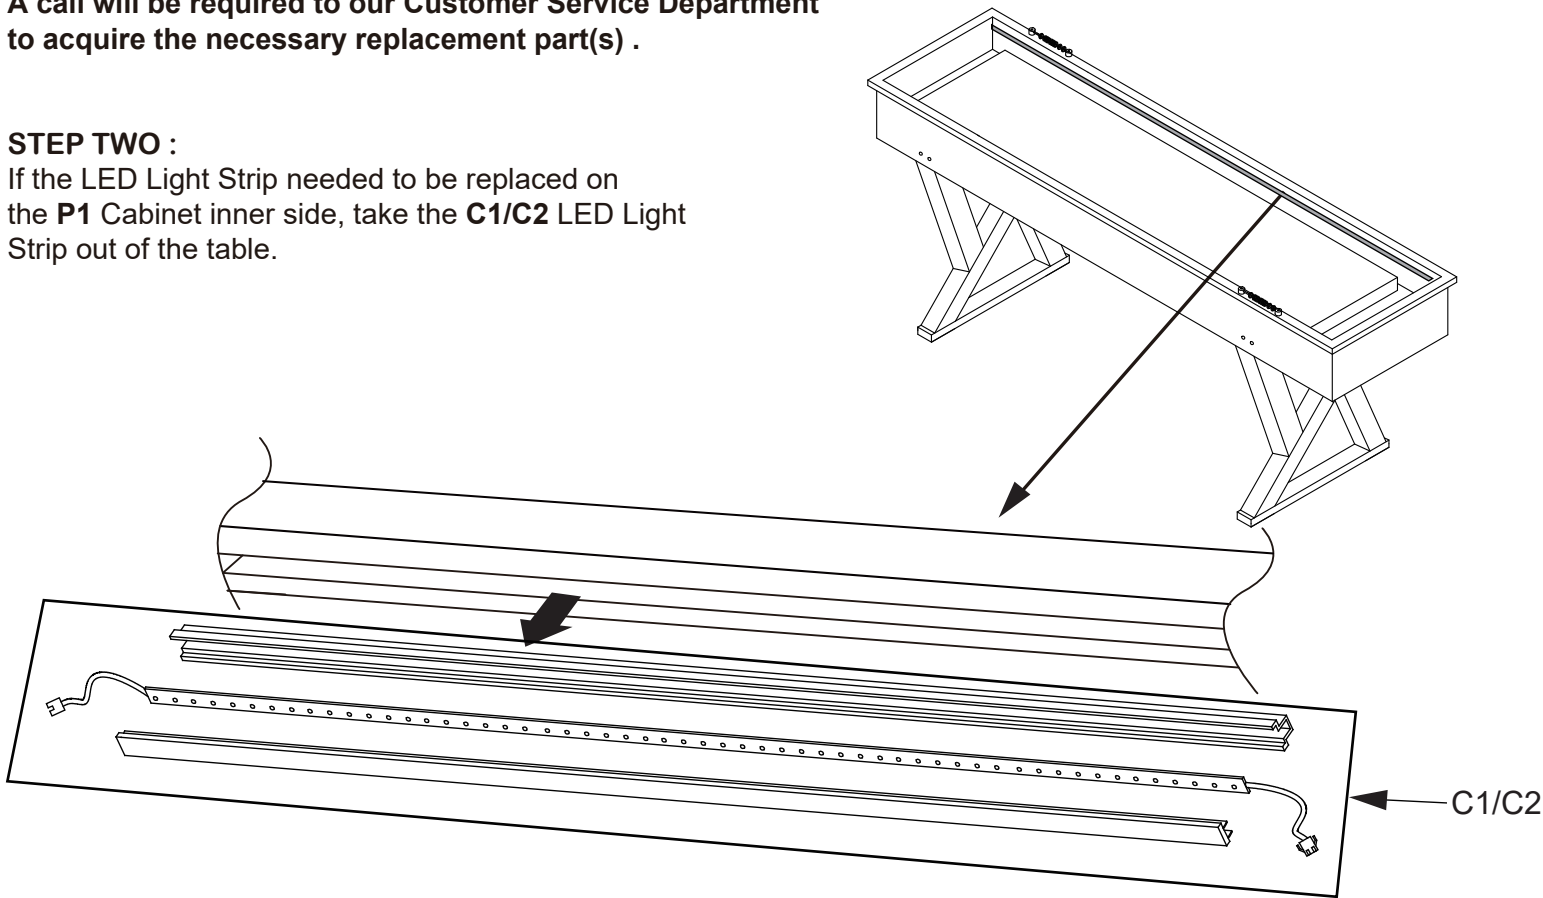


STEP THREE :

Install the replace LED Strip **C1/ C2** back to the Cabinet Side Rail.

Align the male and female connectors of the well Lighting LED Strip.


Connect the plug of **C1** Lighting LED Strip A , **C2** Lighting LED Strip B with **C3** ON/OFF Switch Wire.

Next, connect the **A4** AC/ DC Adapter with **C3** ON/OFF Switch Wire.

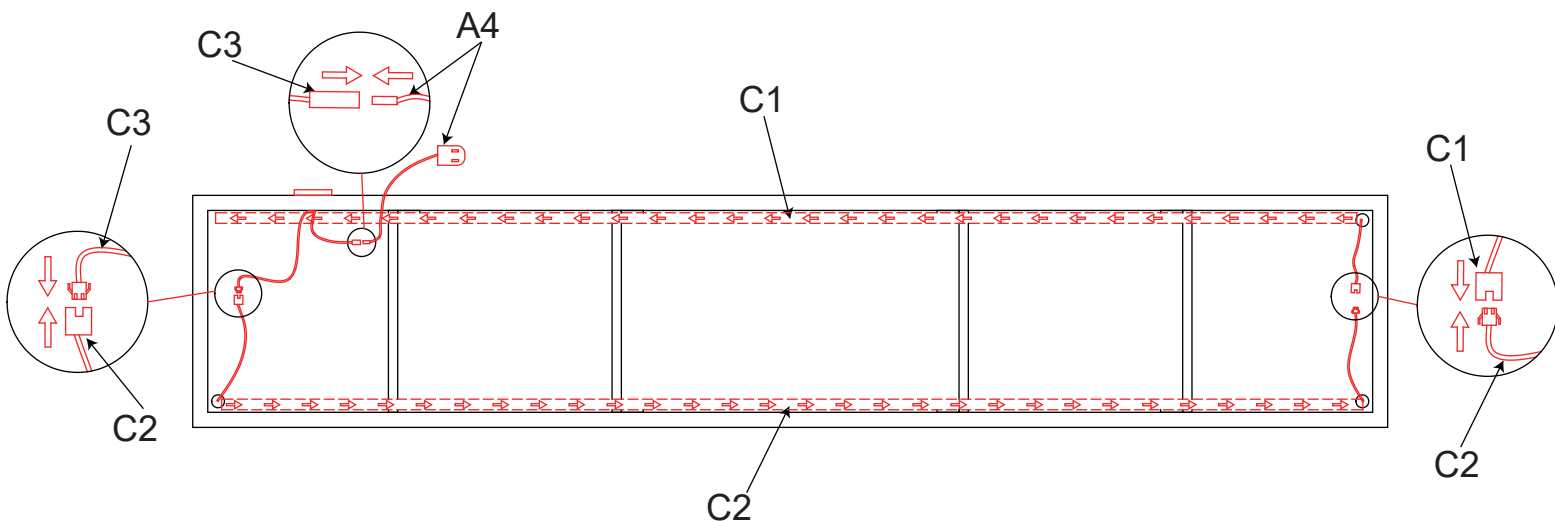

INSTRUCTIONS FOR LEVELING A SHUFFLE BOARD TABLE

- Assemble shuffle board table according to the instructions.
- Any type of level would be sufficient to perform this procedure. However, both one foot and two foot levels are recommended.
- Before leveling, make sure level is placed on the playing surface, not the top rails.
- Level the ends and adjust the height by placing shims (A8) underneath the leg opposite of which the bubble in the level favors until the bubble rests in the middle of the level.

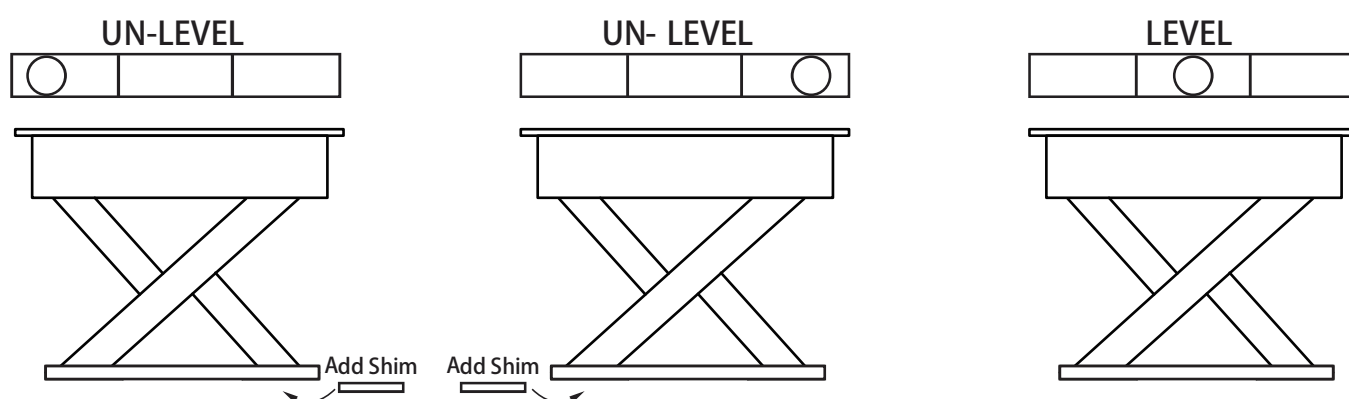

- Repeat the step above for the opposite end.
- Next, level the length of the table. Place the level on middle of playfield and adjust the height to position the bubble in the middle of the level, using the shims beneath the leg opposite of which the bubble in the level favors.
- Repeat the step above to the opposite length of the table.
- Recheck both short ends to ensure bubble are in the middle on the level.
- Depending on the surface the shuffle board table sits, especially deep pile carpeting, the shuffle board table needs to settle for 24 hours. Recheck the level on each side of the table after 24 hours.

Congratulations! You have now assembled your table. Please note the Care And Use instructions below to insure many years of trouble free use of your game table.



WARNING:

TO PLAY THIS GAME AND ACHIEVE A HIGH SKILL LEVEL
REQUIRES A SOFT AND GENTLE TOUCH.
OVER THROWING THE PUCKS WILL CAUSE DAMAGE TO
THE ENDS OF THE TABLE.

CARE AND USE OF YOUR TABLE

1. Always shake shuffleboard wax before applying to table.
2. Before first use and frequently there after, apply furniture polish to shuffleboard playfield to insure long life of playfield and the most competitive level of play.
3. Apply an adequate amount of shuffleboard wax over the entire length of shuffleboard playfield so puck will always "float" consistently over the entire length of the playfield.
4. Use spray furniture polish to clean all exterior surfaces of your game table.
5. This product is intended for **INDOOR** use only.
6. **DO NOT** sit, climb or lean on the table.
7. **DO NOT** drag the table when moving it. This will damage the legs.
8. **DO NOT** set drinks on the table.
9. Use a carpenters level to properly level the table using the enclosed leg shims.

PRODUCT PARTS LIST FOR MODEL # AL5001W/F

Key#	Part #	Description	Qty.	Key#	Part #	Description	Qty.
H1	AL5001STXH1	8mm x 130mm Hex Head Bolt	8	A1	AL5001STXA1	Shuffleboard Wax	1
H2	AL5001STXH2	8 mm x 40 mm Hex Head Bolt	16	A2	AL5001STXA2	Black Puck	4
H3	AL5001STXH3	M8 Flat Washer	24	A3	AL5001STXA3	Gray Puck	4
H4	AL5001STXH4	M8 Lock Washer	24	A4	AL5001STXA4	AC/DC Adaptor	1
H5	AL5001STXH5	3.5mm x 14mm Phillips Flat Head Screw	4	A5	AL5001STXA5	Playfield Brush	1
H6	AL5001STXH6	3.5mm x 35mm Phillips Flat Head Screw	10	A6	AL5001STXA6	Bowling Pins	10
T1	AL5001STXT1	Socket Head Wrench	1	A7	AL5001STXA7	Bowling Pin setter	1
P1	AL5001STXP1	Leg Base	1	A8	AL5001STXA8	Table Leveling Shim	4
P2	AL5001STXP2	Main Cabinet	2	C1	AL5001STXC1	Lighting LED Strip A	1
P3	AL5001STXP3	Middle Leg	2	C2	AL5001STXC2	Lighting LED Strip B	1
P4	AL5001STXP4	Upper Leg	2	C3	AL5001STXC3	ON/OFF Switch	1
P5	AL5001STXP5	Bottom Leg	2	K1	AL5001STXK1	Hardware Kit	1
P6	AL5001STXP6	Support Brace	1	M1	AL5001STXM1	Owner's Manual	1
P7	AL5001STXP7	Manual Scorer	2				
P8	AL5001STXP8	Bowling Pin Side Block - A	1				
P9	AL5001STXP9	Bowling Pin Back Block	1				
P10	AL5001STXP10	Bowling Pin Side Block - B	1				

Shuffleboards Game Rules - Information on how to play shuffleboard including rules and instructions on how to keep score in the most common shuffleboard games.

Common Shuffleboard Game Rules

Have you ever wondered how to play shuffleboard? Here are the most common shuffleboard rules that generally apply to most games. The rules usually require that you alternately take turns sliding, by hand, all 4 of your weights against the ones from your opponent. Try to make it to the highest scoring area on the shuffleboard without falling off the end of the board into the alley. In order to earn points your weights need to be the farthest down the board. Some of the strategy and fun really comes into play when you knock off your opponents' weights, outdistance them or use your weights to protect your other highest scoring weights.

Usually the most common games are played either to 15 or 21 points. The sections below cover the shuffleboard game rules for the most famous (and fun) shuffleboard games.

Shuffleboard Game Rules Scoring:

EXAMPLE: If a Red Weight is the most distant Weight from the playing end at the completion of a round, Red becomes the winner of the round, and only Red can score. To determine Red's score, total the value of each Red Weight that lies ahead of the leading Blue Weight. Red Weights which are either blocked or which lie behind the leading Blue Weight are not scored. If there are no Blue Weights remaining on the board, all remaining Red Weights are scored.

Knock Off Shuffleboard Rules:

Knock Off shuffleboard is one of the simplest and most common ways to play the game. However, just because the rules are simple to remember does not mean the game is easy to play. Any game of shuffleboard can be improved with patience and strategy, and this one is no different. Learn more about the Knock Off Game Rules.

Horse Collar Shuffleboard Rules:

Need a high scoring affair? Horse Collar shuffleboard is played one-on-one or with teams, and the winner must score 51 points. With a fun betting element for those who can't score and huge shots worth 26 points, Horse Collar is a game that everyone will be wanting to play. Learn more about the Horse Collar Game Rules.

Tap & Draw Shuffleboard Rules:

Unlike Knock Off participants, Tap & Draw players who get to shuffle the first puck have the best advantage. Tap & Draw is played and scored similarly to other versions of the game, but there is one major difference. In Tap & Draw, you can attempt to send your own puck farther up the board by tapping it with another one of your pucks. Learn more about the Tap & Draw Game Rules.

Crazy Eight Shuffleboard Rules:

As far as physically throwing the pucks and keeping score, Crazy Eight presents a version of shuffleboard that is pretty similar to many of the classic games people play. However, Crazy Eight is a fun and challenging version of shuffleboard due to the way that points are actually scored. Learn more about the Crazy Eight Game Rules.

Target Shuffleboard Rules:

Just like darts, archery and rifle, this shuffleboard game gives you the chance to aim and shoot at a target. With hopes of scoring one, two, three or four-points, use your skills to shoot for a target and bring home the winning game. Only the winner scores in each round, so choose your play wisely. Learn more about Target Game Rules.

The Scoring Of Shuffleboard Bowling

You can play with as many people as you like. Each player gets two turns with their shuffleboard weight. If all pins are knocked down on the first try, you have yourself a strike. Rather than scoring 10 for the frame, the player will score 10 plus the total amount knocked down during both turns in the next frame. If all pins are knocked down on the second try, you have yourself a spare. Instead of scoring 10 for the frame, the player will score 10 plus the total amount knocked down during the first turn in the next frame. As you can see, scoring is the same as regular bowling as points are tallied based on how many pins are knocked down. Shuffleboard bowling also consists of ten frames, so each player gets twenty opportunities to knock down the pins while also working on their shooting skills. Just as in regular bowling, if a strike or spare is scored on the last frame, the lucky shooter gets one extra frame to bowl. The winner is the player with the highest score!

The Strategy of Shuffleboard Bowling

The basics of shuffleboard bowling aren't much different from the basics of traditional bowling, so anyone who casually bowls can hop right in and play. Shuffleboard players will have to adjust their shooting techniques since shuffleboard bowling calls for a different kind of strategy. Traditional shuffleboard play doesn't require that you aim for the center, whereas shuffleboard bowling does. While you might normally shoot from the side of the table, that may not be an effective move for bowling.

It's important to bowl your weight down the board evenly and smoothly, so you can avoid the shuffleboard version of a gutterball. Feel free to try using both hands to send your weight flying, as you will have increased control and the potential for improved accuracy. On the other hand, using only your palm to move the weight could grant you better balance. Try a few different methods to create your own unique shuffleboard bowling style.

As if you needed another reason to add a shuffleboard table to your life, now you know that they can double as mini-bowling lanes. Shuffleboard enthusiasts and casual players alike can appreciate the variety in gameplay, as well as the chance to help you hone your shuffleboard skills. For hours of entertainment and a fresh use for shuffleboard tables, you just can't go wrong with shuffleboard bowling.

Bowling Scoring

	names	1	2	3	4	5	6	7	8	9	10	total
1		<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	
2		<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	
3		<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	
4		<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	
5		<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	<div><div></div><div></div></div>	

90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original owner, for a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY REPLACEMENT: During the above 90 day warranty period, ESCALADE SPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-888-996-2729 / Customer Service Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Customer Service Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such replacement of in-warranty Products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.