



ALLOY Series

USER SAFETY



WARNING — To prevent personal injury.

- **WARNING — CHILD SUPERVISION**
 - Unsupervised children may misuse the product, leading to potential injury or damage to the product.
 - Children should be supervised to ensure that they do not play with the product.
 - Do not allow children to use the product without proper supervision.
- **Chair and Stool Safety:** Keep all four legs on the ground. Do not shake or sway. Do not stand on the chair or stool.
- **Prevent Misuse:** Do not use chairs or stools as support when leaning or standing.
- **Do Not Use if Damaged:** Product should not be used if damage is found. Contact customer service.
- **Safety Labels:** Never remove any safety labels attached to the product.

INITIAL SETUP

- **Inspect the Packaging:** Examine the product's packaging for any signs of damage that may have occurred during shipping.
- **Unboxing:** Open the packaging with care.
 - Do not press a box cutter or knife through packaging, as it may damage the product or accessories.
 - Ensure you do not damage the product or its components when removing it from the packaging.
 - If any damage is present, contact customer service immediately.
- **Check Components:** Examine welds and fasteners for damage before use. Ensure all legs sit flat on the ground.

CLEANING & MAINTENANCE

GENERAL CLEANING

- **Clean with Mild Soap:** Clean with mild soap and a damp cloth. Wipe down with a dry, clean cloth.
- **Avoid Harsh Pads or Cleaners:** Avoid abrasive materials (scrubber pads, steel wool, etc.) or harsh cleaners (ammonia, bleach, acetone, glass cleaners, etc.).
- **Test Cleaners:** Test new cleaners on a hidden area before use. Always use a cleaner that is marked safe for the material being cleaned.
- **Follow Warranty Guidelines:** Damage from misuse or improper cleaning may not be covered under warranty.

WOODEN SEATS

- **Hardware Check:** Inspect the hardware daily to ensure all fasteners remain secure and that the back does not move, shift, or loosen during use.
- **Ensure Wood is Fully Dry:** Allow wood to dry completely after cleaning before use to prevent damage.

METAL SEATS

- **Product Usage:** Designed for indoor and outdoor use. Store indoors when not in use.
- **Hardware Check:** Inspect the hardware daily to ensure all fasteners remain secure and that the back does not move, shift, or loosen during use.
- **Product Usage:** Designed for indoor use only.

FABRIC & VINYL SEATS

- **Fabric and Vinyl Cushions:** Use a vacuum cleaner to remove dust and dirt.
- **Fabric Cleaning:** Use a detergent that is safe for fabric cleaning.
- **Vinyl Cleaning:** Use a multi-purpose cleaner safe for vinyl furniture.
- **Clean Spills Promptly:** Use a soft, clean cloth to clean spills.
- **Removable Fabric Covers:** Check the machine-wash label. Spot clean only if washing is not allowed.

Side Barstool

ASSEMBLY INSTRUCTIONS



 
LANCASTER™
TABLE & SEATING

ALLOY Series

HARDWARE & PARTS

HARDWARE

A (4) M6 x 15 mm
Hex Screws

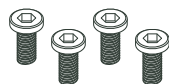


B 4 mm
Allen Key




PARTS LIST

 C Back Section

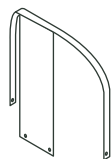

D Stool Frame

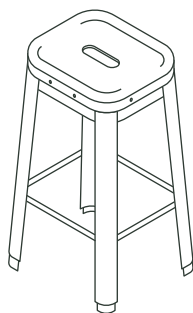 

ASSEMBLY

1. Stool Placement:

Place the stool frame (D) upright on a stable, level surface.

2. Locate Back Section:

Position the back section (C) against the back of the stool frame (D), aligning all mounting holes.

3. Insert Hardware:

Insert the provided screws (A) through the holes in the back section (C) and into the corresponding holes in the stool frame (D).

4. Tighten Screws:

Hand-tighten all screws (A) clockwise until the back section (C) is securely held in place. Then, fully tighten all screws using the 4 mm Allen key (B).

5. Verify Assembly:

Confirm all screws are fully tightened and both sections are securely fastened together. Verify that the back does not move, shift, wobble, or become misaligned.

