

Use & Care Guide

SEATING & TABLES



LANCASTER™
TABLE & SEATING

ALLOY Series

DURABLE METAL SEATING & TABLES FOR INDOOR & OUTDOOR USE



ASSEMBLY/ARRIVAL

1. It is the responsibility of the recipient to inspect the shipment for damage prior to signing the bill of lading. Damages must be reported to your authorized retailer within 5 days of receipt.
2. Inspect all welds and fasteners on chairs/barstools/tables for damage before use. Ensure all legs are straight and touching the floor.
3. Assembly, if applicable, should be conducted by a qualified adult using the applicable instructions.



STORAGE

1. If the chair/barstool is stackable, remove cushions or wood seats before stacking to prevent damage.
2. Stackable chairs/barstools that come with cushions are stackable once the cushions and seats are removed.

CUSHIONS

1. Store in a cool, dry place when not in use.



ONGOING MAINTENANCE

1. It is recommended to use placemats and coasters to prevent scratches, scrapes, and warping. If damage is caused by misuse, it may not be covered by the warranty.

CUSHIONS

1. Check for rips, stains, marks, loose seams, and other damage before use.

MONTHLY

1. Ensure the structure is sound and there are no cracks or breaks in the material. Tighten all bolts and screws. Do not overtighten since this may damage the material.



CLEANING INSTRUCTIONS

METAL

1. Clean using a solution of mild soap or detergent with warm water. Recommended: Noble Lemon Lance (147LMNLAN-RQT).
2. For dried-on dirt, clean with a soft brush and a mild cleaner. Recommended: Noble Spiffy Shine (999SPIFSHINE).
3. Make sure metal is fully dry after cleaning and before use to prevent rusting and other discoloration. Use a clean, dry cloth or a soft duster to dust weekly.

CUSHIONS: FABRIC & VINYL

1. Dirt and dust can be removed using a vacuum.
2. Use a soft, clean cloth to wipe up any spills.
3. (Fabric Only) If fabric is removable, check if machine washable. If not, spot clean. Recommended: Noble Vanish 999VANISH, Detergent: Noble Detergent 147DTRGT22HG
4. (Vinyl Only): Recommended: Noble All Surf: 147ALL-SRF2HG
5. Before cleaning, test a piece of fabric that isn't visible with soap/detergent to ensure that it will not stain fabric.

WOODEN SEATS

1. Do not use abrasive cleaners or products.
2. Use a clean, soft cloth to dust furniture weekly. Dust in the direction of the grain to prevent visible scratching.
3. Clean with a mild soap and damp cloth and dry with a dry cloth. Recommended Cleaners: Sunbright (999SUN-BRIGHT) and Luster Plus (999LUSTER+).
4. If you are using a new soap or cleaner, test first on an area that isn't visible.
5. Make sure wood is fully dry after cleaning and before use to prevent warping or damage to the finish. As these are the result of misuse, they may not be covered under warranty.



CAUTION

1. Do not use a chair/barstool/table if any parts are broken or missing. This includes screws, fasteners, and feet/glides.
2. Do not remove any safety labels.
3. Always follow cleaning and maintenance instructions.

CHAIRS/BARSTOOLS

1. Do not stand on chair/barstools/tables.
2. Children should always be supervised by an adult whenever they are using this furniture. Do not shake or sway while in use. Keep all four legs on the ground when in use.
3. When using zippers, take care to prevent fabric from catching.

TABLES

1. Do not let anyone sit, stand, shake, lean, jump, or climb on table. Do not use this product as a support when leaning and/or standing.