Prepare for use



Check batteries by turning on the key switch.



2

No.

Check the battery indicator to make sure machine is fully charged.

3



To inspect and install the brush make sure machine is off, raise the deck, loosen the black knobs then remove the idler assembly.

4



Fill machine with appropriate solution temperature should not exceed 130 °F).

5



Thoroughly vacuum the carpet to be cleaned before using the machine.

6



Prespray spots and heavy traffic area (AXP models only).

7



To use attachments, disconnect the recovery hose from the extraction shoes' hose then attach a wet pickup to the hose.

8



Connect the accessory solution hose to the accessory port. Make sure the deck is up and the machine display is in stand-by mode.

9



Turn machine on then press the wand switch shown above.

Empty the Debris Hopper

1



Turn off machine.

2



Grasp the metal handle and slide hopper out.

3



Empty and clean hopper after each use. Reinstall the hopper.

Clean out the Recovery Tank

1



Press the scrub off button to stop brushes and solution flow.

2



Remove the drain hose from its hanger and remove cap. Squeeze hose to regulate water flow.

3



Direct hose to a floor drain or bucket. Rinse tank with clean water. Inspect hoses. Replace hose if needed

4



Rinse out the tank.

5



Inspect recovery tank and vacuum hoses.

6



Inspect and clean inlet filters.

Store the Machine

Press the scrub off button to stop brushes and solution flow. Turn key to off position.



Empty solution tank.



Direct hose to a floor drain or bucket. Rinse tank with clean water. Inspect hoses. Replace hose if needed.

Rinse the recovery tank and hoses. Leave lid

open to allow tank to air dry.

5

8

Direct hose to a floor drain or bucket. Rinse tank with clean water. Inspect hoses. Replace hose if needed.

6



Clean and inspect brush. Rinse with warm water. Hang to dry. Replace if needed.

7

Remove and clean vacuum inlet screens.

Remove and clean vacuum shoes.

9



Plug machine up to charge for next use. Use a clean rag to wipe the exterior of the machine if necessary.



Weekly Maintenance

1



Check each battery cell water level.

2



Inspect and clean solution filter.

3



Clean the solution spray nozzles.

4



Purge chemical mixing system by replacing detergent cartridge with a cartridge filled with clean water

5

Turn key switch. Press
Detergent switch and
Solution/Pre-Spray
buttons (hold for 2
seconds). Purge
process takes 30

seconds.

Follow step 5 **only** if your machine is equipped with the AXP system.