



Conversions possibilities

JS012C + JS012HW = JS024C

HS Code 73269098

Tariff No. 9403200020 (USA)

Barcode: 5425023481127

Made in Sweden (EU)

Contents:

2x upright

2x telescopic feet

2x horizontal sheets with indentations

2x black adapting screws

4x bolts & 4x nuts

Quantity plates: 1x 12 plates

Weight & Dimensions

1 box, 75x25x5cm, 3kgs

1 box, 75x35x5cm, 3kgs

Assembled: 73x29x30cm

1 box, 29x10x1,50inch, 9lbs

1 box, 29x10x1,50inch, 9lbs

Assembled: 11,6x12x29,2inch

Min/max plate size

Min: 12cm (4,73inch)

Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance : regular washing

Guarantee: 2 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28

8300 Knokke-Heist, Belgium

Phone: +32 50 621020

Fax: +32 50 615757

E-mail: info@jackstack.com

www.jackstack.com

JS012C

Quick and easy assembly

Adjustable within seconds

 
To take any size of plate

Jackstack International N.V.

The world's fastest & most versatile preparation serving & storage system


Assembly instructions:

- Place the feet vertically and mount both horizontal sheets with indentations up in the respective screw holes with bolts and nuts.
- Fix the screws at the side of the feet so that the telescopic feet can eventually be extended to the rear.
- Fix the uprights in the indentations of the horizontal sheet.

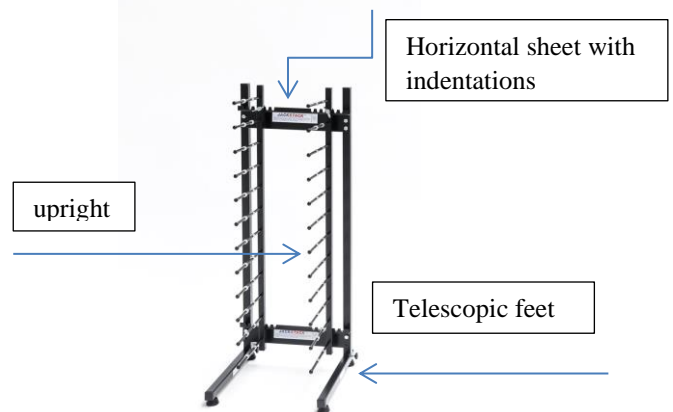

Adjustments:

 - The only correct setting is when the plates rest on all four plastic o-rings.

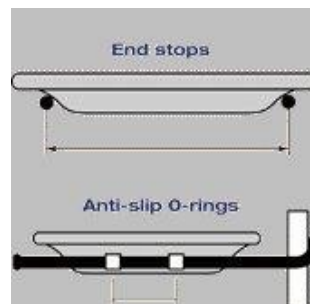



Conversion possibilities

1x JS012HW + 1x JS012CCT = JS012C
2x JS012HW + 1x JS012CCT = JS024C

HS Code: 73269098

Tariff Code: 9403200020 (US)

Barcode: 5425023480120

Made in Sweden (EU)

Contents:

1x upper wallholder

1x lower wallholder

2x uprights

1x spare parts bag

Quantity plates: 1x 12 plates

Weight & Dimensions

1 box, 75x25x5cm, 3kgs

Assembled: 70x24x21cm

1 box, 29x10x1,50inch, 9lbs

Assembled: 9,4x27,5inch

Min/max plate size

Min: 12cm (4,73inch)

Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance : regular washing

Guarantee: 1 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28

8300 Knokke-Heist, Belgium

Phone: +32 50 621020

Fax: +32 50 615757

E-mail: info@jackstack.com

JS012HW

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

 
The world's fastest & most versatile preparation serving & storage system

Assembly instructions:

- Find a suitable wall for JS012HW
- Mount the upper wallholder horizontally (use any of them, they are identical)
- Measure 570mm from the upper edge to the fixed wallholder to the upper edge of the lower holder, make a mark and mount it there.
- Hang the upright in the cut that fits your plate and lock them with the little screw.
- When need to adjust to another plate size, unscrew and move the upright.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

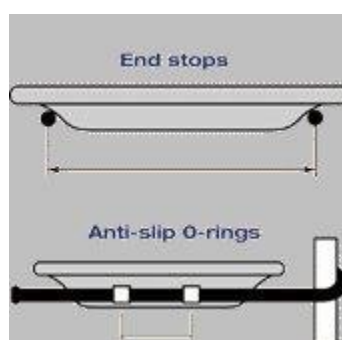



HS Code: 73269098
 Tariff Code: 9403200020 (US)
 Barcode 5425023480120
 Made in Sweden (EU)

Contents:

4x uprights
 2x telescopic feet
 4x horizontal sheets with indentations
 2x black adapting screws
 8x bolts & 8x nuts

Quantity plates: 2x 12 plates

Weight & Dimensions

2 boxes, each 75x25x5cm, 3kgs
 1 box, 75x35x5cm, 3kgs
 Assembled: 73x29x52cm

2 boxes, each 29x10x1,50inch, 9lbs
 1 box, 29x10x1,50inch, 9lbs
 Assembled: 29x12x21inch

Min/max plate size

Min: 12cm (4,73inch)
 Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance : regular washing

Guarantee: 2 year worldwide on any manufacturing default.

JS024C

Quick and easy assembly

Adjustable within seconds

 
To take any size of plate

Jackstack International N.V.

The world's fastest & most versatile preparation serving & storage system


Assembly instructions:

- Place the feet vertically and mount four horizontal sheets with indentations up in the respective screwholes with bolts and nuts.
- Fix the screws at the side of the feet so that the telescopic feet can eventually be extended to the rear.
- Fix the 4 uprights in the indentations of the horizontal sheets.

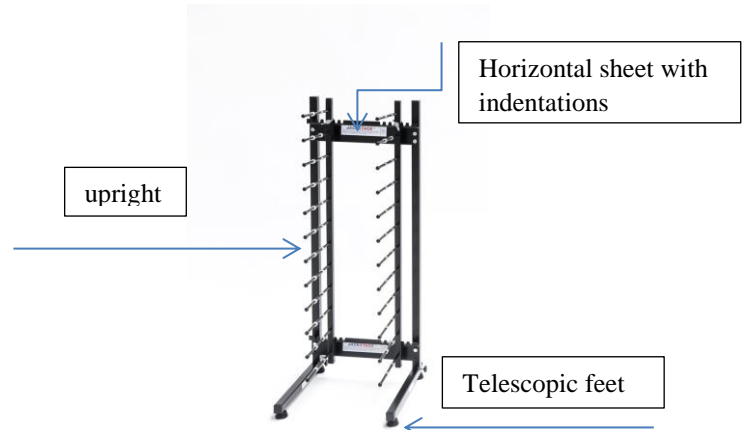

Adjustments:

 - The only correct setting is when the plates rest on all four plastic o-rings.

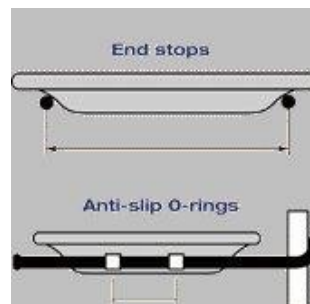

Jackstack International N.V.

Zoutelaan 28
 8300 Knokke-Heist, Belgium
 Phone: +32 50 621020
 Fax: +32 50 615757
 E-mail: info@jackstack.com
www.jackstack.com



JS052C

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

 
**The world's fastest & most versatile preparation
serving & storage system**

Assembly instructions:

- Take the base
- Position one crossbar under the central column
- Tighten the cylinder and lock with allen key
- Fit the cylinder into the hole in the middle of the base
- Fit the second crossbar above the central column and lock with wing-nut
- Fit the four uprights between the two crossbars, arrows pointing upwards

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

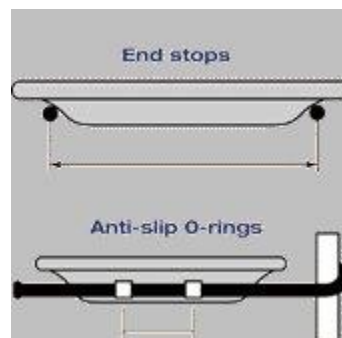

Conversion possibilities

JS052C + JS036F = JS088

JS052C + JS052F = JS104

HS Code: 73269098

Tariff No: 9403200020 (US)

Barcode: 5425023481523

Made in Sweden (EU)

Contents:

1x base
2x crossbar
1x cylinder
1x center pole
4x upright with plateholders (arms)
with 5cm (2inch) spacing.
1x wing-nut

Quantity plates: 4x 13 plates

Weight & Dimensions

1 box, 80x49x23cm, 13kgs

Assembled: 89x48x48cm

1 box, 19x19x35inch, 29lbs

Assembled: 30x22x10inch

Min/max plate size

Min: 12cm (4,73inch)

Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance : regular washing

Guarantee: 2 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28

8300 Knokke-Heist, Belgium

Phone: +32 50 621020

Fax: +32 50 615757

E-mail: info@jackstack.com

www.jackstack.com



Conversion possibilities

JS052F + JS052C = JS104

JS052F + JS036C = JS072

HS Code: 73269098

Tariff No.: 9403200020 (US)

Barcode: 5425023480526

Made in Sweden (EU)

Contents:

- *1 wheel base with 4 swiveling wheels of which 2 with brakes
- *1 round center column
- *4 uprights with 17cm (6,7inch) plateholders (arms) with 5cm (2inch) spacing
- *1 big middle crossbar
- *1 male & 1 female wingnut
- *spare parts bag

Weight & Dimensions:

1 box, 80x60x30cm, 22kgs

Assembled: 89x60x60cm

1box, 31.50x24x12inch, 48lbs

Assembled: 24x24x35inch

Min/Max plate sizes:

Min: 12cm (4,73inch)

Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance: regular washing.

Guarantee: 2 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28

8300 Knokke-Heist, Belgium

Phone: +32 50 621020

Fax: +32 50 615757

E-mail: info@jackstack.com

www.jackstack.com

JS052F

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

 
The world's fastest & most versatile preparation serving & storage system

Assembly instructions:

- A. Take wheelbase and put brakes on the 2 wheels (15cm/6inch) so it will not move during assembling.
- B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
- C. Lay big crossbar with "JACKSTACK" marking on the male side of center column.
- D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
- E. Move the upright in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- F. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

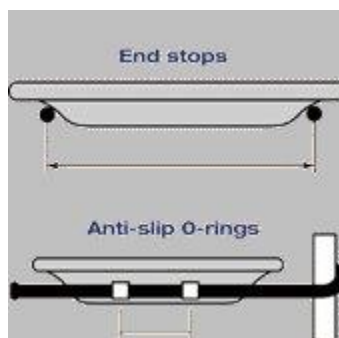



HS Code: 73269098
 Tariff No: 9403200020 (US)
 Barcode: 5425023480724
 Made in Sweden (EU)

Contents:

- *1 wheel base with 4 swiveling wheels of which 2 with brakes
- *2 round center columns
- *8 uprights with plateholders (arms) with 8cm (3 1/4inch) spacing
- *1 big middle crossbar
- *1 small upper crossbar
- *1 male & 1 female wingnut
- *spare parts bag

Weight & Dimensions:

1 box, 80x60x30cm, 28kgs
 Assembled: 176x60x60cm

1box, 31.50x24x12inch, 62lbs
 Assembled: 24x24x70.5inch

Min/Max plate sizes:

Min: 12cm (4,73inch)
 Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance: regular washing.

Guarantee: 2 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28
 8300 Knokke-Heist, Belgium
 Phone: +32 50 621020
 Fax: +32 50 615757
 E-mail: info@jackstack.com
www.jackstack.com

JS072

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

 
The world's fastest & most versatile preparation serving & storage system

Assembly instructions:

- A. Take wheelbase and put brakes on the 2 wheels (15cm/6inch) so it will not move during assembling.
- B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
- C. Lay big crossbar with "JACKSTACK" marking on the male side of center column.
- D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
- E. Move the upright in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- F. Tighten the middle crossbar and thus the uprights by fixing the second center column with the female side down.
- G. Put the small upper crossbar on the male side of the second center column and use the female wingnut to tighten a little.
- H. Slide four uprights with upmarking up between upper and middle crossbar
- I. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- J. In case you want to use two plate sizes on the same rack, you can choose a different setting for the upper and lower sections.
- K. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

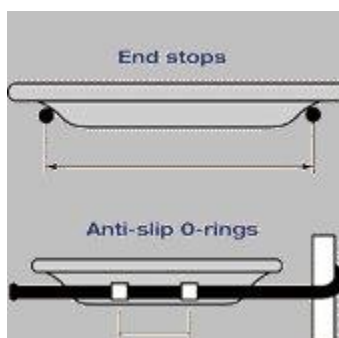



HS Code: 73269098
 Tariff No: 9403200020
 Barcode: 5425023480885
 Made in Sweden (EU)

Contents:

- *1 wheel base with 4 swiveling wheels of which 2 with brakes
- *2 round center columns
- *4 uprights with plateholders (arms) 5cm (2inch) spacing – 52 plates section
- *4 uprights with plateholders (arms) 8cm (3 ¼ inch) spacing for higher food presentation – 36 plates section
- *1 big middle crossbar
- *1 small upper crossbar
- *1 male & 1 female wingnut
- *spare parts bag

Weight & Dimensions

1 box, 80x60x30cm, 29kgs
 Assembled: 176x60x60cm

1box, 31.50x24x12inch, 64lbs
 Assembled: 24x24x70.50inch

Min/Max plate sizes:

Min: 12cm (4,73inch)
 Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance: regular washing

Guarantee: 2 year worldwide on any manufacturing default

Jackstack International N.V.

Zoutelaan 28
 8300 Knokke-Heist, Belgium
 Phone: +32 50 621020
 Fax: +32 50 615757
 E-mail: info@jackstack.com
www.jackstack.com

JS088

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

 
The world's fastest & most versatile preparation serving & storage system

Assembly Instructions:

- A. Take wheelbase and put brakes on the 2 wheels (15cm/6inch) so it will not move during assembling.
- B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
- C. Lay big crossbar with "JACKSTACK" marking on the male side of center column.
- D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
- E. Move the upright in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- F. Tighten the middle crossbar and thus the uprights by fixing the second center column with the female side down.
- G. Put the small upper crossbar on the male side of the second center column and use the female wingnut to tighten a little.
- H. Slide four uprights with upmarking up between upper and middle crossbar
- I. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- J. In case you want to use two plate sizes on the same rack, you can choose a different setting for the upper and lower sections.
- K. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

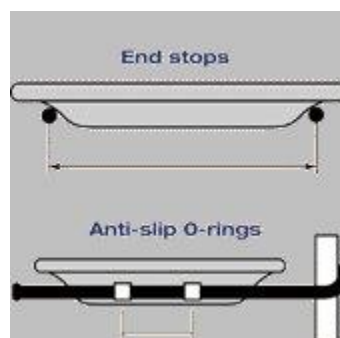



HS Code: 73269098
 Tariff No: 9403200020 (US)
 Barcode: 5425023481042
 Made in Sweden (EU)

Contents:

- *1 wheel base with 4 swiveling wheels of which 2 with brakes
- *2 round center columns
- *8 uprights with 17cm (6,7inch) plateholders (arms) with 5cm (2inch) spacing
- *1 big middle crossbar
- *1 small upper crossbar
- *1 male & 1 female wingnut
- *spare parts bag

Weight & Dimensions:

1 box, 80x60x30cm, 30kgs
 Assembled: 176x60x60cm

1box, 31.50x24x12inch, 66lbs
 Assembled: 24x24x70.5inch

Min/Max plate sizes:

Min: 12cm (4,73inch)
 Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance: regular washing.

Guarantee: 2 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28
 8300 Knokke-Heist, Belgium
 Phone: +32 50 621020
 Fax: +32 50 615757
 E-mail: info@jackstack.com
www.jackstack.com

JS104

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

 
The world's fastest & most versatile preparation serving & storage system

 
Please also see our 2 videos with assembly instructions and use of the unit on our website

- A. Take wheelbase and put brakes on the 2 wheels (15cm/6inch) so it will not move during assembling.
- B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
- C. Lay big crossbar with "JACKSTACK" marking on the male side of center column.
- D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
- E. Move the upright in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- F. Tighten the middle crossbar and thus the uprights by fixing the second center column with the female side down.
- G. Put the small upper crossbar on the male side of the second center column and use the female wingnut to tighten a little.
- H. Slide four uprights with upmarking up between upper and middle crossbar
- I. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- J. In case you want to use two plate sizes on the same rack, you can choose a different setting for the upper and lower sections.
- K. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

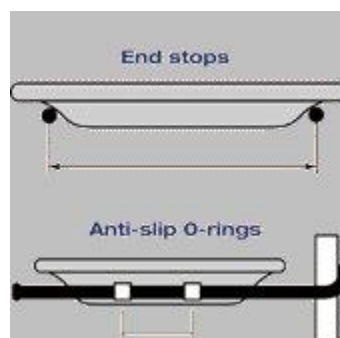

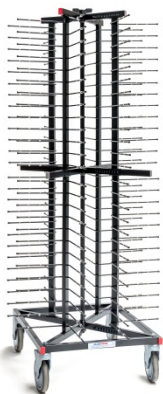

HS Code: 73269098
 Tariff No: 9403200020
 Barcode: 5425023481097
 Made in Sweden (EU)

Contents:

*1 wheel base with 4 swiveling wheels of which 2 with brakes
 *2 round center columns
 *8 uprights with 23cm (9inch) plateholders (arms) with 5cm (2inch) spacing
 *1 big middle crossbar
 *1 small upper crossbar
 *1 male & 1 female wingnut
 *spare parts bag

Weight & Dimensions:

1 box, 80x60x38cm, 32kgs
 Assembled: 179x80x80cm

1box, 32x24x15inch, 70,55lbs
 Assembled: 32x32x70,47inch

Min/Max plate sizes:

Min: 12cm (4,73inch)
 Max: pizza pans

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance: regular washing.

Guarantee: 2 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28
 8300 Knokke-Heist, Belgium
 Phone: +32 50 621020
 Fax: +32 50 615757
 E-mail: info@jackstack.com
www.jackstack.com

JS104/9 PIZZA

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Jackstack International N.V.

 
The world's fastest & most versatile preparation serving & storage system

Assembly instructions:

- A. Take wheelbase and put brakes on the 2 wheels (15cm/6inch) so it will not move during assembling.
- B. Attach one center column (male up) at the middle of crossbar in wheelbase and tighten it with male wingnut.
- C. Lay big crossbar with "JACKSTACK" marking on the male side of center column.
- D. Slide four uprights with the upmarking up between crossbar of wheelbase and the big middle crossbar.
- E. Move the upright in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- F. Tighten the middle crossbar and thus the uprights by fixing the second center column with the female side down.
- G. Put the small upper crossbar on the male side of the second center column and use the female wingnut to tighten a little.
- H. Slide four uprights with upmarking up between upper and middle crossbar
- I. Move the uprights in or outside according to the plate size you use and be sure that they hit the same marking at both crossbars.
- J. In case you want to use two plate sizes on the same rack, you can choose a different setting for the upper and lower sections.
- K. Tighten the upper wingnut completely and check also the wingnut at the wheelbase. If both are fixed, your JACKSTACK® is ready to serve you.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

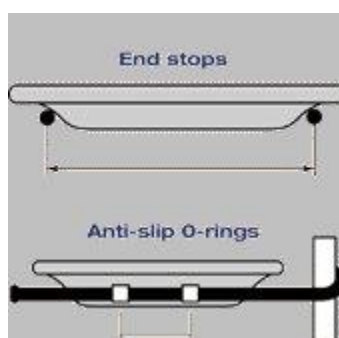



HS Code: 39269092
Tariff No: 39269092 (US)
Barcode: 5425023489321
Made in Romania (EU)

Contents:

1 Thermo cover

4 extensions

Weight & Dimensions:

1 box, 43x31x26cm, 6kgs
Assembled: 159x72x72cm

1 box, 16,93x12,2x10,24inch, 13,23lbs
Assembled: 63x28x28inch

Specifications

Preserves in transit 72-104 plates
warm or cold food during approximately
4hrs with an average loss of 2C-3C/hour

The Jackstack® thermo cover is made
of industrial High Tenacity PES fabric
with polyester fiber central layer.

Complete with 4 horizontal, 4 vertical
Zippers and a document holder.

Maintenance: machine washable.

Guarantee: 2 year worldwide on any
manufacturing default.

Jackstack International N.V.

Zoutelaan 28
8300 Knokke-Heist, Belgium
Phone: +32 50 621020
Fax: +32 50 615757
E-mail: info@jackstack.com
www.jackstack.com

JS104TC

Thermo cover for JS104-088-072

Quick and easy assembly

Jackstack International N.V.

The world's fastest & most versatile preparation serving & storage system

Assembly instructions:

- A) Remove the 4 red end-caps from the upper (small) cross bar.
- B) Replace by the 4 extensions.
- C) Put the thermos cover over the plate rack.



Remove the 4 end-caps



Replace by the 4 extensions

JS901PC

Plastic cover for JS104-088-072

Quick and easy assembly

Jackstack International N.V.

The world's fastest & most versatile preparation serving & storage system

Assembly instructions:

A) Put the plastic cover over the plate rack..



HS Code: 39269092
Tariff No: 39269092 (US)
Barcode: 5425023489017
Made in Sweden (EU)

Contents:

1 Plastic Cover

Weight & Dimensions:

1 bag, 1kg //1 bag, 2,2lbs
159x72x72cm // 63x28x28inch

Specifications

Protects prepared food in transit.
Keeps food longer fresh in cold storage.

Maintenance: machine washable.

Guarantee: 2 year worldwide on any manufacturing default.

Country of Origin:

Sweden (EU)

Jackstack International N.V.

Zoutelaan 28
8300 Knokke-Heist, Belgium
Phone: +32 50 621020
Fax: +32 50 615757
E-mail: info@jackstack.com
www.jackstack.com