



JS012HW

Quick and easy assembly

Adjustable within seconds

To take any size of plate

Conversion possibilities

1x JS012HW + 1x JS012CCT = JS012C

2x JS012HW + 1x JS012CCT = JS024C

HS Code: 73269098

Tariff Code: 9403200020 (US)

Barcode: 5425023480120

Made in Sweden (EU)

Contents:

1x upper wallholder

1x lower wallholder

2x uprights

1x spare parts bag

Quantity plates: 1x 12 plates

Weight & Dimensions

1 box, 75x25x5cm, 4kgs

Assembled: 70x24x21cm

1 box, 29x10x1,50inch, 9lbs

Assembled: 9,4x27,5inch

Min/max plate size

Min: 12cm (4,73inch)

Max: 30-32cm (12,60inch)

The Jackstack® plate racks are all made up of a welded steel construction with black electrostatic powder coating finish, which is scratch and rust resistant.

Maintenance : regular washing

Guarantee: 1 year worldwide on any manufacturing default.

Jackstack International N.V.

Zoutelaan 28

8300 Knokke-Heist, Belgium

Phone: +32 50 621020

Fax: +32 50 615757

E-mail: info@jackstack.com

Jackstack International N.V.



The world's fastest & most versatile preparation serving & storage system

Assembly instructions:

- Find a suitable wall for JS012HW
- Mount the upper wallholder horizontally (use any of them, they are identical)
- Measure 570mm from the upper edge to the fixed wallholder to the upper edge of the lower holder, make a mark and mount it there.
- Hang the upright in the cut that fits your plate and lock them with the little screw.
- When need to adjust to another plate size, unscrew and move the upright.

Adjustments:

- The only correct setting is when the plates rest on all four plastic o-rings. For changing to other plate dimensions, unloose the wing-nut to the section you want to change, adjust uprights accordingly and tighten down the wing-nut again.

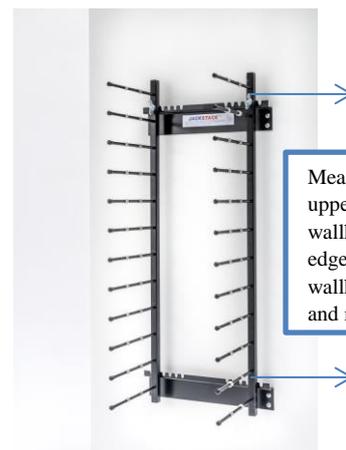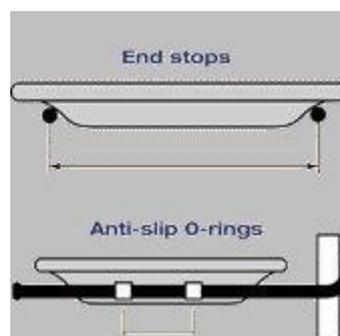

Measure 570mm from the upper edge of the fixed wallholder to the upper edge of the lower wallholder, make a mark and mount it there.