

First Time Machine Operation

This process is important to follow upon first use or any time that the boiler has been completely drained (such as repair or internal cleaning). Open any valve and leave it open by turning the knob counterclockwise. If your model has no knob, you will need to turn the Automatic control switch to the “Manual” position. Turn the machine on using the On/Off switch on the front panel.

The green and amber lights will come on. The pump will start to push the water into the boiler. If both indicator lights turn off shortly after powering on, this means that the water has not yet reached the proper level. Toggle Off for 15 seconds and On again for 1 minute to continue the fill process. During very first use, you may have to do this 3-4 times as the pump continues to fill the boiler. When both indicator lights come on and stay on, close any valves and let the machine remain on to heat up. The amber light will go on and off throughout operation as the heating element cycles to maintain the internal temperature. This is normal once the machine reaches proper temperature.

The warmup process can take 10 to 20 minutes. When the “Boiler Pressure” arrow on the gauge is between 14 and 20psi, the machine is ready to be used.