

How to Reset the Temperature Range:

For GSM, RSD, and BC Series

- 1) Press “▽” for 10 seconds until the display shows “ON” – this means the controller is open for adjusting all parameters.



- 2) Press “SET” for 6 seconds until the display flashes “E1”.



- 3) Press ▽ until you reach 32 degrees Fahrenheit.



- 4) Do not touch the controller for 10 seconds - this will save the settings.



5) Press “▽” for 10 seconds until the display shows “OFF” – this will lock your settings in place.



6) Press “SET” again. The display will flash the temperature at which the compressor currently cycles off. The compressor will kick on approximately 7-8 degrees above this set point.

