



## Hot Dog Bun Cabinets and Warmers



**Models:** 177BCAB64, 177BCAB100, 177BCAB144,  
177BW32, 177BW48

02/2024

***Please read and keep these instructions. Indoor use only.***

## Introduction

1. Read all instructions before using the product
2. Always follow basic precautions when using electrical equipment in order to minimize the risk of fire, electrical shock, and injury.
3. Clean machine thoroughly before and after every use.

## Safety Instructions

1. Plug the machine into a certified electrical outlet that has a voltage rating that corresponds with the voltage rating on the machine.
2. Always unplug the model when it is not in use and prior to cleaning. Do not operate unit with a damaged cord or plug, or after it is dropped or any malfunction occurs. Use authorized service for examinations and/or repairs.
3. Exercise extreme caution when the model is used near children and when it is left operating and unattended.
4. Thoroughly clean the unit prior to the first use.

## Preparation

1. Set unit on a flat surface.
2. Position unit near a power outlet. Avoid use of extension cords.
3. To avoid electrical damage, make certain that the nameplate voltage is the same as the outlet voltage.
4. Warmer has hot parts. Do not use anywhere near gasoline or other flammable liquids.
5. Make sure electrical connections are in compliance with applicable portions of the electrical code.
6. Prior to first use, it is advised that you clean the rollers of the machine with a soft cloth.

## Startup

1. Unpack and inspect your bun warmer or drawer for any visible damage. If damage is noted, do not use and contact the place you purchased the Avantco item.
2. For the bun cabinet, place on a level counter to be used with your Avantco hot dog grill.
3. For the bun warmer, unwrap the rack and place inside of the warmer. Place on a dry, level counter top near a 120V outlet. Plug the warmer in and allow 30 minutes for it to reach desired temperature.

## Electrical Requirements

1. Check the product tag for voltage/wattage requirements and plug into an outlet with sufficient power.

## Operation

1. Place the machine on a flat counter or tabletop surface.
2. Plug the cord into a 3-wire 120V outlet. Place buns **STILL IN THE BAG** inside the machine. Removing buns from the bag will dry out your buns.

## Cleaning

1. Unplug the power cord.
2. Do not ever immerse the machine in liquid of any kind.
3. Remove the inside rack and clean the inside and outside of the machine with a moist sponge and a mild soap.
4. Clean rack and outside of the machine with recommended Noble Formula-D.
5. Wipe the machine dry.



Attack tough grease, oil, and carbon with this ready-to-use carbonizer and degreaser. Its unique formula is designed to clean ovens, grills, hoods, and a wide variety of other surfaces.

## Technical Specifications

### Bun Cabinets

Item Number	Dimension (inches)	Voltage (V)	Power (W)
177BCAB64	22.44" x 16" x 6"	NA	NA
177BCAB100	22.44" x 19.88" x 7.28"	NA	NA
177BCAB144	34.25" x 19.88" x 7.28"	NA	NA

### Bun Warmers

Item Number	Dimension (inches)	Voltage (V)	Power (W)
177BW32	23.5" x 21.5" x 9.75"	120V	450W
177BW48	32" x 21.5" x 10.5"	120V	600W