



FREERANGE DUAL BATTERY CHARGING STATION

USER MANUAL

SKU/Model:	DC-CHARGER
# of Batteries Capacity:	2 (Batteries & Stove sold separately)
Specs:	110V, 1200W, 10A



IMPORTANT SAFETY GUIDELINES

This document contains essential safety and operational instructions.
Please read these instructions carefully and keep them for future reference.

SPECIFICATIONS

Battery Parameters	
Input Specs	100-240 VAC 50/60 Hz
Recommended Operating Environment	0~40°C (32 ~ 104°F)
Warranty	12 months

CHARGING INSTRUCTIONS

- Before charging, connect the battery to the charger first, and then plug in the AC power source.
- After charging is complete, disconnect the AC power source first, and then detach the charger from the battery.
- During charging, the LED indicator displays the following:

Indicator Light	Status
Solid Green Light	Battery not connected to the charger
Solid Red Light	Charging in progress
Solid Green Light	Charging complete
Flashing Red Light	Fraud alert

FRAUD ALERT

- Disconnect the AC power source, resolve any abnormal conditions, and reconnect the AC power source. This should restore normal operation.
- If the fault persists, please check the battery pack.

 
CLEANING

Use a dry cloth to clean the charger. Do not clean the charger with water.


FOLLOW STEPS BELOW TO CHARGE BATTERIES PROPERLY

The battery can be inserted into the charger station on either side. You can charge one battery or two batteries at the same time. Any charging position will be okay.

1

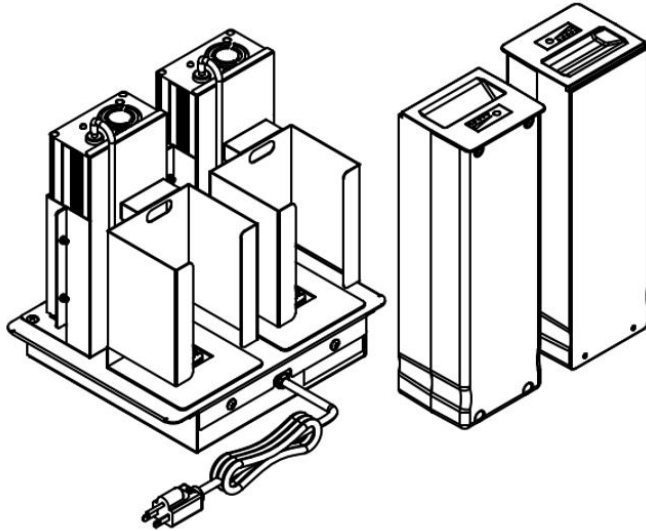


2

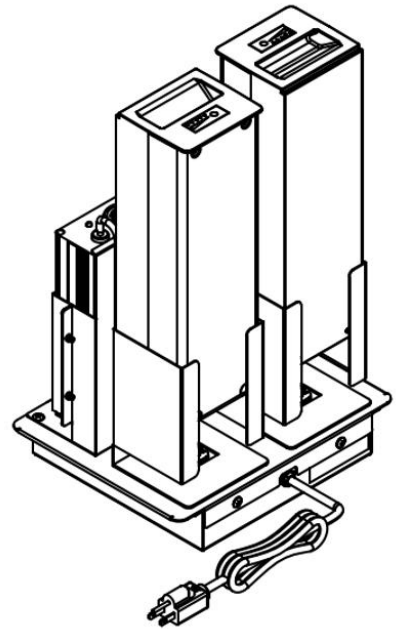 


When inserting the battery into the charger station, please ensure that the battery connector is aligned with the charger station's plug.

 3

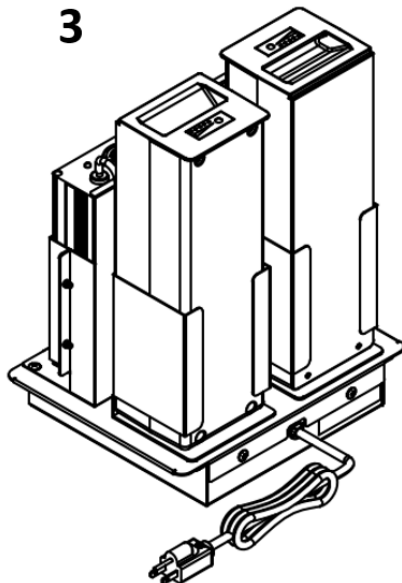

4

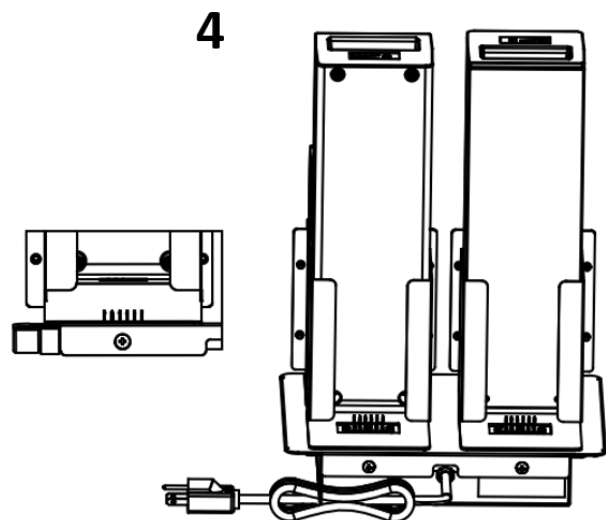 



PRECAUTIONS

1. Indoor Use Only: This charger is for indoor use only. Do not expose it to liquids, steam, or rain.
2. Battery Compatibility: This charger is designed exclusively for charging compatible lithium batteries. Do not use it with other battery types or combine it with other batteries. Such misuse may cause fire, explosion, electric leakage, or overheating.
3. Prohibited Environments: Do not use this charger in the following conditions:
 - Extremely hot or cold temperatures
 - Dusty or dirty environments
 - Excessively humid conditions
 - Unstable or vibrating locations
 - Areas with strong magnetic fields
 - Sandy environments
 - Direct sunlight
4. Ventilation During Charging: Ensure that both the battery and charger are placed in a well-ventilated area during charging.
5. If the battery does not charge immediately after use, allow it to cool down for a while, and it will begin charging automatically.
6. Mechanical Damage: Do not drop, throw, or subject the charger to mechanical impacts.
7. Power Cord and Plug: To avoid damage, do not pull on the cord to disconnect the charger. If the power cord or plug is damaged, do not use the charger and replace it immediately.
8. Flammable Surfaces: Do not use this charger on flammable surfaces (e.g., paper or textiles) or in flammable environments. The high temperatures generated during charging may pose a fire risk.
9. After Impact or Damage: If the charger has been severely impacted, dropped, or otherwise damaged, do not use it. Have it inspected and repaired by professional service personnel.
10. Disassembly Prohibited: Do not disassemble this charger. Repairs should only be performed by qualified professionals. Improper reassembly may lead to electric shock or fire.
11. Supervision and Restricted Use: This product is not intended for use by individuals with physical, sensory, or mental impairments, or those lacking experience and knowledge (including children), unless supervised or instructed by a responsible guardian. Guardians must ensure safe usage and prevent children from playing with the charger.