



[www.CarnivalKingSupplies.com](http://www.CarnivalKingSupplies.com)

# USER MANUAL



**COTTON CANDY MACHINE  
WITH CART**

Item # 382CCM21CT



08/2021



# COTTON CANDY MACHINE WITH CART MANUAL

## General Safety Precautions

1. This manual will outline safety warnings and precautions, operating, maintenance and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.
2. This machine must never be modified and should only be used for its intended purpose.
3. Always check that the cotton candy machine is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If it is not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
4. Before disconnecting from the power source, be sure that all switches have been turned OFF. To unplug the machine, firmly grasp the plug and remove from the outlet – never pull on the cord itself.
5. Ensure that the power outlet, plug and cord being used are in good, working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
6. If missing or broken components are found, leave the machine TURNED OFF. Do not attempt to use it. Contact a qualified service technician to make all repairs.
7. No one under 18 should operate this machine unsupervised.
8. Keep hands, foreign objects, and loose clothing away from the spinning head while in use.
9. Always use the machine in a clean and dry area.
10. Operate your machine only if it is clean (see Cleaning Instructions below).

## Assembly & Operating Instructions

1. Unpack box and remove all components from protective wrap.
2. Connect each of the side shelves to the square base of the unit. If looking directly at the side with the Carnival King design (front), the shelf with 3 holes for cones attaches to the left and the solid shelf attaches to the right.
3. Connect the 2 longest leg pieces to the bottom of the base directly under the solid shelf. The legs with wheels will be underneath the shelf with the 3 holes.
4. Connect the other 2 legs to the opposite side and attach each of the cross axles between the legs.
5. Connect the wheels to the shorter legs. Once connected, roll the cart a few times. You may loosen/tighten the wheels to ensure it rolls smoothly and stable.
6. Install the bowl on top of the base. Make sure the bowl is not in contact with the heating head. Place floss bubble shield (optional - sold separately) on top of the bowl.
7. Connect the power cord to the base and plug it into a grounded outlet.
8. Turn "ON" the motor switch. The switch will light up. While spinner head is turning, carefully fill spinner head with sugar (use one full scoop). Do not overfill.
9. Now turn the heat switch "ON". The switch will light up. Cotton candy will begin to spin around the bowl as the heating head warms. The initial cone will take 2-3 minutes.
10. As the cotton candy accumulates, it will build up and come out through the top of the spinner head. You will need to collect the cotton candy as it comes out of the top of the unit.
11. To make more cotton candy, turn heat switch "OFF" before refilling the spinner head. Repeat steps 9-11.
12. Allow the machine to cool down for 15-20 minutes after an hour of continuous use.



# COTTON CANDY MACHINE WITH CART MANUAL

## Cotton Candy Machine Specs

<b>Item#</b>	<b>382CCM21CT</b>
Overall Dimensions	35" x 20.5" x 35.75"
Bowl Dimensions	21" Diameter
Voltage	110V
Wattage	1050W
Yield	2 Cones/Minute
Certification	

## Cleaning and Maintenance

1. After use be sure to turn off and unplug the machine.
2. Allow all components to cool off to a temperature that is safe to touch.
3. Wipe down the spinning head with water, a mild soap such as 147SUNBRIGHT and a non-abrasive towel. Then wipe with clear water. Dry Completely.
4. Remove the four screws from the top of the spinning head and remove the bowl which holds the floss sugar.
5. Wires are now exposed. Cover the opening with a towel to prevent any outside contaminants.
6. It may be necessary after heavy use to first soak the bowl in hot water and mild soap prior to step 7.
7. Wipe down the bowl with water, a mild soap such as 147SUNBRIGHT and a non-abrasive towel. Rinse. Dry Completely.
8. After all parts are completely dry, reassemble the machine.

## Parts and Accessories

Part Name	Replacement Part Item #
Wheel Axel	382PCCMAXLE
13" Wheel	382PCCMWHEEL
Carbon Brush	382PCCMBRSH
Floss Heating Head	382PCCMHHEAD
Hi-Limit Thermostat	382PCCMTEMPL
Fuse- 15A, 250V	382PCCMFUSE
Floss Bowl Stabilizer Net and Clips	382CCMNET
Floss Bubble	382FB21

## Hardware Included

- (12) - 6 x 16mm Bolts
- (8) - 6 x 35mm Bolts
- (2) - M8 Covered Nuts



## Also available...

### Floss Bubble Shield (sold separately)

#382FB21

Floss bubbles help protect against airborne debris. Simply set on top of your 21" Carnival King Cotton Candy Machine and begin serving up delicious cones of cotton candy to your customers!

