



THE TIME &amp; TEMPERATURE COMPANY™


## Multi-Task Timer & Clock

Counts 24 hours by minutes &amp; seconds

### Features

- Dual function
- Memory
- Counts up & down
- Clock
- Stopwatch
- Loud and long alarm
- Stop and restart
- Lock
- Counts up after zero
- Food-safe ABS plastic
- Sliding mode switch
- International time
- 3-way mounting: pocket clip/magnet/stand
- Battery and instructions included

**Note:** Remove sticker from display before use.

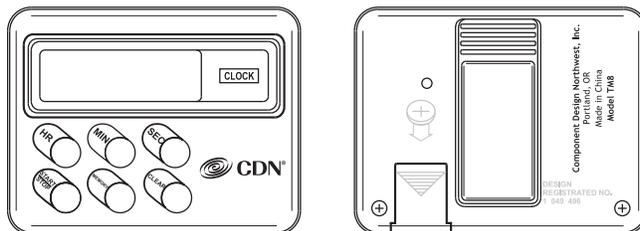

**Note:** In the following instructions, names of the control buttons are shown in CAPS. Function information that appears on the display is shown in **BOLD CAPS**.

### Battery Installation

Replace battery when LCD becomes dim or alarm level declines.

1. Remove battery cover on the back by sliding it in the direction of the arrow.
2. Install one LR44 battery, positive (+) side up. A brief alarm sounds.
3. Replace the battery cover until it clicks shut.

### Operating Instructions

#### A. Set Clock

1. Slide switch on the right side to **CLOCK** to select clock mode. **AM** or **PM** appears on the display in 12-hour time.
2. Press and hold the **CLEAR** button for 2 seconds to switch between 12-hour, AM/PM time, and 24-hour, international time.
3. Press the **HR MIN** and/or **SEC** buttons to enter the desired time. Press and hold for fast advance.

#### B. Count Down

1. Slide switch on the right side to **TIMER** to select the count down mode. **TIMER** appears on the display.
2. Press the **HR MIN** and/or **SEC** buttons to enter the desired time. Press and hold for fast advance.
 

**Note:** The timer retains any time showing on the display when the sliding mode switch is moved to another position.
3. Press the **MEMORY** button to enter the set time into memory. **MEMORY** appears on the display.
  - a. Press the **MEMORY** button to recall the set time.
  - b. Press the **MEMORY** button, then press the **CLEAR** button, to clear the set time from memory.
4. Press the **START/STOP** button to start counting down.

**Note:** **TIMER** flashes on the display during count down when in other modes.

5. Press the **START/STOP** button to interrupt the count. Press **START/STOP** again to resume the count.
6. The alarm sounds and **TIME'S UP** flashes on the display when the count reaches **0:0000**. The timer counts up the overtime since reaching **0:0000**. The maximum overtime is 10 hours.
7. The alarm and flashing stop automatically after 60 seconds while the count up continues. Press **START/STOP** to stop the alarm and the count up, and reset to **0:0000**.
8. Press **CLEAR** when timer is stopped to reset to **0:0000**.

## C. Count Up – Stopwatch

1. Slide switch on the right side to **COUNT UP** to select the count up mode. **COUNT UP** appears on the display.
2. Press the **START/STOP** button to start counting up.  
**Note:** **COUNT UP** flashes on the display during count up when in other modes.
3. Press the **START/STOP** button to interrupt the count. Press **START/STOP** again to resume the count.
4. Press **CLEAR** when timer is stopped to reset to **0:0000**.  
**Note:** The timer retains any time showing on the display when the sliding mode switch is moved to another position.

## Care of Your Product

- Avoid exposing your timer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Wipe clean with a damp cloth.

The information in this document has been reviewed and is believed to be accurate. However, neither the manufacturer nor its affiliates assume any responsibility for inaccuracies, errors or omissions that may be contained herein. In no event will the manufacturer or its affiliates be liable for direct, indirect, special, incidental or consequential damages arisen by using this product or resulting from any defect/omission in this document, even if advised of the possibility of such damages. The manufacturer and its affiliates reserve the right to make improvements or changes to this document and the products and services described at any time, without notice or obligation.



**5-Year Limited Warranty:** Any instrument that proves to be defective in material or workmanship within five years of original purchase will be repaired or replaced without charge upon receipt of the unit prepaid at: CDN, PO Box 10947, Portland, OR 97296-0947. This warranty does not cover damage in shipment or failure caused by tampering, obvious carelessness or abuse.



Component Design Northwest, Inc.  
PO Box 10947  
Portland, OR 97296-0947  
Tel 800 338-5594  
Fax 800 879-2364  
Web [www.cdn-timeandtemp.com](http://www.cdn-timeandtemp.com)

